	T .	
SYMPTOMS	CORRECTIVE ACTION	PARTIAL SERVICE PARTS
Poor flush.	A. Adjust tank water level to match the waterline.     B. Fully open water supply shut-off valve.     C. Clear obstruction in trapway, jet, or bowl rim holes.     D. Clear obstruction in soil pipe or vent pipe.	1057940  Valve Head Handle 83809  83143  Seal O-Ring  Trip Lever
2. No flush.	Reconnect the flapper chain to the trip lever or flush valve.     Adjust flapper chain assembly to remove excessive slack.	52156 Super Standard Super Standard Super Standard Super Standard Super Standard Super Sup
Fill valve turns on/off by itself without toilet being flushed, or runs allowing water to enter tank.	A. Adjust flapper chain for proper slack so flapper isn't held off flush valve seat.     Clean or replace flapper if flapper is worn, dirty, or misaligned with flush valve seat or flush valve seat is damaged. Replace flush valve seal or flush valve.     C. Remove tank and tighten flush valve nut if flush valve is leaking. Do not overtighten. If leakage continues, replace gasket.     D. Clean fill valve seat/seat washer of debris, or replace piston/seat washer assembly.     E. Replace fill valve if valve float sinks.     Adjust tank water level if too high.	51261 Clip 1004808 Flush Valve 85160 Flush Ball 51387 Washer 53154 Washer 51487
4. Long tank fill cycle.	Fully open water supply shut-off valve.     Clean fill valve inlet, valve head, or supply line. Flush lines.	42398 Vasher Washer Tank Lid Clip
5. Noisy tank fill cycle.	Partially close the water supply shut-off valve if water pressure to the toilet is too high. Check toilet performance following any such adjustment.     B. Remove dirt or obstruction in valve head, flush line.	42397 Hardware 50751 Nut **Finish/color code required.
IMPORTANT: Use only genuine Kohler parts as shown to avoid property damage.		
If unable to correct the problem, contact Customer Service:		1-800-4-KOHLER (USA), 1-800-964-5590 (Canada), or www.kohler.com.

1003575-6-**E** ©2006 Kohler Co.