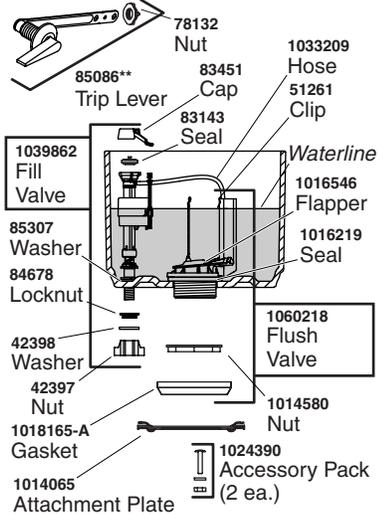


SYMPTOMS	CORRECTIVE ACTION	PARTIAL SERVICE PARTS
1. Poor flush.	A. Adjust tank water level to match the waterline. B. Fully open water supply shut-off valve. C. Clear obstruction in trapway, jet, or bowl rim holes. D. Clear obstruction in soil pipe or vent pipe.	 78132 Nut 85086** Trip Lever 83451 Cap 83143 Seal 1033209 Hose 51261 Clip 1039862 Fill Valve 85307 Washer 84678 Locknut 42398 Washer 42397 Nut 1018165-A Gasket 1014065 Attachment Plate 1060218 Flush Valve 1016546 Flapper 1016219 Seal 1014580 Nut 1024390 Accessory Pack (2 ea.)
2. No flush.	A. Reconnect the flapper chain to the trip lever or flush valve. B. Adjust flapper chain assembly to remove excess slack.	
3. Fill valve turns on/off by itself without toilet being flushed, or runs allowing water to enter tank.	A. Adjust flapper chain for proper slack so flapper is not held off flush valve seat. B. Clean or replace flapper if flapper is worn, dirty, or misaligned with flush valve seat or flush valve seat is damaged. Replace flush valve seal or flush valve. C. Remove tank and tighten flush valve nut if flush valve gasket is leaking. Do not overtighten. If leakage continues, replace gasket. D. Clean fill valve seat/seat washer of debris, or replace piston/seat washer assembly. E. Replace fill valve if valve float sinks. F. Adjust tank water level if too high.	
4. Long tank fill cycle.	A. Fully open water supply shut-off valve. B. Clean fill valve inlet, valve head, or supply line. Flush lines.	
5. Noisy tank fill cycle.	A. Partially close the water supply shut-off valve if water pressure to the toilet is too high. Check toilet performance following any such adjustment. B. Remove dirt or obstruction in valve head, flush line.	
NOTE: Use only genuine parts as shown to avoid property damage.		**Finish/color code required.
If unable to correct the problem, contact Customer Service: 1-800-4-KOHLER (USA), 1-800-964-5590 (Canada), or www.kohler.com.		