



REF #	PART #	NAME	NOTES
0	5H74997-8	Insulation (side panel)	
0	5H74997-5	Insulation (top, btm panels)	
0	5H74997-6	Insulation (top, btm panels)	
0	5H79961-2	Collector Box	
0	5H79689-2160	Ignition Cable	
0	5H75185-14	Silicon Tube 1/4" ID	
0	5H75002-7	High Limit Switch (surface mount)	
0	5H79794	Gasket (Power Exhauster)	
0	5H79747	Control Panel	
0	5H79689-160	Ignition cable	2 Stage
1	5H80047-1	Access Panel	
2	5H75015-2	Burner	
3	5H79924-1	Burner Box	

5	5H79806-1	Gasket (Collector Box)	
7	5H62892-45	Deflector Blade	
9	5H79802-1	Fan	
10	5H79743-5	Fan guard	
11	5H79925-1	Burner Bracket	
12	5H75002-4	Flame Rollout Switch	More common replacement part
14	5H75031	Flame Sensor	More common replacement part
15	5H79927-1	Front Panel	
16	5H79751	Gas Valve Natural Gas	1 Stage
16	5H79748	Gas Valve Natural Gas	2 Stage
16	5H79869	Gas Valve Propane Gas	1 Stage
16	5H79871	Gas Valve Propane Gas	2 Stage
17	3H37360-1005	Heat Exchanger Kit	More common replacement part
17	3H37360-2005	Heat Exchanger Kit	More common replacement part
19	5H75769-1	High Limit Switch (stalk mount)	
20	5H79928-1	Manifold	ASSY1/2"
21	9F30216	Motor (Fan)	More common replacement part
23	5H75026-42	Orifice Natural Gas	
23	5H75026-53	Orifice Propane (LP) Gas	
25	3H37362-2	Power Exhaust Assembly	
26	5H79441-9	Air Pressure Switch	More common replacement part
27	5H79922-1	Side Panel	
28	5H79804	Ignition Control	2 Stage
28	5H79749	Ignition Control	1 Stage
29	5H56761	Spring	
30	5H75029	Control Transformer	More common replacement part
31	5H79905	Unit Mounting Bracket	

37	5H79919-1	Bottom Panel	
38	5H79919-1	Rear Panel	
39	5H79920-1	Top Panel	
40	5H79636	Ignitor, Direct Spark	More common replacement part