



▲ ▼	PART # ▲ ▼	NAME ▲ ▼	NOTES ▲ ▼
0	5H56761	Spring	
0	9F10262	Motor(fan)	
0	5H75011	Burner Bracket	
0	5H75027	Control Panel	
0	5H75000	Nameplate	
0	5H75034-1	Wiring Diagram	Series 101 & 102
0	5H78166	Wiring Diagram	Series 103
0	5H75033	Wiring Label	Series 101 & 102
0	5H78165	Wiring Label	Series 103
0	5H74925	Installation Service Manual	
0	5H74999	Lighting Instruction English	
0	5H75183	Lighting Instructions - French	
0	5H75225	Owners Manual	
0	5H75224	Instruction Sheet	Series 101 & 102

1	5H77595	Access Panel	
2	5H75015-1	Burner	
3	5H75003	Burner Box	
5	5H74991	Collector Box	
7	5H62892-2	Deflector Blade	
8	5H75189	Exhaust Outlet	
9	5H75188-1	Fan	
10	5H79663-5	Fan Guard	
11	5H75212	Flame Rollout Switch Bracket	
12	5H75002-2	Flame Rollout Switch	
14	5H75031	Flame Sensor	
15	5H77593	Front Panel	
16	5H76382	Gas Valve (Natural)	Series 101,102,103
16	5H76383	Gas Valve (Propane)	Series 101,102,103
17	3H37360-1014	Heat Exchanger	
18	5H75032	Hot Surface Ignitor	
19	5H75769-1	High Limit Switch (Stalk Mount)	
20	5H79193	Manifold	
23	5H75026-49	Orifice - Natural Gas	More common replacement part
23	5H75026-56	Orifice - Propane Gas	More common replacement part
24	5H74982	Casing	
25	5H75038	Power Exhaust Assembly	
26	5H75030-3	Pressure Switch	
27	5H74988	Side Panel	
28	5H78126-1	Terminal Board	Series 103
29	3H36849-1	Time Delay Relay Replacement Kit	
30	5H75029	Control Transformer	
31	5H74990	Unit Mounting Bracket	