



HDS 45

REF #	PART #	NAME	NOTES
0	5H79689-2160	Ignition Cable	
0	5H74997-2	Insulation (side panel)	
0	5H74996-1	Gasket (Power Exhauster)	
0	5H74997-4	Insulation (Top, Bottom panels)	
0	5H79851-2	Collar	Inlet
0	5H79851-1	Collar	(Outlet)
0	5H79324	Gasket	(Inlet & Outlet Collars)
0	5H75185-140	Silicon Tube	1/4"ID
1	5H79043	Access Panel	
2	5H75015-1	Burner	
3	5H79614	Burner Box	
5	5H74995-1	Gasket (Collector Box)	
7	5H62892-2	Deflector Blade	

9	5H74973-1	Fan	
10	5H79663-5	Fan Guard	
11	5H79405	Burner Bracket	
12	5H75002-7	Flame Rollout Switch	More common replacement part
14	5H75031	Flame Sensor	More common replacement part
15	5H79045	Front Panel	
16	5H79751	Gas Valve Natural Gas	More common replacement part
16	5H79869	Gas Valve Propane Gas	More common replacement parts
17	3H37360-1007	Heat Exchanger Kit	Aluminized
17	3H37360-2007	Heat Exchanger Kit	Stainless Steel
19	5H75769-1	High Limit Switch (stalk mount)	
20	5H79194	Manifold	ASSY1/2"
21	9F10262	Motor(fan)	More common replacement part
23	5H75026-49	Orifice - Natural Gas	More common replacement part
23	5H75026-56	Orifice - Propane Gas	More common replacement part
24	5H80014-1	Casing	HDS
25	3H37362-1	Power Exhaust Assembly	
26	5H79441-2	Pressure Switch	More common replacement part
27	5H74988	Side Panel	
28	5H79749	Ignition Control	
29	5H56761	Spring	
30	5H75029	Control Transformer	
31	5H74990	Unit Mounting Bracket	
40	5H79636	Ignitor, Direct Spark	More common replacement part