


B-0107

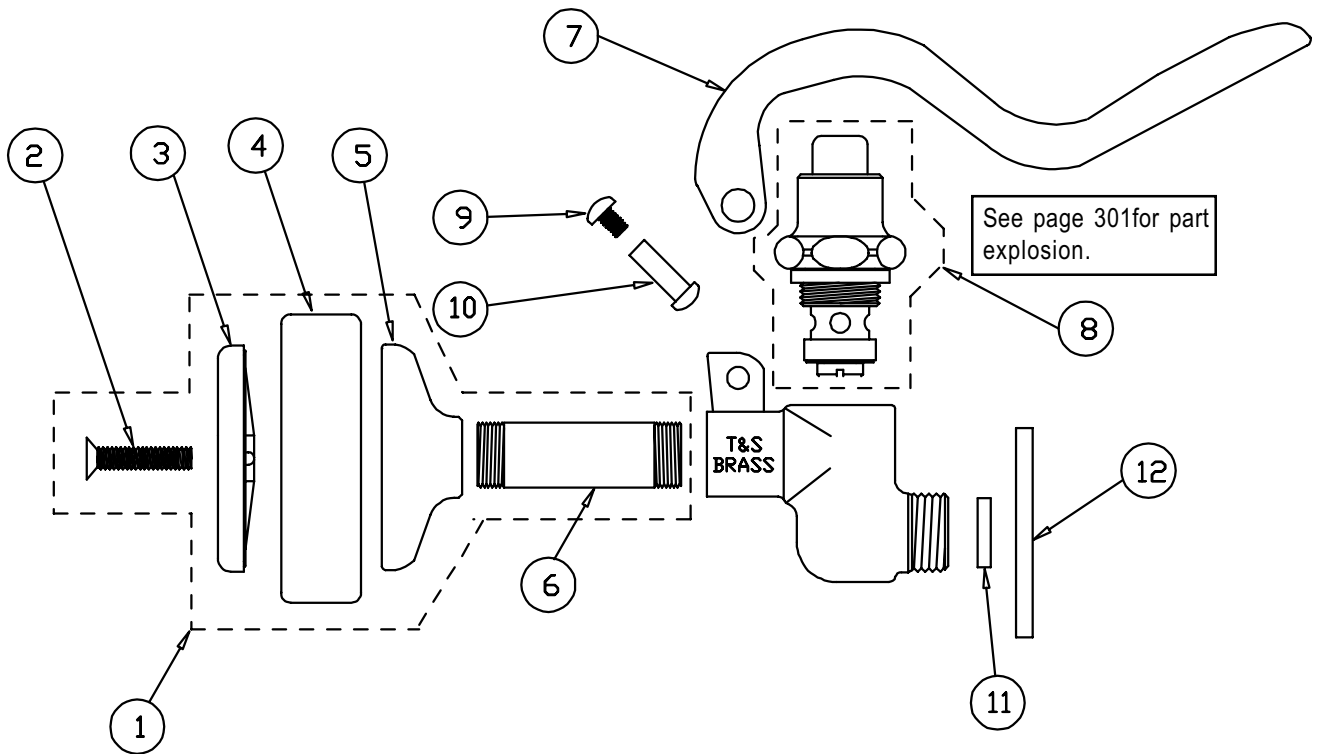

Spray Valve Assembly

1	Asm, Spray Head	002859-40
2	Screw, Spray Face	000913-45
3	Spray Face	001121-45
4	Ring, Rubber	007861-45
5	Spray, Cup	000019-40
6	Nipple	000694-20
7	Handle, Squeeze Valve	001120-45
8	Asm, Bonnet	002856-40
9	Screw, Handle	003199-45
10	Nut, Handle	003198-45
11	Washer	010476-45
12	Ring, Hold Down	000907-45

