Auto Dialer

Get Personal Notification

While You Are Away from Home

Sewage or Sump Failures


▶ Connect Auto Dialer to the Versa'larm™-Sump or Tank Alarms and get early warning of pump failure.

Water Flooding

▶ Connect the Auto Dialer to the Versa'larm™-Flood Alarm to get early warning and eliminate expensive, messy clean-ups.

Furnace Failures

- ▶ Get notification while you are away from home when your furnace fails.
- ▶ Frozen pipes can cause major water damage.

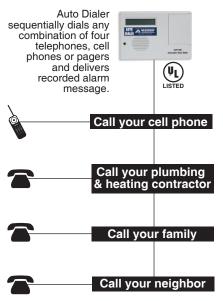

Features

- ▶ Non volatile memory for voice message and phone numbers
- Calls up to four phone numbers, any combination of telephones or pagers
- Sends (up to) 16 second voice message to telephones or numeric code to pagers
- ▶ Record your own message in any language
- ▶ Easily change message and phone numbers without programmer
- ▶ Voice chip technology (no tape required)

- Ability to program a pause and pound (#) tone in dialing sequence for pagers
- ▶ Returns to call unanswered numbers
- ▶ 2x16 character LCD window
- ▶ Internal playback speaker for voice message
- ▶ Programmable Exit and Entry delay
- ► Internal 9V battery back-up (Customer supplies battery)
- Works with PBX or regular phone systems
- ▶ Tone or pulse dialing

Specifications:

- ▶ Operating voltage: 9-12 VDC
- ▶ Operating temperature: 0-130 F
- ▶ Dimensions (inches): 6.0 x 4.0 x 1.5
- ▶ Mounting: Mounts on flat wall

Order Numbers

Part		BILLS AND SEC.	© © 0000000000000000000000000000000000
	Description	Auto Dialer	Furnace Fail
7006	Auto Dialer: 1 common message used for all sensors (Use with Versa'larm™ systems)	X	
7019	Auto Dialer: 2 different messages, one for water sensors and one for furnace fail (Use with Versa'larm TM systems)	Х	
Stand-Alone Furnace Fail System			
7030	Auto Dialer and Low Temperature Sensor-Furnace Fail System	X	X

L1018-Rev.B

