




# HD45

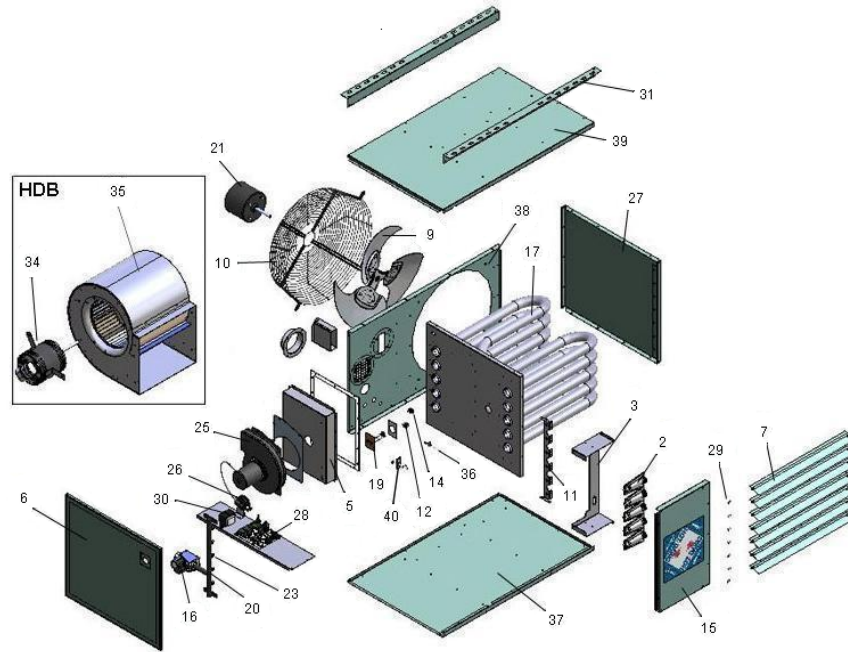

## HD45 Parts List

Ref	Part Number	Item	Description	Qty	Weight each
6	5H0775950001	48400	ACCESS PANEL	1	4
2	5H0750150001	48777	BURNER	1	1
3	5H0796140000	48792	BURNER BOX	1	1.1
5	5H0749950001	48773	GASKET (COLLECTOR BOX)	1	1
7	5H0628920053	64997	DEFLECTOR BLADE	1	1
9	5H0749730001	32250	FAN	1	2
10	5H0796630005	32256	FANGUARD	1	1.1
11	5H0750120000	32224	BURNER BRACKET	1	1
12	5H0750020004	53653	FLAME ROLLOUT SWITCH	1	1
14	5H0750310000	32242	FLAME SENSOR	1	1
15	5H0775930001	53730	FRONT PANEL (GREY/GREEN)	1	1.1
16	See Table		GAS VALVE	1	
17	See Table		HEAT EXCHANGER KIT	1	
19	3H0400780003	53658	HIGH LIMIT SWITCH (STALK MOUNT)	1	1
20	5H0791940000	48429	MANIFOLD ASSY 1/2"	1	2
21	9F0102620000	32254	MOTOR	1	5
23	See Table		ORIFICE SPUD	1	
24	5H0800130001	48817	CASING--HD	1	1.1



# HD45 Parts List

Ref	Part Number	Item	Description	Qty	Weight each
25	3H0373620001	56182	POWER EXHAUST ASSEMBLY	1	6
26	5H0750300003	32240	PRESSURE SWITCH	1	1
27	3H0384620010	65711	SIDE PANEL W/ HEAT SHEILD	1	5
28	5H0797490000	53794	IGNITION CONTROL	1	2
	5H0842290003	69230	3AMP FUSE	1	1
29	5H0862800000	59336	SPRING	1	1
30	5H0750290000	32237	CONTROL TRANSFORMER	1	2
31	5H0749900001	32189	UNIT MOUNTING BRACKET	1	3
34			NOT USED	1	
35			NOT USED	1	
37			NOT USED	1	
38			NOT USED	1	
39			NOT USED	1	
40	5H0796360000	48795	IGNITOR--DIRECT SPARK	1	2
-			NOT USED	1	
-	5H0796892160	48798	IGNITION CABLE	1	1
-			NOT USED	1	
-	5H0749960000	48825	GASKET (POWER EXHAUSTER)	1	1
-	5H0749970002	48827	INSULATION (SIDE PANEL)	1	1
-	5H0749970001	48826	INSULATION (TOP, BOTTOM PANELS)	1	2
-			NOT USED	1	
-	5H0749920000	32191	COLLECTOR BOX	1	1.1
-	5H0800270000	48819	CONTROL PANEL	1	
-	5H0751850140	53657	SILICON TUBE 1/4" ID	1	1

## Gas Control Parts HDB

Gas Type	Gas Valve	Orifice
Natural	5H0797510000	5H0750260049
Propane	5H0798690000	5H0750260056

## Heat Exchanger HDB

Exchanger Type	Heat Exchanger
Aluminized	3H0373601002
Stainless Steel	3H0373602002



# HD45

## Parts List