



REF #	PART #	NAME	NOTES
0	5H79689-2160	Ignition Cable	
0	5H74997-2	Insulation (side panel)	
0	5H74996-1	Gasket (Power Exhauster)	
0	5H74997-4	Insulation (Top, Bottom panels)	
0	5H79851-2	Collar	Inlet
0	5H79851-1	Collar	(Outlet)
0	5H79324	Gasket	(Inlet & Outlet Collars)
0	5H75185-140	Silicon Tube	1/4"ID
1	5H79043	Access Panel	
2	5H75015-1	Burner	
3	5H79613	Burner Box	
5	5H74995-1	Gasket (Collector Box)	
7	5H62892-2	Deflector Blade	
9	5H75188-1	Fan	

10	5H79663-5	<b>Fan Guard</b>	
11	5H79404	<b>Burner Bracket</b>	
12	5H75002-7	<b>Flame Rollout Switch</b>	More common replacement part
14	5H75031	<b>Flame Sensor</b>	More common replacement part
15	5H79045	<b>Front Panel</b>	
16	5H79751	<b>Gas Valve Natural Gas</b>	More common replacement part
16	5H79869	<b>Gas Valve Propane Gas</b>	More common replacement part
17	3H37360-1006	<b>Heat Exchanger Kit</b>	More common replacement part
17	3H37360-2006	<b>Heat Exchanger Kit</b>	More common replacement part
19	5H75769-1	<b>High Limit Switch (stalk mount)</b>	
20	5H79193	<b>Manifold</b>	
21	9F10262	<b>Motor(fan)</b>	More common replacement part
23	5H75026-49	<b>Orifice - Natural Gas</b>	1 Stage,2 Stage
23	5H75026-56	<b>Orifice - Propane Gas</b>	1 Stage,2 Stage
24	5H80014-1	<b>Casing</b>	HDS
25	3H37362-1	<b>Power Exhaust Assembly</b>	
26	5H79441-1	<b>Air Pressure Switch</b>	More common replacement part
27	5H74988	<b>Side Panel</b>	
28	5H79749	<b>Ignition Control</b>	
29	5H56761	<b>Spring</b>	
30	5H75029	<b>Control Transformer</b>	More common replacement part
31	5H74990	<b>Unit Mounting Bracket</b>	
40	5H79636	<b>Ignitor, Direct Spark</b>	More common replacement part