



REF #	PART #	NAME	NOTES
0	5H79689-2160	Ignition Cable	
0	5H74997-3	Insulation (side panel)	
0	5H74996-1	Gasket (Power Exhauster)	
0	5H74997-4	Insulation (Top, Bottom panels)	
0	5H79851-4	Collar (Inlet)	
0	5H79851-3	Collar (Outlet)	
0	5H79325	Gasket	(Inlet & Outlet Collars)
0	5H75185-70	Silicon Tube	1/4"ID
1	5H79084	Access Panel	
2	5H75015-1	Burner	
3	5H79616	Burner Box	
5	5H74995-2	Gasket (Collector Box)	
7	5H62892-2	Deflector Blade	
9	5H73835-1	Fan	
10	5H79663-5	Fan Guard	

11	5H79407	Burner Bracket	
12	5H75002-7	Flame Rollout Switch	More common replacement part
14	5H75031	Flame Sensor	More common replacement part
15	5H79085	Front Panel	
16	5H79751	Gas Valve Natural Gas	1 Stage
16	5H79748	Gas Valve Natural Gas	2 Stage
16	5H79869	Gas Valve Propane Gas	1 Stage
16	5H79871	Gas Valve Propane Gas	2 Stage
17	3H37360-1009	Heat Exchanger Kit	Aluminized
17	3H37360-2009	Heat Exchanger Kit	Stainless Steel
19	5H75769-2	High Limit Switch (stalk mount)	
20	5H79196	Manifold	ASSY1/2"
21	9F30213	Motor (Fan)	More common replacement part
23	5H75026-49	Orifice - Natural Gas	More common replacement part
23	5H75026-56	Orifice - Propane Gas	More common replacement part
24	5H80014-2	Casing	HDS
25	3H37362-1	Power Exhaust Assembly	
26	5H79441-3	Air Pressure Switch	1 Stage,2 Stage
27	5H74989	Side Panel	
28	5H79804	Ignition Control	2 Stage
28	5H79749	Ignition Control	1 Stage
29	5H56761	Spring	
30	5H75029	Control Transformer	
31	5H74990	Unit Mounting Bracket	
34	9F33219	Motor for Blower Units	
35	5H79991	Blower Assembly	
40	5H79636	Ignitor, Direct Spark	More common replacement part