



Ultra High Efficiency Water Heaters

SERVICE MANUAL

Troubleshooting Guide
and Instructions for Service

(To be performed ONLY by
qualified service providers)



Models Covered by This Manual:

For The Bradford White
eF Series® Ultra High Efficiency
Models:

EFR160T120*(EN,SX)
EF60T125(E)*(N,X)(A)(2)
EF60T150(E)*(N,X)(A)(2)
EF60T199(E)*(N,X)(A)(2)
EF100T150(E)*(N,X)(A)(2)
EF100T199(E)*(N,X)(A)(2)
EF100T250(E)*(N,X)(A)(2)
EF100T300(E)*(N,X)(A)(2)
EF100T399(E)*(N,X)(A)(2)
(*) Denotes Warranty Years





Ultra High Efficiency Water Heaters

Table of Contents

| | <u>Page</u> | <u>eF Service Procedure</u> |
|---|-------------|-----------------------------|
| Introduction | 3 | --- |
| How to use this manual | 4 | --- |
| Tool required for service | 4 | --- |
| Features | 5 | --- |
| Specifications | 6 | --- |
| Sequence of Operation | 10 | --- |
| Troubleshooting | 16 | --- |
| Thermostat Circuit, Testing & Replacement | 35 | I |
| Combustion System Testing and Replacement | 43 | II |
| Burner Tube Inspection & Replacement | 49 | III |
| Gas Valve Replacement | 51 | IV |
| Blower Testing and Replacement | 52 | V |
| Exhaust Pressure Switch Testing and Replacement | 54 | VI |
| Hot Surface Igniter Testing and Replacement | 60 | VII |
| Flame Sensor Testing and Replacement | 62 | VIII |
| Spark Rod Gap Adjustment and Replacement | 64 | IX |
| Ignition Module/Control Board Replacement | 66 | X |
| Transformer Replacement | 68 | XI |
| Intake Pressure Testing and Replacement | 69 | XII |
| Vent Safety Switch Testing and Replacement | 71 | XIII |
| Anode & Flue Baffle Inspection and Replacement | 73 | XIV |
| Installation Check List | 78 | --- |
| Heater Service Report | 79 | --- |
| Parts List | 80 | --- |
| Glossary of Terms | 89 | --- |



Introduction

The Bradford White eF Series® Ultra High Efficiency Water Heater is designed to deliver a remarkable thermal efficiency rating in a quiet running unit with venting options that allow for installation flexibility. Several technologically advanced design features are incorporated in the design that will require additional knowledge on the part of the qualified service provider. The information in this manual will instruct service and maintenance professionals on the function, proper diagnosis and repair of The Bradford White eF Series® Ultra High Efficiency Water Heater.

The Bradford White eF Series® Ultra High Efficiency Water Heater uses a low Nox premix power burner located at the top of the water heater to direct a turbulent flame down into a submerged combustion chamber. This turbulence causes a thorough mixing of gas and air for optimum combustion. The combustion gases then travel through a three pass flue system keeping the gases moving at a high velocity. The combination of high turbulence and velocity results in an optimum transfer of heat from the flue gases into the water.

Burner operation is controlled using an electronic ignition module. The module monitors the status of the electronic thermostat, vent temperature limit switch, vent system pressure switches and a flame sensor to control output voltage to blower motor, hot surface igniter/spark rod and gas valve. The module contains programming which determines the sequence of operation and timings for purge periods, trial for ignition, flame sensing and lockout. The module will also provide diagnostic information to help in determining the cause of system lockouts.

The contents in this manual are detailed informational tools to assist in the proper diagnosis of the eF Series® Ultra High Efficiency Water Heater operational faults. Please read this service manual completely and provide as much information regarding the eF Series® Ultra High Efficiency Water Heater operation and installation specific concerns.



How to Use This Manual

It is intended for this manual to be used by qualified service personal for the primary purpose of troubleshooting analysis and repair of the Bradford White eF Series® Ultra High Efficiency Water Heater. Understanding the sequence of operation section of this manual will contribute greatly to troubleshooting this product.

An "Installation Check List" is shown towards the end of this manual. Compare the installation against the installation check list to confirm all requirements are met.

An "eF Service Report" is shown towards the end of this manual. Completing this form will assist in the troubleshooting efforts. Should you need to call for technical support, Please provide the information shown on this form to the support technician to insure accurate troubleshooting.

Troubleshooting begins with "System Observation" to determine failure mode as indicated by the LED status of the ignition module. Troubleshooting continues with "Failure Modes and Probable cause" directing the service provider to a series of test procedures to determine root cause of failure. Component replacement procedures directly follow the test procedures for a given component.

In some difficult to diagnose conditions, it may be necessary to isolate the heater from the vent system to determine root cause.

Contact Technical support immediately if diagnosis is not determined using the methods described in this service manual.

Tools Required for Service

- Manometer: Two types available, a liquid "U" tube type or a digital (magna-helic) type. This device is used to measure gas and/or air pressures and vacuum.
- Multi-Meter: A digital type is strongly recommended. This device is used to measure electrical values. The meter you select must have the capability to measure volts AC, volts DC, Amps, micro-amps and ohms.
- Thermometer: Used to measure water temperature. An accurate thermometer is recommended.
- Water Pressure Gage: Used to measure water supply pressure. Also used to determine tank pressure by adapting to the drain valve of the heater.
- Jumper Leads: A length of wire (12" min.) with alligator clip at both ends.
- Various Hand Tools: Pipe wrench, channel locks, open end wrench set, 12" crescent wrench, Allen wrench set, torx bit set, screw drivers (common & phillips), long reach (12") magnetic tip phillips head screw driver #2 tip, 1/4" nut driver, pliers (common & needle nose), socket set including a 1-1/16 deep well socket, wire cutters, wire strippers, wire crimpers, torpedo level, small shop vac, step ladder, and flashlight.



Features

Features of Honeywell Integrated Control System

Serial Numbers including and AFTER GB13006174 and ALL EFR models


- Attractive digital water heater display on control panel for setting and displaying the temperature setpoint. Pressing temperature UP and DOWN buttons changes the temperature setpoint. Same water heater display used on all models. Temperature format may be displayed in °F or °C.
- Single control board with plug in wiring controls temperature, ignition, and blower operation.
- Reduced number of parts for servicing and wiring.
- Plug in wiring reduces chance of miswiring.
- Burner ignition with direct spark ignition - A high voltage spark jumps from the spark rod to the burner surface to ignite the gas. Eliminates burned out hot surface igniter replacements.
- Water heater display will show diagnostic codes in the event the water heater needs servicing. Aids in diagnosing and servicing the water heater.
- Water heater display can show previous error code history to further aid in servicing the water heater.

NOTICE:

THE EF100T399 MODEL SERIES DO NOT USE THE HONEYWELL INTEGRATED CONTROL SYSTEM. THESE MODELS USE THE UT ELECTRONICS CONTROL MODULE WITH HOT SURFACE IGNITION.



Specifications

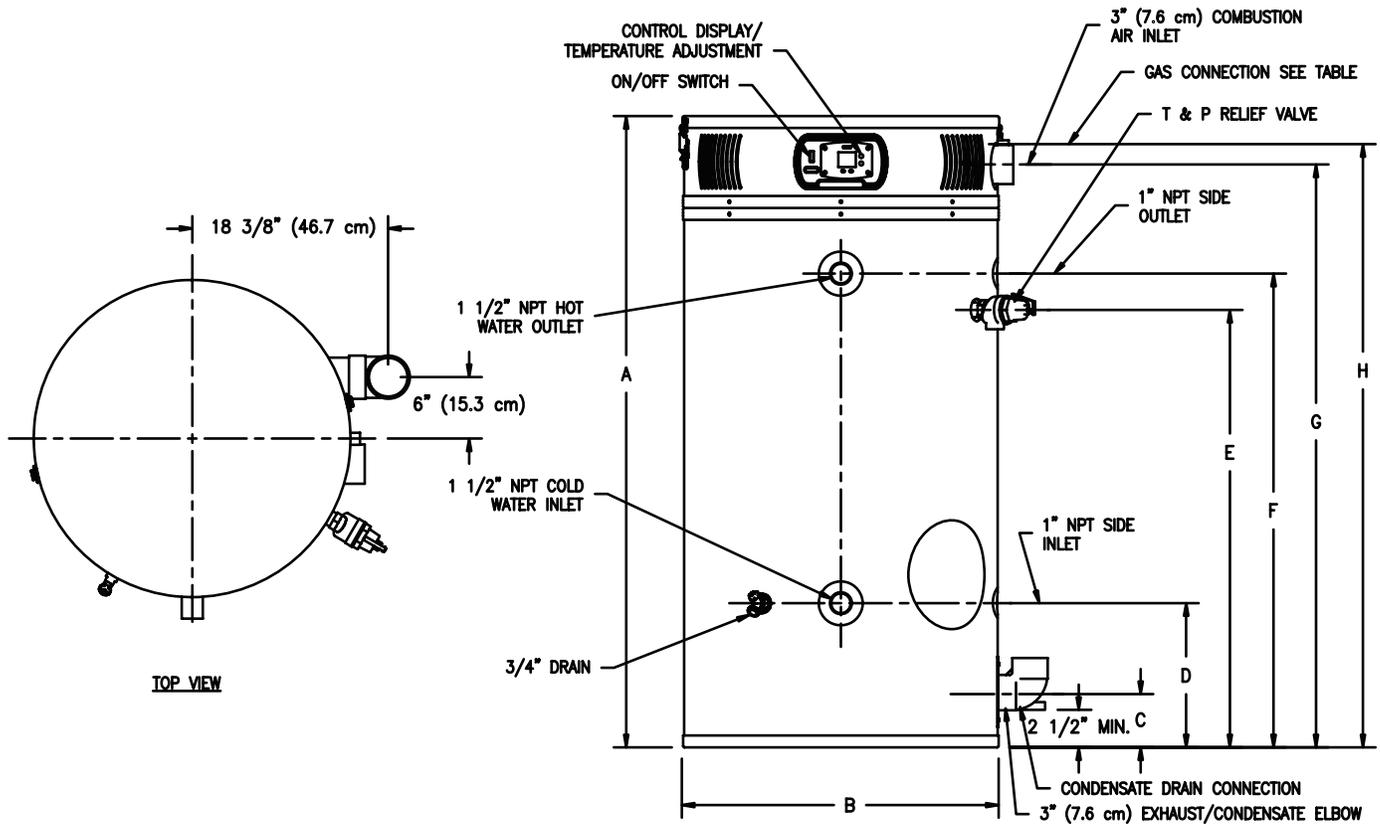

| Model No | Input Rate BTU/h | 1 st Hr Del Gal @ 100°F Rise | Recovery GPH at Degree Rise | | | Stg Cap U.S. Gal | Therm Eff % | DIMENSIONS (INCHES) | | | | | | | | | | | | | Shpg Wt (lbs) |
|---------------|---------------------|---|--------------------------------|-------|-------|---------------------------|-------------------|---------------------|----------|----------------------------------|--|--|---|-------------------------------|----------------------------|-----------------------------|---------------------------------|-----------------------------|-------------------------------|-----|---------------------|
| | | | 40°F | 100°F | 140°F | | | A Ht | B Dia | C Flr to Vent Outlet | D Flr to Inlet Wtr Conn | E Flr to T&P Valve Conn | F Flr To Outlet Wtr Conn | G Flr. To Air Intake | H Flr to Gas Conn | Front Wtr Conn Dia | Space Heating Conn Dia | Gas Conn Dia (NPT) | T&P Valve Open (NPT) | | |
| EFR-1-60T-120 | 120,000 | 180 | 345 | 138 | 99 | 60 | 95.0 | 57 | 28 1/4 | 5 | 13 | 40 | 42 1/4 | 52 1/2 | 53 1/2 | 1 | 1 | 3/4 | 3/4 | 570 | |
| EF60T125 | 125,000 | 187 | 363.6 | 145.5 | 103.9 | 60 | 96.0 | 57 | 28 1/4 | 5 | 13 | 40 | 42 1/4 | 52 1/2 | 53 1/2 | 1 1/2 | 1 | 3/4 | 3/4 | 570 | |
| EF60T150 | 150,000 | 211 | 422.7 | 169.1 | 120.8 | 60 | 93.0 | 57 | 28 1/4 | 5 | 13 | 40 | 42 1/4 | 52 1/2 | 53 1/2 | 1 1/2 | 1 | 3/4 | 3/4 | 570 | |
| EF60T199 | 199,999 | 265 | 557.6 | 223 | 158 | 60 | 92.0 | 57 | 28 1/4 | 5 | 13 | 40 | 42 1/4 | 52 1/2 | 53 1/2 | 1 1/2 | 1 | 3/4 | 3/4 | 570 | |
| EF100T150 | 150,000 | 250 | 450.5 | 180.2 | 129 | 100 | 99.1 | 77 5/8 | 28 1/4 | 5 | 13 | 60 | 62 1/4 | 73 1/8 | 74 3/4 | 1 1/2 | 1 | 3/4 | 3/4 | 900 | |
| EF100T199 | 199,999 | 309 | 597 | 238.8 | 171 | 100 | 98.5 | 77 5/8 | 28 1/4 | 5 | 13 | 60 | 62 1/4 | 73 1/8 | 74 3/4 | 1 1/2 | 1 | 3/4 | 3/4 | 900 | |
| EF100T250 | 250,000 | 364 | 734.8 | 293.9 | 210 | 100 | 97.0 | 77 5/8 | 28 1/4 | 5 | 13 | 60 | 62 1/4 | 73 1/8 | 74 3/4 | 1 1/2 | 1 | 3/4 | 3/4 | 900 | |
| EF100T300 | 300,000 | 405 | 836.4 | 334.5 | 239 | 100 | 92.0 | 77 5/8 | 28 1/4 | 5 | 13 | 60 | 62 1/4 | 73 1/8 | 74 3/4 | 1 1/2 | 1 | 3/4 | 3/4 | 900 | |
| EF100T399 | 399,999 | 521 | 1,127 | 451 | 322 | 100 | 93.0 | 77 5/8 | 28 1/4 | 5 | 13 | 60 | 62 1/4 | 73 1/8 | 73 1/4 | 1 1/2 | 1 | 1 | 1 | 950 | |



Specifications

Hot Surface Ignition System

| | |
|--|--|
| Power supply | Dedicated 120 VAC, 60 Hz, 15A, GFI |
| Gas Supply | Minimum 1" NPT for EF100T399, all others ¾" NPT (schedule 40 black iron pipe recommended) |
| Approved Gas Type | Natural or Propane. Unit must match gas type supplied. |
| Gas Pressure (Nat & L.P.) | 14.0" W.C. maximum static, 4.5" W.C. minimum running (recommend 7.0" W.C. min running) |
| Venting System | Power vent, balanced direct vent or unbalanced direct vent. See vent tables on page 7 |
| Approved Vent Materials | PVC or CPVC |
| Minimum Clearance for Servicing | 18" from top, 24" from front, 4" sides and rear. |
| Maximum Water Supply Pressure | 150 PSI |
| Thermostat Sensor | 11,900 Ohms @ 70°F, ECO opens @ 201°F Max., ECO close @ 100°F Min. |
| Temperature Dial | Min. set point 5400-6600 ohms, Max set point 0-50 ohms. |
| Thermostat Board | Max temp 180°F, Min temp 91°F, 24VAC, 60Hz max. |
| Ignition Module | See "Sequence of Operation, for models starting with CF serial and later" |
| Transformer | 120VAC primary, 24VAC secondary, 40VA. |
| Hot Surface Igniter | 120VAC, 30-120 ohms @ room temperature. |
| Flame Sensor Output | Minimum 1 micro amp, Typical range 4 to 7 micro amps. |
| Gas Valve | Negative regulation, 24 VAC, ½" PSI max., 4.5" W.C. Minimum running inlet. |
| Vent Safety Switch | Normally closed, opens @ 350°F, manual reset. |
| Intake Pressure Switch "CF" serial number or later | Not required. |
| Intake Pressure Switch serial numbers prior to "CF" | 24VAC, normally closed, opens on vacuum increase @ -1.20 W.C. |
| Blocked Vent Pressure Switch "CF" serial number or later | 24VAC, normally closed, opens when pressure increases to +2.70 W.C. |
| Exhaust pressure switch serial numbers prior to "CF" | 24VAC, normally open, closes on pressure increase as follows Note 1: +2.58" W.C. EF(60,100)T199 +1.50" W.C. EF100T150 (see note 2) +1.22" W.C. EF60T150, EF100T250 +2.08" W.C. EF60T125 +0.55" W.C. EF100T300 (see note 3) Note 2: +5.6" W.C. on serials prior to AH5039107 Note 3: +0.8" W.C. on serials prior to AK5288269 |
| Blower | 120VAC, 60Hz, .6-1 amps, 6400 RPM. |
| Combustion Levels | CO2: 10-11%, CO: less then 0.04 percent (400 PPM) air free |



Specifications

Honeywell Integrated Control System

Serial Numbers including and AFTER GB13006174 and ALL EFR models

| | |
|---------------------------------|---|
| Power supply | Dedicated 120 VAC, 60 Hz, 15A |
| Gas Supply | Minimum 3/4" NPT (schedule 40 black iron pipe recommended) |
| Approved Gas Type | Natural or Propane. Unit must match gas type supplied. |
| Gas Pressure (Nat & L.P.) | 14.0" W.C. maximum static, 4.5" W.C. minimum running (recommend 7.0" W.C. min running) |
| Venting System | Power vent, balanced direct vent or unbalanced direct vent. See vent tables on page 7 |
| Approved Vent Materials | PVC or CPVC |
| Minimum Clearance for Servicing | 18" from top, 24" from front, 4" sides and rear. |
| Maximum Water Supply Pressure | 150 PSI |
| Thermostat Sensor | 11,900 Ohms @ 70°F, ECO opens @ 207°F Max., ECO close @ 120°F Min. Redundant sensor for ECO. Sensor inside well for easy replacement of sensor. |
| Control Display | Digital display, 24 volts. Temperature Range: 70-180 deg. F. Used to set tank temperature (deg. F or deg. C), show operating status, Display error codes, error code history, limit maximum setpoint temperature. |
| Control Board | Operates from 24 volt from transformer. Controls tank temperature, ignition functions, combustion blower. See ignition timings in sequence of operation for Integrated Control. |
| Transformer | 120VAC primary, 24VAC secondary, 40VA. |
| Spark Rod Igniter | 0.22" nominal gap to the burner surface. |
| Flame Sensor Output | Minimum 1 micro amp, Typical range 5 to 30 micro amps. |
| Gas Valve | Negative regulation, 24 VAC, 1/2" PSI max., 4.5" W.C. Minimum running inlet. |
| Vent Safety Switch | Normally closed, opens @ 350°F, manual reset. |
| Blocked Vent Pressure Switch | 24VAC, normally closed, opens when pressure increases to +2.70 W.C. |
| Blower | 120VAC, 60Hz, .6-1 amps, 6400 RPM. |
| Combustion Levels | CO2: 10-11%, CO: less then 0.04 percent (400 PPM) air free |

NOTICE:
THE EF100T399 MODEL SERIES DO NOT USE THE HONEYWELL INTEGRATED CONTROL SYSTEM. THESE MODELS USE THE UT ELECTRONICS CONTROL MODULE WITH HOT SURFACE IGNITION.



Vent Tables

| <u>Balanced Direct Vent Systems</u> <u>PVC, CPVC</u> | | | |
|---|-----------|-----------|-----------|
| Total length of intake piping and exhaust piping added together must not exceed "Maximum Combined Length" Shown below | | | |
| <u>Maximum Combined Length (feet)</u> | | | |
| <u>Model Number</u> | 2" | 3" | 4" |
| <u>EFR-1-60T120</u> | 60' | 120' | 170' |
| <u>EF60T125, EF100T150</u> | 30' | 120' | 170' |
| <u>EF60T150, EF100T199</u> | 30' | 100' | 150' |
| <u>EF60T199</u> | 30' | 80' | 130' |
| <u>EF100T250</u> | N/A | 80' | 130' |
| <u>EF100T300</u> | N/A | 60' | 110' |
| <u>EF100T399</u> | N/A | 50' | 100' |

| <u>Power Vented Systems</u> <u>PVC, CPVC</u> | | | |
|--|-----------|-----------|-----------|
| Total length of exhaust piping must not exceed "Maximum Vent Length" Shown below | | | |
| <u>Maximum Vent Length (feet)</u> | | | |
| <u>Model Number</u> | 2" | 3" | 4" |
| <u>EFR-1-60T120</u> | 60' | 120' | 170' |
| <u>EF60T125, EF100T150</u> | 30' | 120' | 170' |
| <u>EF60T150, EF100T199</u> | 30' | 100' | 150' |
| <u>EF60T199</u> | 30' | 80' | 130' |
| <u>EF100T250</u> | N/A | 80' | 130' |
| <u>EF100T300</u> | N/A | 60' | 110' |
| <u>EF100T399</u> | N/A | 50' | 100' |

Unbalanced Direct Vent Systems
Air intake **CAN NOT** exceed exhaust by more than 30 feet

WARNING! The EF100T250 and EF100T300 models are not approved for 2 inch diameter vent pipe. Venting with 2 inch pipe on these models may result in damage to the water heater or cause an unsafe condition. DO NOT use 2 inch Vent or Air Intake Pipe on EF100T250/300 models.

Notes:

- 1) Multiply the total number of 90° elbows (intake and exhaust) by 5 feet. Do not include the termination fittings or 3" condensate elbow.
- 2) Multiply the total number of 45° elbows (intake and exhaust) by 2 ½ feet.
- 3) Add this to the total length of straight pipe - intake and exhaust.
- 4) The sum total of all elbows and straight pipe - intake and exhaust must not exceed maximum lengths from tables above.

Example: EF100T199

A 3" Balanced Direct vent system has 30 feet of straight exhaust pipe and 30 feet of straight intake pipe. It has 3- 90° elbows in the exhaust and 3- 90° elbows in the intake. It has 1- 45° elbow in the exhaust and 1- 45° elbow in the intake.

Therefore:

6- 90° elbows x 5 feet = 30 feet.

2- 45° elbows x 2½ feet = 5 feet.

60 feet of straight pipe + 30 feet + 5 feet = 95 feet.

System is within "Maximum Combined Length" from table above.



Sequence of Operation

For models prior to CF serial numbers

For models prior to CF serial numbers

- 1 Thermostat calls for heat.
 - Prior to energizing blower, ignition module checks safety circuits for normal switch positions:
 - a) Vent temp switch normally closed.
 - b) Intake pressure switch normally closed.
 - c) Exhaust pressure switch normally open.

 - If the vent temp switch is open, the control waits **indefinitely** for temp switch to close (green light stays on).

 - If the exhaust pressure switch contacts are closed (not in normal position), the ignition module will wait 45 seconds for pressure switch contact to open before energizing blower. If after 45 seconds and pressure switch contacts do not open, the ignition module locks out with the PURGE light flashing indicating pressure switch fault.
- 2 Blower energizes.
- 3 Pressure switch proves blower/vent system operation.
 - If the N.O. contacts of the exhaust pressure switch do not close within 5 minutes of the blower being on, the control locks out with the PURGE light flashing indicating pressure switch fault.
- 4 Blower pre-purge period (5 seconds) indicated by the PURGE LED on the module.
- 5 Igniter warm up (18 seconds), indicated by the IGNITER LED on the module.
- 6 Trial for ignition (4 seconds, three trials).
 - a) Flame establishing period (2.5 seconds) gas valve and igniter on, indicated by the IGNITER and VALVE LED on the module.
 - b) Burner on, flame proving period (1.5 seconds, looking for minimum of 1 micro amps), indicated by the FLAME & VALVE LED on the module.
- 7 Steady state operation.
 - Ignition module monitors:
 - Thermostat circuit.
 - When thermostat opens, gas valve is shut down and post purge begins.
 - Safety circuit.
 - If vent temp switch opens, gas valve is shut down, system will post purge and wait for switch to close before attempting re-ignition.
 - If either pressure switch opens, Gas valve is shut down, Blower is shut down for 30 seconds after which blower is re-energized and system attempts re-ignition starting at pressure switch proving mode.
 - Flame sensor circuit.
 - If flame is lost, gas valve is shut down, system will post purge and system attempts re-ignition starting at pressure switch proving mode.
- 8 Thermostat satisfies.
- 9 Burner off.
- 10 Blower post purge (15 seconds).



Sequence of Operation

For models prior to CF serial numbers

For models prior to CF serial numbers

Lockout Conditions

If normally closed pressure switch contacts open during burner operation, gas valve closes, burner shuts off. Blower restarts after 30 seconds and runs 5 minutes to wait for pressure switch to close. If not, locks out.

The system will go into lock out mode for the following reasons:

- Pressure switches stuck open or closed.
 - a) Check for exhaust or intake obstructions.
 - b) Check for compliance with vent tables.
 - c) Check for evidence of moisture or condensate present in pressure switch tubing or pressure switch.

- No ignition after 3 attempts.
 - a) Check gas pressures.
 - b) Igniter resistance too high (lower resistance preferred <150 Ohms).
 - c) Check venturi screw adjustment (6 1/2 turns from bottom)
 - d) Flame sense micro amp not present (1 to 5 micro amps required).

Lock out reset is accomplished by shutting OFF the line voltage to the system or opening the 24V thermostat circuit for at least 2 seconds.

System will automatically reset lockout after 1 hour of continuous call for heat from the thermostat. Three ignition trials will be attempted each hour until the thermostat is satisfied.

Ignition Module Specifications

Control Functions:


- Ignition & heating functions in response to thermostat.
- Hot surface ignition using a microprocessor to control timing, flame sensing using flame rectification & ignition retries.
- Monitoring of system pressure switches and limit switches.
- Control of gas valve, inducer motor, and hot surface igniter element based on thermostat demand and status of safety inputs.
- Diagnostic indicators to provide information on power to control and control status.
- Non-interchangeable polarized plug-in connectors for all interconnections.

Control Inputs:

- Thermostat call for heat.
- Limit Switch Circuit (normally closed)
- Pressure Switch Circuit (normally open)
- Flame sensing.
- Low voltage supply.
- Line voltage supply.


Control Outputs:

- Inducer motor
- Hot surface igniter
- Gas valve
- Status indicator LEDs
- Power - Green
- Purge - Red
- Igniter - Red
- Valve - Red
- Flame - Red

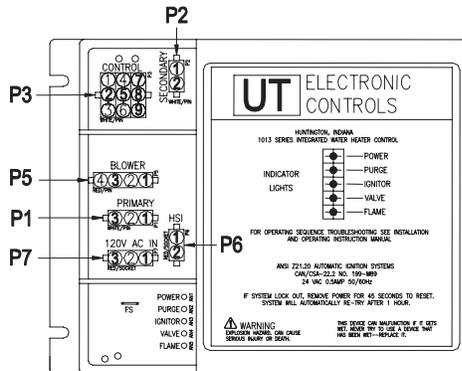

IGNITION MODULE

WIRING DIAGRAM

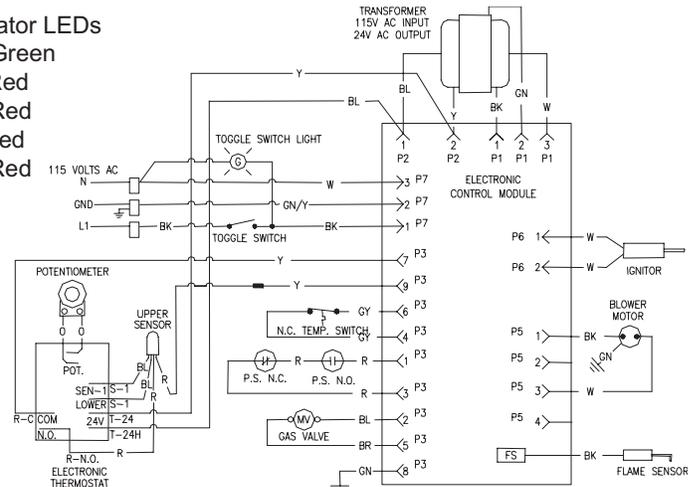



Sequence of Operation

For models starting with
CF serial numbers and later.

For models starting with CF serial numbers and later.

- 1 Thermostat calls for heat.
Prior to energizing blower, ignition module checks to make sure the vent temperature switch is in the normally closed position. If the vent temperature switch is open, the control waits indefinitely for the temperature switch to close.
- 2 Blower energizes, pressure switch contacts are normally closed. If the pressure switch contacts are open, blower operates for up to 5 minutes waiting for contacts to close, then blower stops and flashes red PURGE LED indicating lock-out condition.
- 3 Blower pre-purge period (5 seconds) indicated by PURGE LED on the module
- 4 Igniter warm up (18 seconds), indicated by the IGNITER LED on the module. **Note: The blocked vent pressure switch must be in the normally closed position for the ignition cycle to start.**
- 5 Trial for Ignition (4 seconds, 3 trials).
 - a) Flame establishing period (2.5 seconds), gas valve and igniter on, indicated by the IGNITER and VALVE LED on the module.
 - b) Burner on, flame proving period (1.5 seconds, looking for minimum of 1 micro amps), indicated by the FLAME & VALVE LED on the module.
- 6 Steady state operation.
Ignition module monitors:
 - Thermostat circuit.
 - When thermostat opens, gas valve is shut down and post purge begins.
 - Safety circuit.
 - If vent temperature switch opens, gas valve is shut down, system will post purge and wait for switch to close before attempting re-ignition.
 - If the blocked vent pressure switch opens, indicating a blocked exhaust vent condition, the gas valve is shut down, blower shuts down for 30 seconds and is re-energized and system attempts re-ignition if the pressure switch is closed. Blower operates for 5 minutes to wait for pressure switch to close, then shuts off with purge light flashing (lock-out). Will restart in 1 hour to attempt to close the switch and restart ignition sequence.
 - Flame sensor circuit.
 - If flame is lost, gas valve is shut down, system will post purge and system attempts re-ignition.
- 7 Thermostat satisfied.
- 8 Burner off.
- 9 Blower post purge (15 seconds).



Sequence of Operation

For models with Honeywell Integrated Control System w/ Direct Spark Ignition

**Serial Numbers including and AFTER GB13006174 and ALL EFR models
(Excluding EF100T399 model series)**

- 1 Thermostat calls for heat.
- 2 Combustion blower starts.
- 3 Blower pre-purge period of 30 seconds.
- 4 Trial for Ignition. (5 seconds, 3 trials).
 - Flame establishing period (3 seconds), gas valve opens, sparks from spark rod to burner surface to ignite the gas.
 - Burner on, flame proving period (2 seconds). Requires a minimum of 0.8 microamp through flame sense rod to prove flame.
 - If either blocked vent safety switch contacts (normally closed) or blocked vent pressure switch contacts (normally closed) are open, then the ignition sequence will not start and an error code 29 (Pressure switch failed to close or open) will be shown on the display.
- 5 Steady State Operation: Burner continues to operate until:
 - Thermostat circuit opens, gas valve closes, blower continues to operate for 30 second post-purge period.
 - If the normally closed blocked vent pressure switch opens, the gas valve closes, the blower continues to operate indefinitely and error code 29 will be displayed after a couple minutes with "Service Needed", "Pressure Switch".
 - If the normally closed 1st Pass Collector vent safety switch opens, the gas valve closes, the blower post-purges, then shuts off with error code 26 displayed in a lockout condition.
- 6 Thermostat satisfied
- 7 Gas valve closes, burner extinguished.
- 8 Blower post purge for 30 seconds.



Sequence of Operation

For models with Honeywell Integrated Control System w/ Direct Spark Ignition


Serial Numbers including and AFTER GB13006174 and ALL EFR models

Lockout Conditions






The system will go into lock out mode for the following reasons:

1. **ERROR CODE 62 or 63**
Control board will go into "Soft Lockout" if the main burner cannot be lit or fails to prove flame after 3 ignition trials. The water heater indicates a lockout condition by showing an error code number (62 or 63) with "Service Needed" in the control display window. Refer to error codes in the diagnostic section of this Service Manual. In a "Soft Lockout" condition, the control will wait for 60 minutes and then make 3 more attempts to light the main burners. Soft lockout reset is accomplished by depressing the lower right button under "Reset" for 3 seconds.
2. **ERROR CODE 65**
If the top of the tank should exceed 200°F, then the high limit control will shut off the burner and the water heater will go into a "Hard Lockout". Error code 65 will be shown in the water heater display. The control can only be reset in the "Service Mode", which is detailed in the "Troubleshooting" section of this Service Manual.
3. **ERROR CODE 29**
If the exhaust terminal becomes blocked or the condensate elbow fails to drain condensate, the normally closed exhaust pressure switch will open, the gas valve closes, and error code 29 will appear on the control display. When the condition is corrected, the error code will disappear and the water heater will resume normal operation. No resetting of the control display is needed for the pressure switch error code.
4. **ERROR CODE 26**
If the vent safety switch located near the exhaust pressure switch should open, the gas valve will close, the blower will post-purge and error code 26 will appear on the display. The lockout condition will reset once the problem is corrected and the switch reset. Refer to "Vent Safety Switch Testing and Replacement" in this Service Manual.

CONNECTION/WIRING DIAGRAM

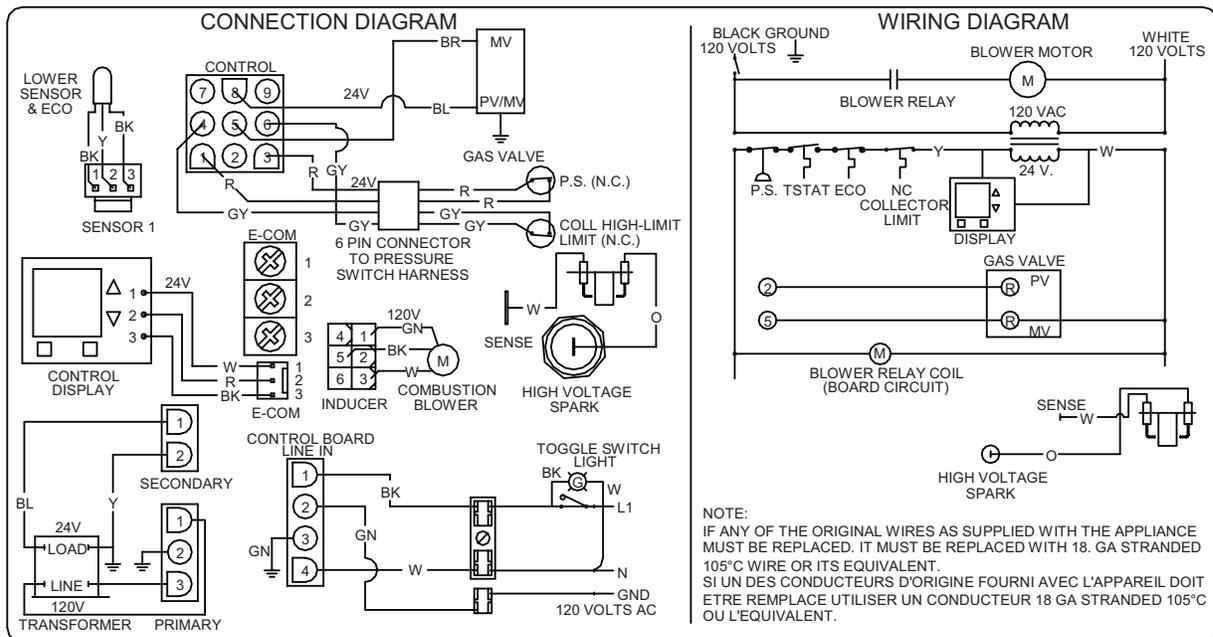

⚠ WARNING
120 volt potential exposure. Use caution making voltage checks to avoid personal injury.

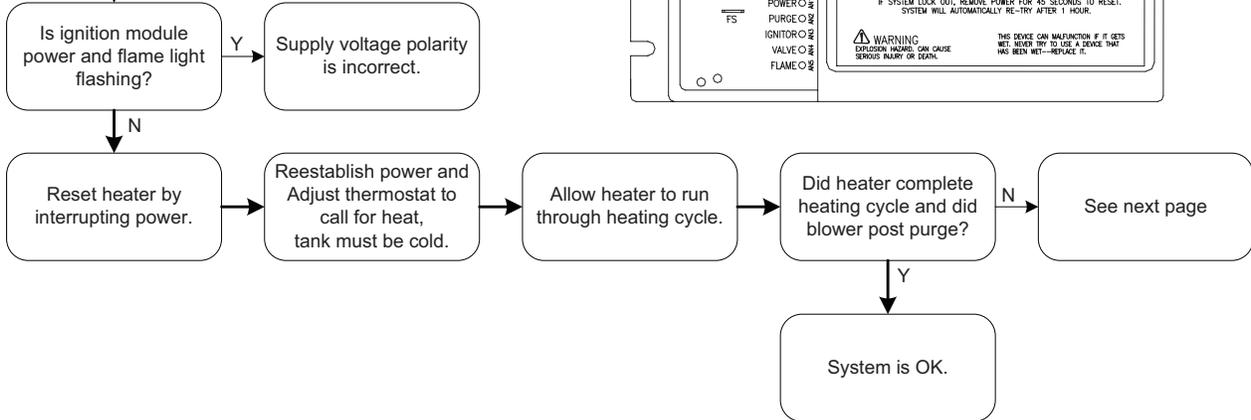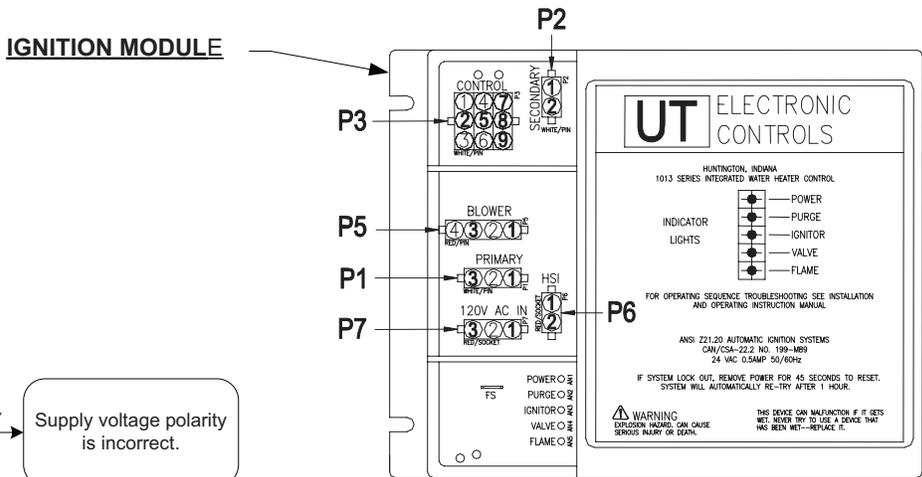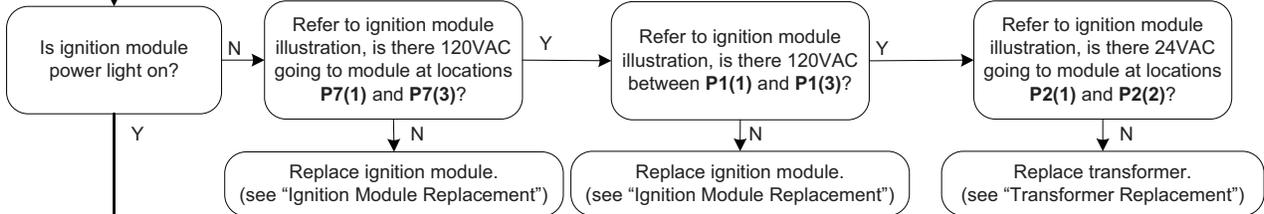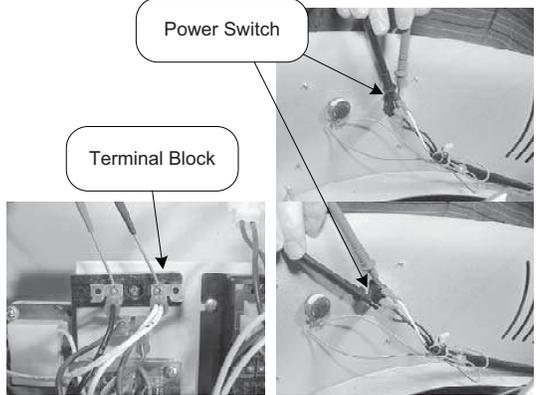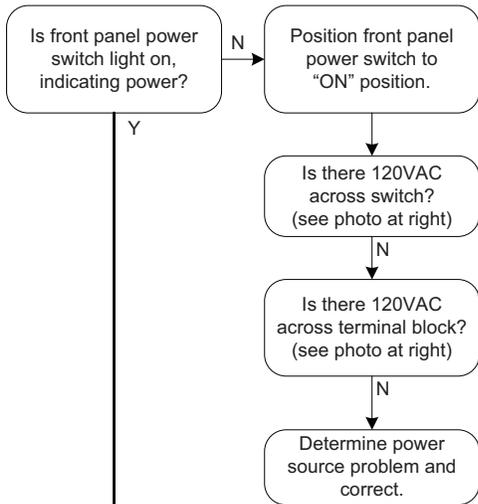




Troubleshooting

LED status & probable cause
For models with Hot Surface Ignition

Determine failure mode by observing flashing LED status on ignition module.
LED status and probable cause shown below.

* Denotes conditions that may require the water heater to be isolated from the vent system to determine root cause.

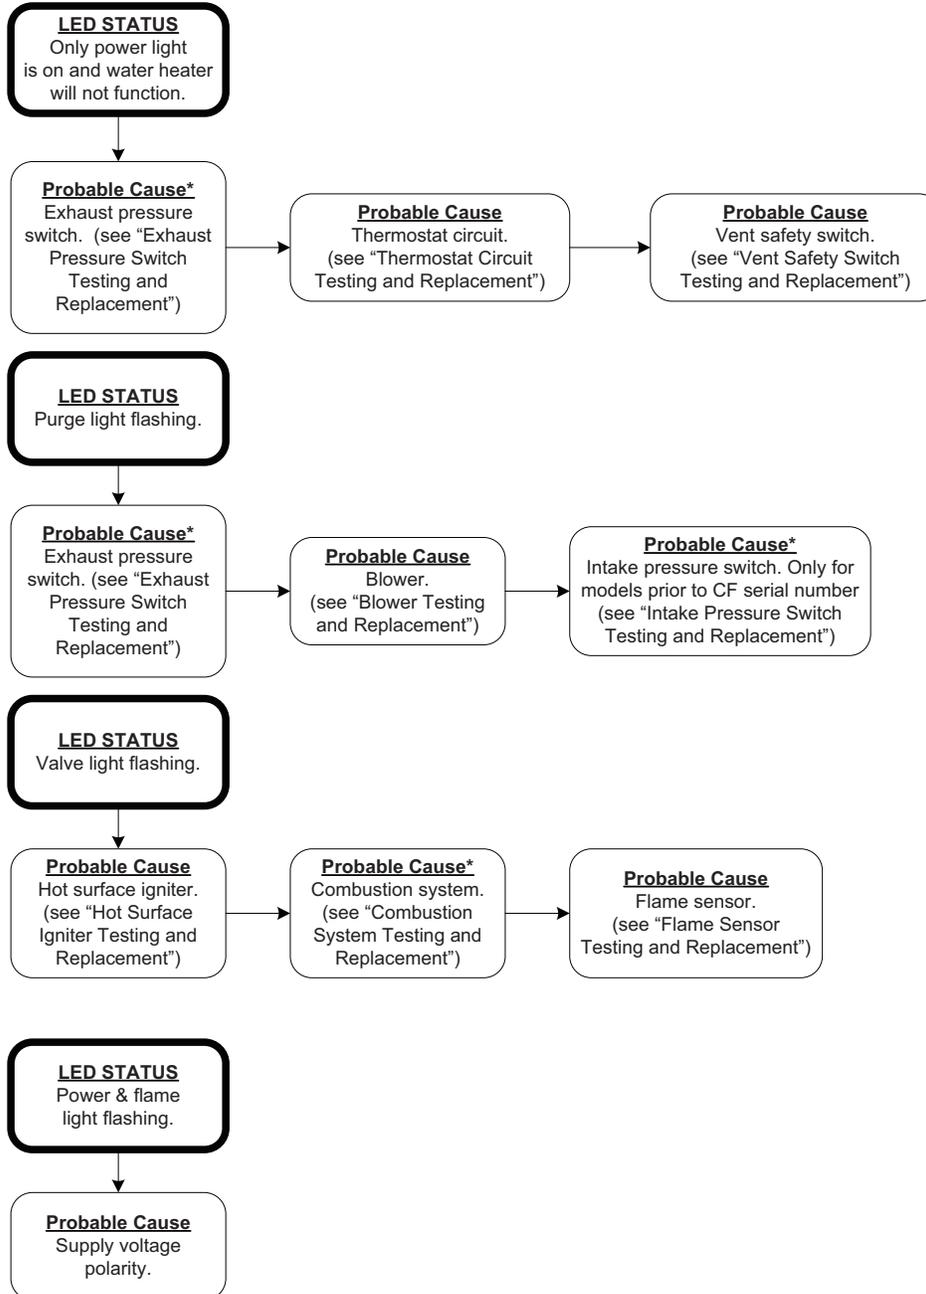



Troubleshooting

System Observation
For models with Direct Spark Ignition

Water Heater Fault: Water heater does not operate
Display Error Code: Water heater display does not operate - blank display

Check main power supply to water heater - fuse, circuit breaker, plug receptacle, line cord or wiring to water heater.

Check to make sure switch on front of control panel is in the ON position

Verify Primary voltage at the control board.


Verify Secondary voltage at the control board.

WARNING
 120 volt potential exposure. Use caution making voltage checks to avoid personal injury.


CAUTION
 Use caution not to damage connectors when making voltage measurements or jumping terminals

Refer to Control Board illustration. Voltage at primary pins **P2(1) & P2(3)** will be 110-120. If not, check Line In pins **P3(1) & P3(4)**. Check line cord with volt meter. Replace line cord if defective.

Refer to Control Board illustration. Voltage at secondary pins **P4(1) & P4(2)** will be 24VAC. If not, check transformer. Replace transformer or wire harness.

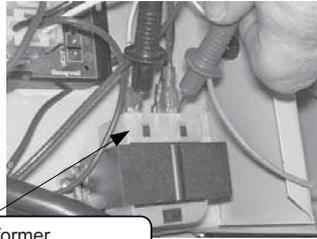

Transformer
 Top terminals are 24VAC;
 Bottom terminals are 120VAC

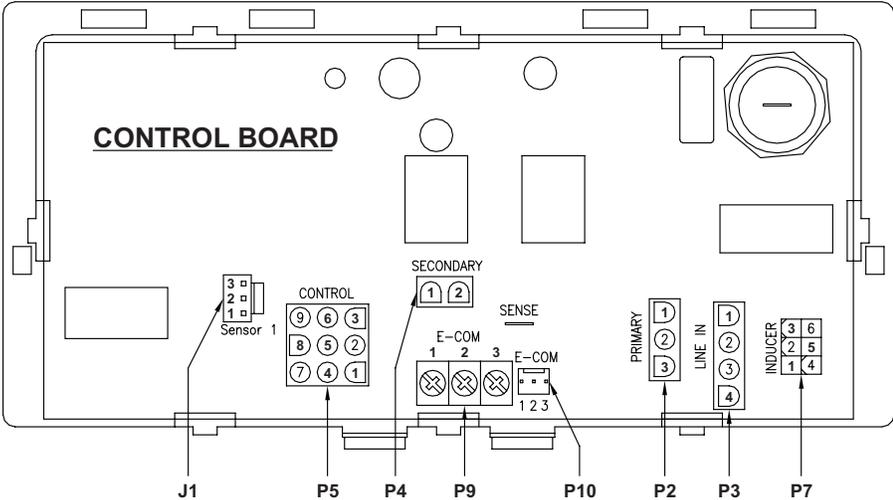

Does water heater display operate? Does the combustion blower start to operate? Increase thermostat setting if tank is warm.

Display Operates - See next page

Is 24VAC present between **RED** and **BLACK** wire pin connections on the back of Control Display?

Check wires for proper termination to control display. Are wire terminations connected properly to control display?

Replace Control Display.

Is 24VAC present between E-COM screw terminals **P9(2) & P9(3)** on the Control Board.

Check wire harness for proper continuity

Make proper wire terminations

Replace Control Board



Troubleshooting

System Observation
For models with Direct Spark Ignition

⚠ WARNING
120 volt potential exposure. Use caution making voltage checks to avoid personal injury.

⚠ CAUTION
Use caution not to damage connectors when making voltage measurements or jumping terminals

From previous page

Does combustion blower operate?

N Error code #29 on display. Refer to Control Board illustration. Measure voltage between terminals P7(3) & P7(5) on the "inducer" output (make sure the control display shows "heating" in the status mode, if not increase the setpoint). Is there 110-120 VAC?

N Replace control board if display shows "heating" and no voltage is present to the blower harness. Make sure there are no error codes for the temperature sensors (following sections) before replacing control board.

Y Replace blower.

Y Check the voltage at the connection to the blower. Is 110-120 VAC present?

N Replace wire harness.

Can sparking be seen/heard at the spark rod to the burner?

N Remove high voltage wire connected at the spark rod and hold approximately 1/4" from metal ground with insulated pliers during the ignition cycle (3 second spark trial period). Is there spark to ground?

N Check resistance of high voltage cable. Resistance should be 0-1 ohms. If resistance is high, replace spark cable. If spark cable is good, replace Control Board.

Y Check continuity of spark rod and spark rod gap to burner. (see section "Spark Rod Gap Adjustment")

Does Main Burner Light?

N Error code #62 on display. See main burner lights, no flame signal in section "Combustion System Testing and Replacement"


Does burner continue until thermostat set point is reached? See setting display in Service Mode and displaying temperature sensors.

N Error code #63 on display. (see "Combustion System Testing and Replacement")

Check to see if control display shows any other error codes (29, pressure switch, 26, vent safety switch, or 65, high limit). If so, refer to the appropriate section for testing and replacement.

Does blower post-purge for 30 seconds?

System okay

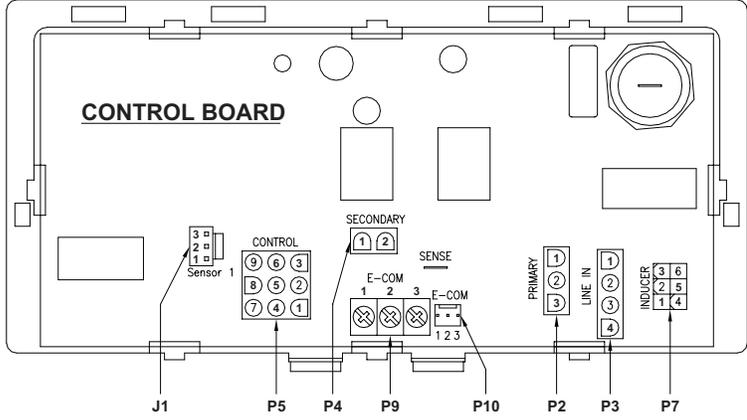




Troubleshooting


Accessing Service Mode on Control Display
For models with Honeywell Integrated Control

The display has a “service mode” for changing the maximum setpoint and accessing information in aiding servicing of the water heater. This procedure is for service and installation personnel only. To enter the Service Mode, follow the steps illustrated below:

Step 1: Press “Select” and “Temperature Up” buttons together and hold for 3 seconds until “Max Setpoint” is shown in the display.

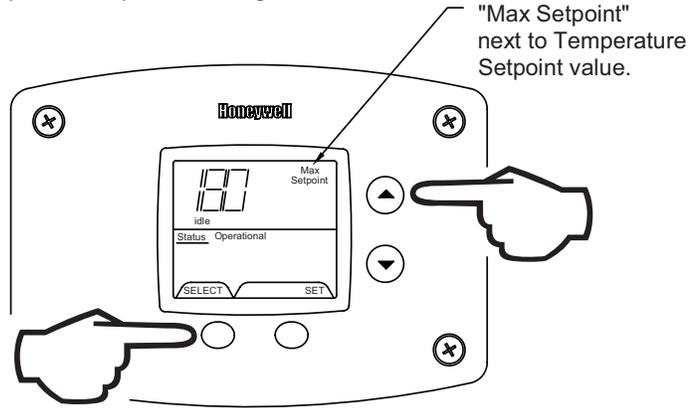


Step 2: Pressing “Select” button will change display to next mode

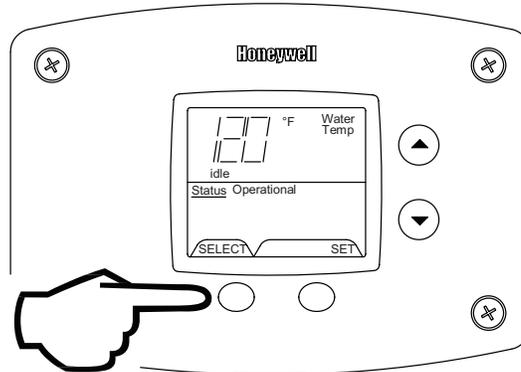

The following is the sequence of modes available in “Service Mode” by pressing the “Select” button:

Error Code Number (Display/Reset). This is only shown if there is an operating error in the “User Mode”.

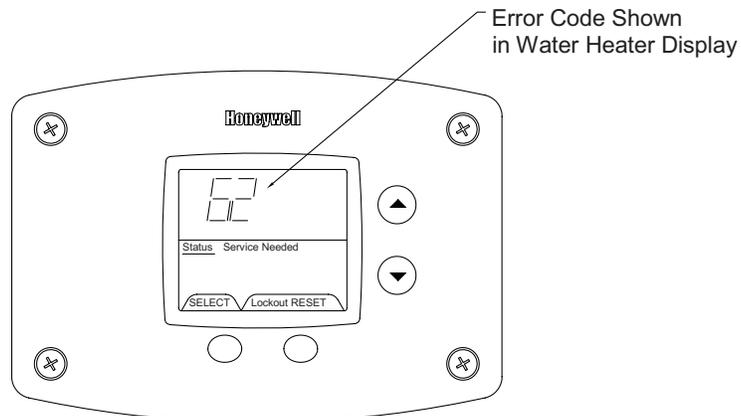





Troubleshooting

Accessing Service Mode on Control Display
For models with Honeywell Integrated Control


1. Max Setpoint (Display/Change)

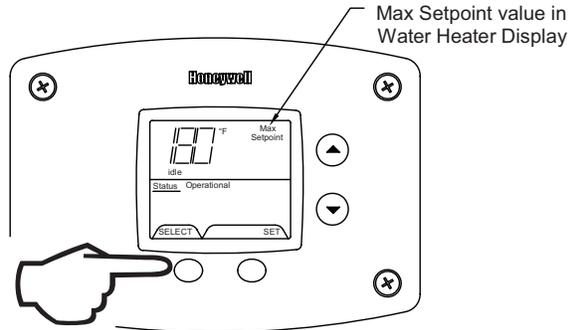

2. Tank Sensor Temperature Displayed Water Temperature Average.

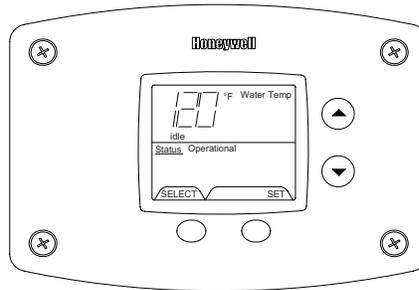

3. Flame Current of Burner Flame Sensor (Displays only in the Heating Cycle)

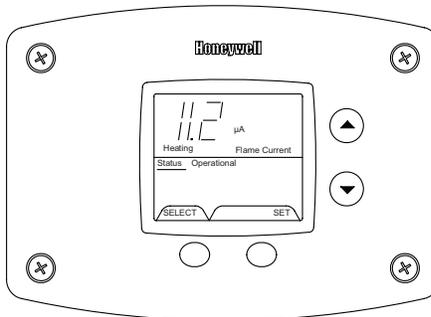





Troubleshooting

Accessing Service Mode on Control Display
For models with Honeywell Integrated Control


4. Setpoint (Display/Change)

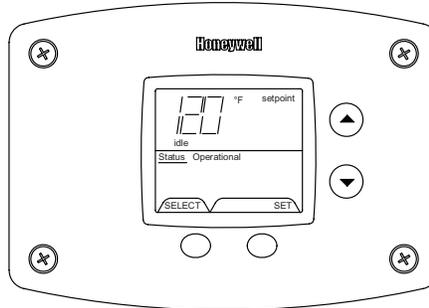

5. °F/°C (Display/Change)

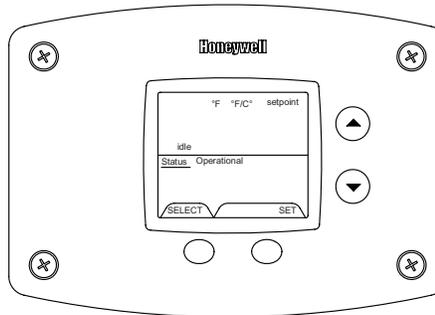

6. Differential (Display only - shows the differential of the thermostat)

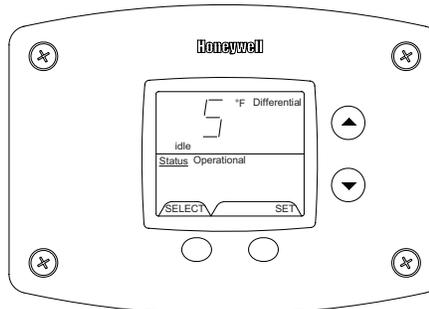





Troubleshooting

Accessing Service Mode on Control Display
For models with Honeywell Integrated Control

7. Software Version (Display only)

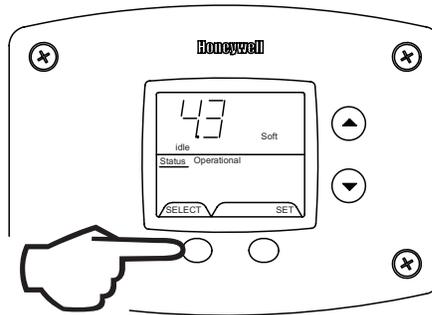


8. Error Code History (Displays if there are present error codes or up to 10 previous error codes). Water Heater Display will show a "--" if there are no error codes.

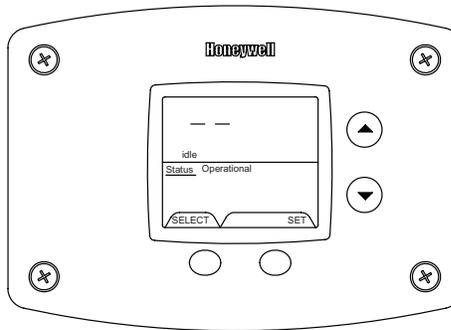

To change the Maximum Setpoint Limit (Max Setpoint) for the temperature setpoint:

Step 1: In service mode press the "Select" button until "Max Setpoint" is displayed.

WARNING
Setting the water temperature to the maximum set point can result in scalding hot water delivered to the faucets. It is highly recommended that the maximum setpoint be adjusted to the lowest temperature possible for the needs of the installation. Make sure the water heater control display is not in a public area that can result in the temperature settings being improperly adjusted.

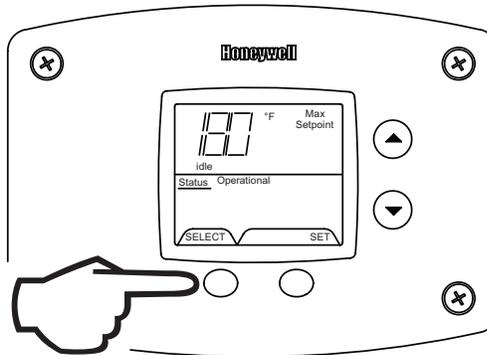





Troubleshooting

Accessing Service Mode on Control Display
For models with Honeywell Integrated Control


Step 2: Press "Set" button to enter setting mode. "Max Setpoint" will flash to indicate setting mode.

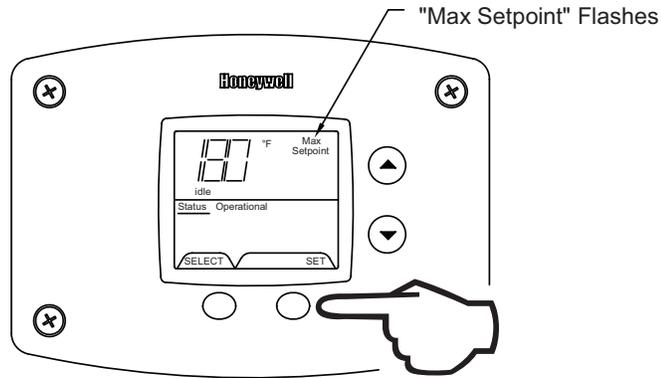

Step 3: Press the "UP" or "DOWN" buttons to change the maximum setpoint value. This will limit the maximum setpoint the user can select. Note: The maximum setpoint is approximately 180°F.

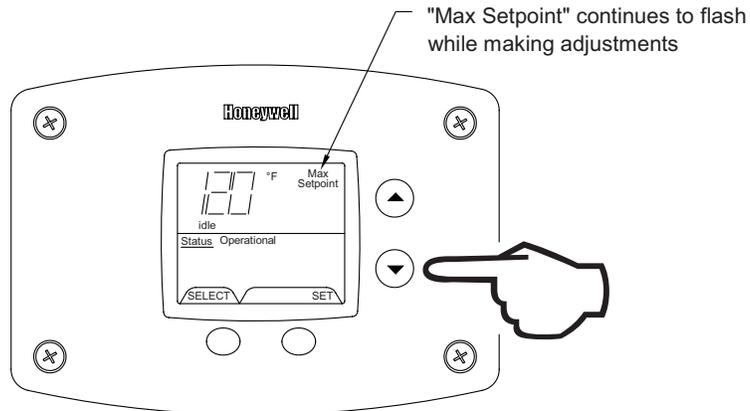

Step 4: Press "Set" button to confirm new "Max Setpoint" value and stop setting mode.

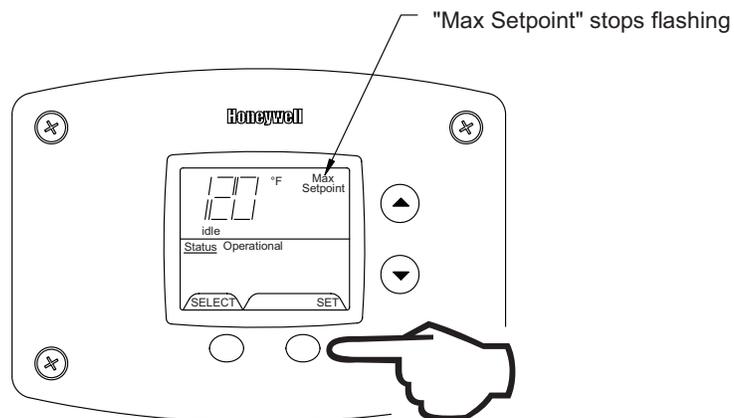




Troubleshooting

Accessing Service Mode on Control Display
For models with Honeywell Integrated Control


Step 5: 30 Seconds after the last button press, the Water Heater Display will go back to "User Mode". It will read "Max Setpoint" without showing a temperature value if the temperature setpoint is at the maximum setting. The Water Heater Display can be set back to the "User Mode" immediately by pressing both the "Temperature Up" and "Select" buttons together for 3 seconds.

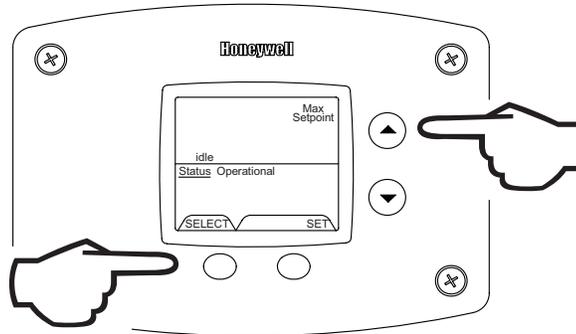

Exiting Service Mode

Display of Water Temperature:

Step 1: In Service Mode, Press the "Select" button until "Water Temp" is displayed in the upper right section of the water heater display. This is the reading for the sensor.

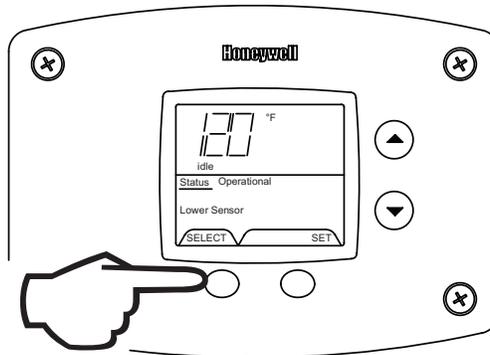




Troubleshooting

Accessing Service Mode on Control Display
For models with Honeywell Integrated Control


To Display Flame Sense Current of the Pilot Flame Sensor:

The pilot flame sense current is available only when the burners are in operation. Step 1: Make sure the status displays "Heating" or draw enough hot water to start the burners. Step 2: Enter the "Service Mode" described previously. Step 3: Press the "Select" button until a number value is displayed with "Flame Current" to the right of the number. The value displayed is in microamps (μA).

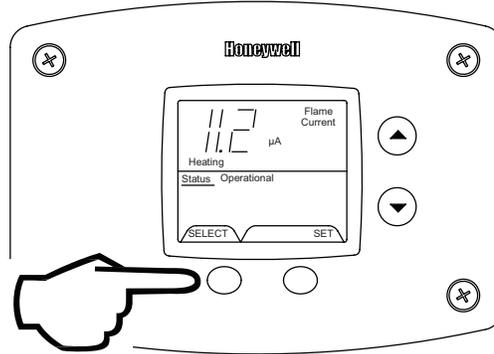

To Display and Change Temperature Setpoint:

Step 1: In "Service Mode" press the "Select" button until "Setpoint" is shown in the water heater display

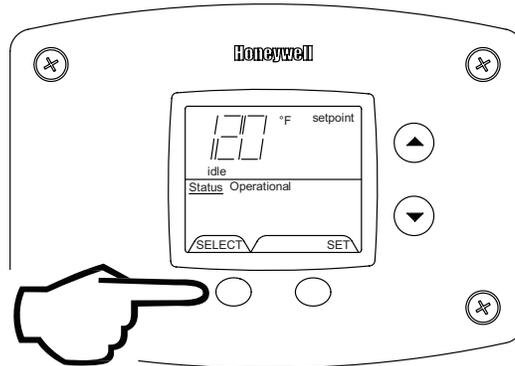




Troubleshooting

Accessing Service Mode on Control Display
For models with Honeywell Integrated Control

Step 2: Press the "Set" button to enter the setting mode. "Setpoint" will flash in the water heater display.

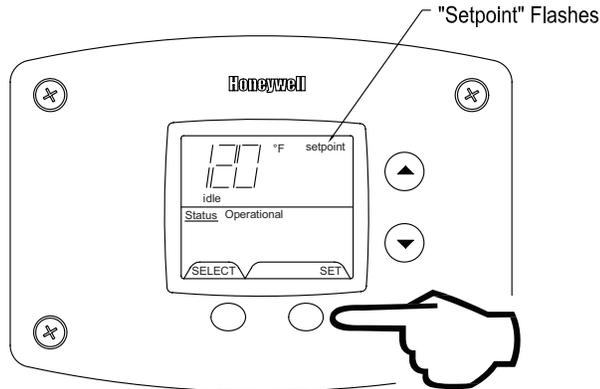


Step 3: To raise the temperature setpoint, press the "Temperature Up" button until the desired temperature is shown on the water heater display.

NOTICE


The maximum temperature that can be set in the Water Heater Display is limited to the "Max Setpoint" described previously. To change the "Max Setpoint", refer to the procedure "To Change the Maximum Setpoint Limit..." described previously under "Accessing the Service Mode on the Water Heater Display".

WARNING

Setting the water temperature to the maximum set point can result in scalding hot water delivered to the faucets. It is highly recommended that the maximum setpoint be adjusted to the lowest temperature possible for the needs of the installation. Make sure the water heater control display is not in a public area that can result in the temperature settings being improperly adjusted.

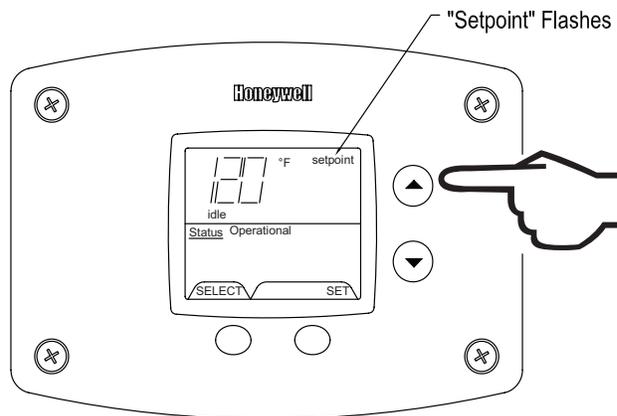

Step 4: To lower the temperature setpoint, press the "Temperature Down" button until the desired temperature is shown on the water heater display.

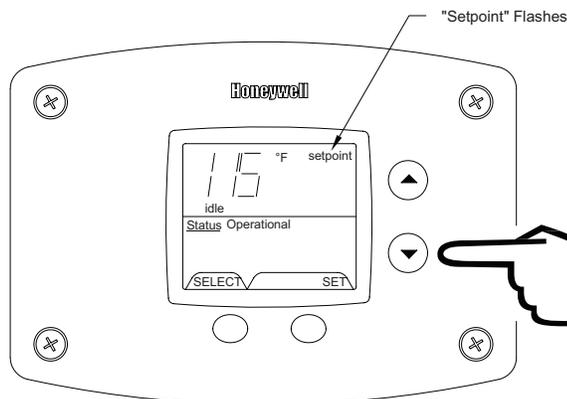




Troubleshooting

Accessing Service Mode on Control Display
For models with Honeywell Integrated Control


Step 5: When the desired setpoint is reached on the water heater display, press the “Set” button to confirm the new setpoint. “Setpoint” stops flashing in the water heater display.

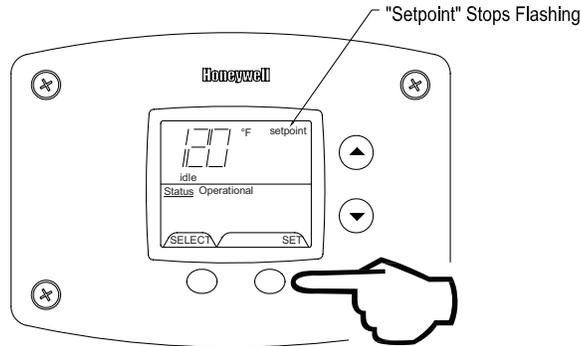


To Display and Change Temperature Format (°F/°C):

To Change Temperature Format in Display from °F to °C or °C to °F:

Step 1: While in “Service Mode”, press “Select” button until “°F/°C” is shown in the upper right portion of the water heater display.

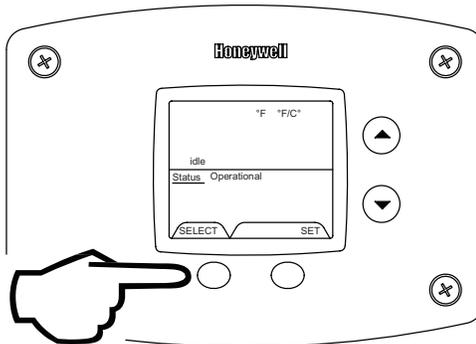

Step 2: Press “Set” button to change temperature format. “°F/°C” symbol will flash in the water heater display.

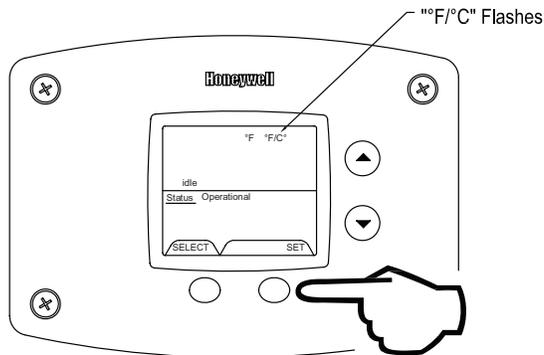





Troubleshooting

Accessing Service Mode on Control Display
For models with Honeywell Integrated Control


Step 3a: Press "Temperature Up" button to change temperature format to °C

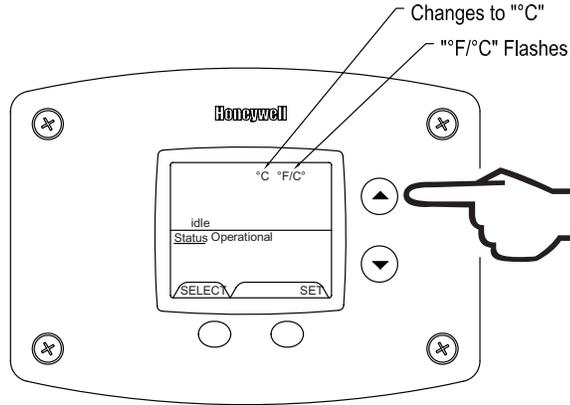

Step 3b: Press "Temperature Down" button to change temperature format to °F

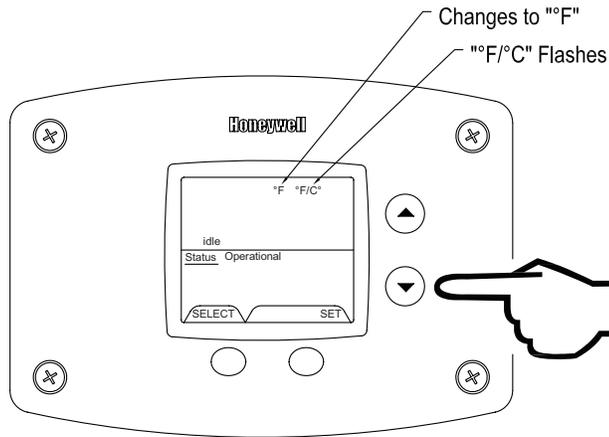

Step 4: Press "Set" button to confirm °F or °C format. °F/°C will stop flashing

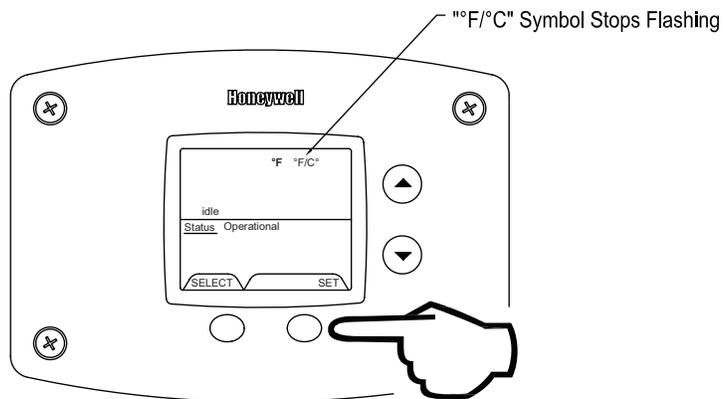




Troubleshooting


Accessing Service Mode on Control Display
For models with Honeywell Integrated Control

Step 5: Pressing “Select” button will return display to setpoint in format selected (°F or °C) immediately

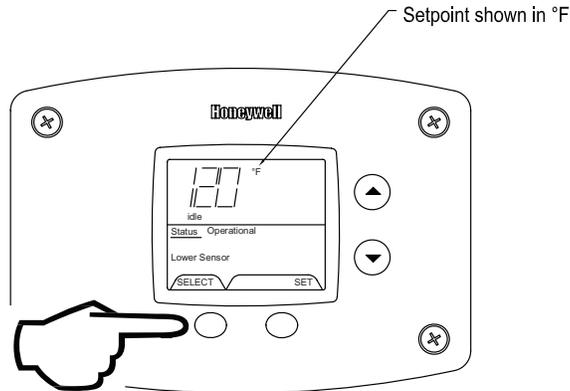

Error Codes and Error History Display:

If there is an operating problem with the water heater, an error code number will appear on the water heater display with “Service Needed” to the right of the “Status” indicator. The error code label is located under the Water Heater Display and the following section in this Service Manual explains the error codes with corrective actions to repair the water heater.

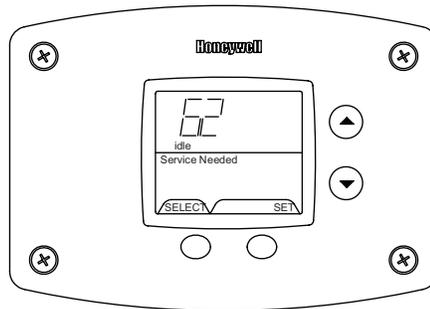

Example of Error Code in the Display

Error Code History:

In “Service Mode” pressing the “Select” button after the “Software Version” (item 8 in the previously described sequence of service modes) will show an error code history, if there have been any previous operating problems with the water heater. If the display shows --, there is not a current error code.

The Water Heater Display will provide up to 10 previous error codes. The oldest error code will be stored in code index #1 and the most recent in code index #10.




Troubleshooting


Accessing Service Mode on Control Display
For models with Honeywell Integrated Control

To view previous error codes:


Step 1: In "Service Mode" press the "Select" button until the next display after the "Software Version". If there are no current error codes, the display will show -- .

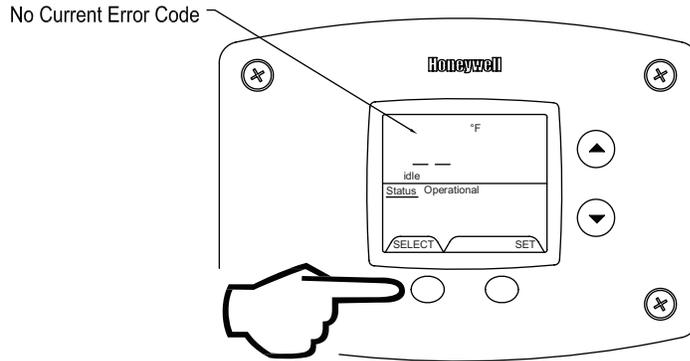

Step 2: Press the "Temperature Down" button to select the error code index, starting with the most recent error code "10".

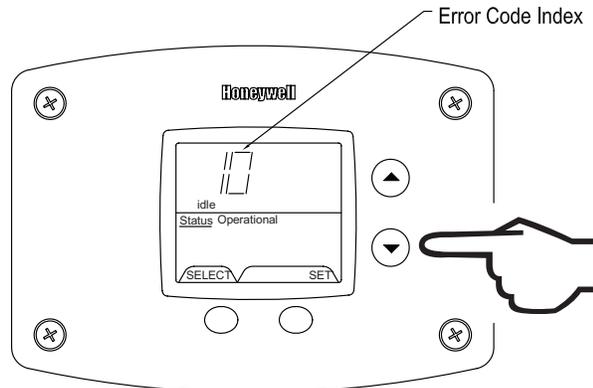

Step 3: Press the "Select" button to view the error code for "code 10". If there is a number displayed, note what the number is. The label next to the water heater display will identify the code number. If no number is displayed with only a "--" in the water heater display, then there has not been an error code for error code index 10.

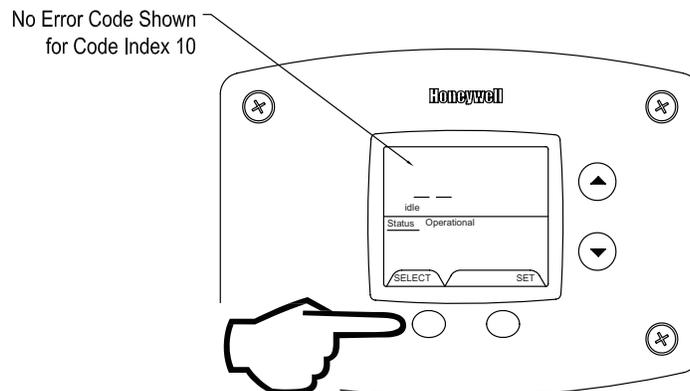





Troubleshooting

Accessing Service Mode on Control Display
For models with Honeywell Integrated Control

Step 4: Press the “Temperature Down” button to change to the previous code index, code #9.

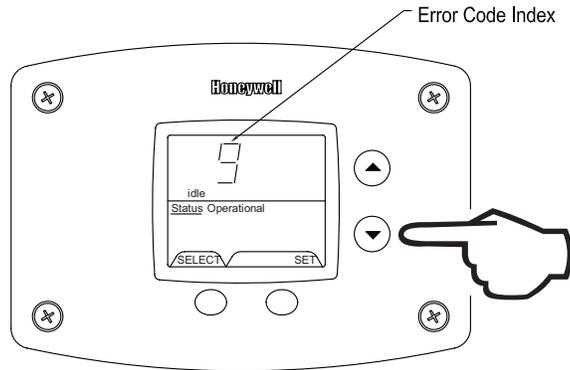


Step 5: Press the “Select” button for code index #9 to view if there are any code numbers.

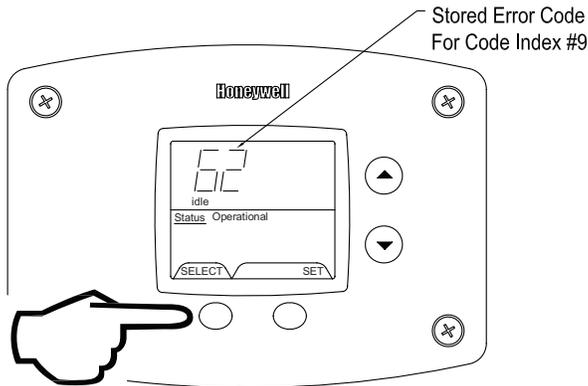

Step 6: Continue pressing the “Temperature Down” button to change to the next error code index and press “Select” to view the error code number, if any, for that index number. Continue on to index #1, the oldest error code index. The water heater display will store up to 10 error codes with the oldest code starting in code index #1 with the most recent code in code index #10.

Step 7: 10 seconds after the last button press, the Water Heater Display will revert back to the current error code display. To exit Service Mode, either wait 30 seconds or press Temperature Up button and Select Button for 3 seconds.

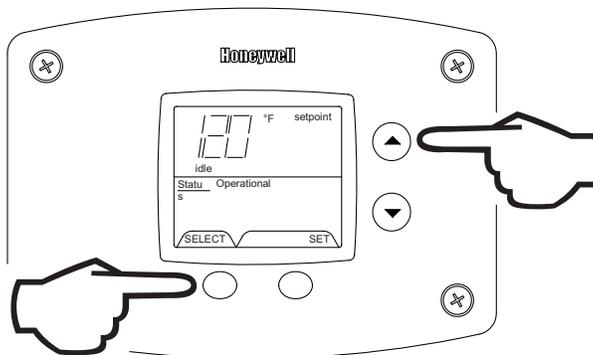



Troubleshooting

Error Code Definitions
For models with Honeywell Integrated Control

ERROR CODE DEFINITIONS

If the water heater has an operating problem, there will be a number in the water heater display with "Service Needed" shown below the error code number. Note the error code and the definition in the chart below. This label appears on the control box under the water heater display. The following sections will provide instructions for servicing each error code.

| HONEYWELL INTEGRATED CONTROL ERROR CODE DISPLAY FOR EF MODEL SERIES | |
|--|---|
| ERROR CODE | DEFINITION |
| 4 | LOW FLAME SENSE CURRENT |
| 6 | FLAME SENSED OUT OF NORMAL SEQUENCE (BEFORE OPENING GAS VALVE OR AFTER CLOSING GAS VALVE) |
| 23 | FLAME DETECTED BEFORE IGNITION |
| 24 | FLAME DETECTED AFTER A HEATING CYCLE COMPLETES |
| 29 | PRESSURE SWITCH FAILED TO CLOSE OR OPEN (STUCK OPEN) |
| 32 | LOWER SENSOR READINGS FAULTY |
| 57 | FLAME ROD SHORTED TO GROUND |
| 58 | AC LINE FREQUENCY ERROR - SIGNAL TOO NOISY OR FREQUENCY INCORRECT |
| 59 | LINE VOLTAGE TOO LOW OR HIGH |
| 61 | DC OUTPUT VOLTAGE UNSTABLE |
| 62 | MAXIMUM NUMBER OF RETRIES DETECTED |
| 63 | MAXIMUM NUMBER OF IGNITION RECYCLES DETECTED |
| 64 | ELECTRONICS FAILURE |
| 65 | HIGH WATER TEMPERATURE (OVER 200°F) |

IF ANY OF THE ABOVE CODES APPEAR ON THE CONTROL DISPLAY, CONTACT YOUR PLUMBER OR QUALIFIED SERVICE AGENT FOR SERVICE OF THE WATER HEATER.




Troubleshooting

Resetting Error Codes
For models with Honeywell Integrated Control

⚠ WARNING


The following procedure is for service and installation personnel only. Resetting lockout conditions without correcting the malfunction can result in a hazardous condition.

If an error code is displayed (except for #4, low flame sense current), the water heater will be in a “lockout condition” with the water heater display showing the error code number and “Service Needed” in the status section of the display window. Error codes 62 (maximum number of retries detected) and 63 (maximum number if ignition recycles detected) are “Soft Lockouts” in which the control can be reset in the “User Mode” by pressing the lower right button under “Lockout Reset” shown in the lower right portion of the display. The control will also go through 3 attempts to relight the burners every hour in the soft lockout condition.

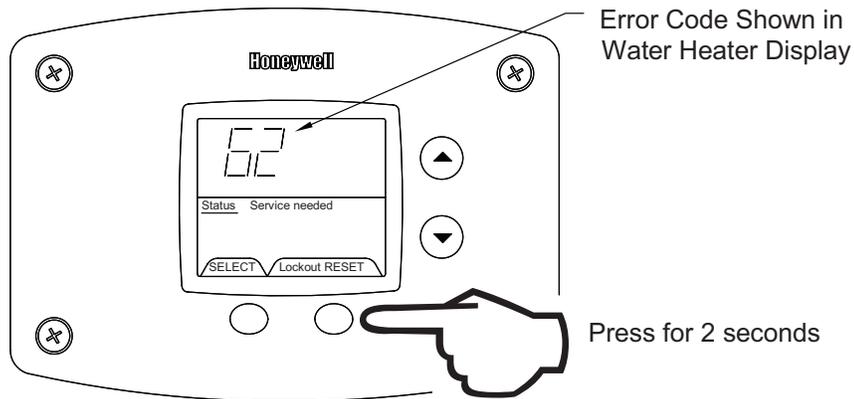

All other error codes will put the water heater into a “Hard Lockout” condition, in which the water heater will not operate and cannot be reset in the “User Mode”. To reset a hard lockout, first enter the “Service Mode” described earlier by pressing both the “Temperature Up” and “Select Buttons” at the same time for 3 seconds. Then press the lower right button under “Lockout Reset” in the water heater display and hold for 3 seconds.

Resetting Error Codes in Hard Lockout Condition

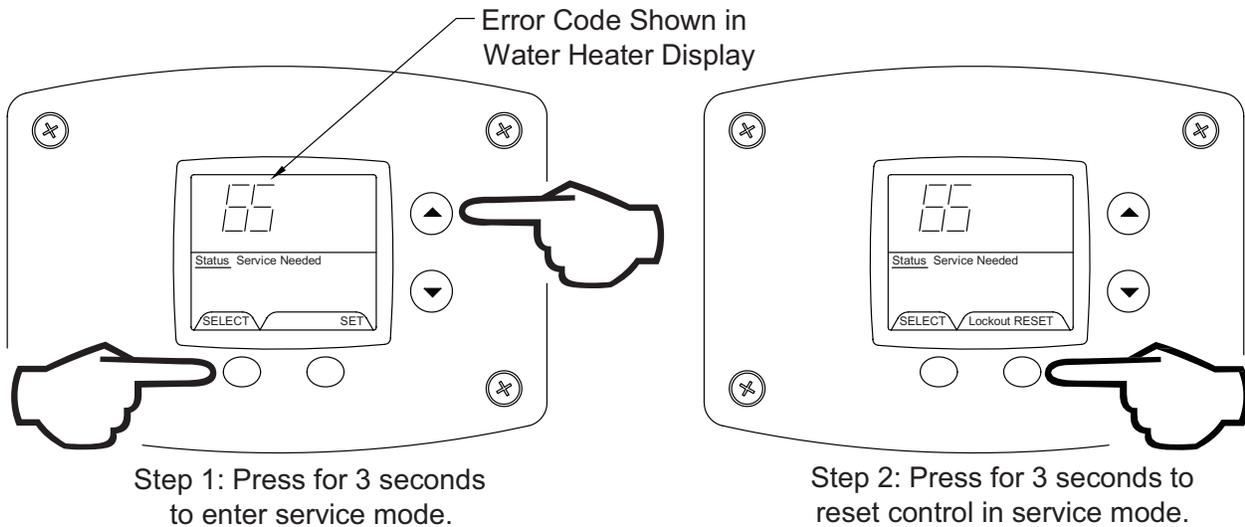



SERVICE PROCEDURE EF-I

Thermostat Circuit Testing and Replacement

Serial Numbers including and AFTER GB13006174 and ALL EFR models (Excluding EF100T399 model series).

IMPORTANT NOTE: This procedure assumes a cool tank

Condition: Water Heater Not Operating
Display shows error code "32" (Sensor Reading Faulty)

Unplug or disconnect electrical power to the water heater

Check continuity of wire harness to sensor. Resistance of harness should be close to 0 ohms. Replace wire harness if high resistance is measured (over 0.5 ohms) Check wires for intermittent connections, shorts, frayed insulation. Replace if necessary

If wire harness is O.K., check sensor resistance detailed in "Appendix - A: sensor resistance at various temperatures" at the end of the thermostat testing and replacement section. Replace sensor if needed.


Turn power ON to water heater.
 Run water heater through heating cycle and verify proper operation. Sensor temperature can be viewed when burner shuts off (see section on viewing the display in "Service Mode").

Condition: Water Heater Not Operating
Display shows error code "65"
High Water Temperature (over 200 °F)

WARNING
Do not reset the display from the hard lockout state without correcting the cause of the overheating condition



Turn power "OFF".
 Draw water to cool tank below 120 °F

Check sensor. Sensor is held in place with a clip fastened to the well (see photo). Check sensor wire for potential damage or breaks in the wire insulation. Is the sensor fully inserted into the well?

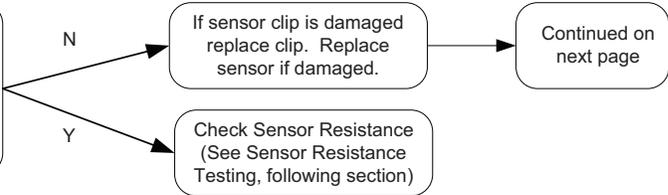

WARNING
 120 volt potential exposure. Use caution making voltage checks to avoid personal injury.

CAUTION
 Use caution not to damage connectors when making voltage measurements or jumping terminals

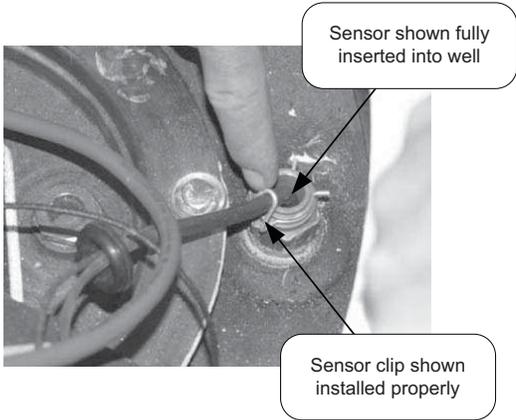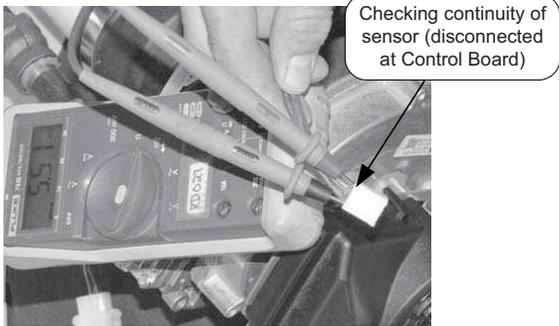



SERVICE PROCEDURE EF-I

Thermostat Circuit Testing and Replacement

Serial Numbers including and AFTER GB13006174 and ALL EFR models

Condition: Water Heater Not Operating
Display shows error code "65"
High Water Temperature (over 200 °F)
(Continued from previous page)


⚠ WARNING
Do not operate water heater without verifying that the overheating condition has been corrected.

Once cause of overheating condition has been diagnosed and corrected, the control may be reset

- Reconnect and switch on power to the water heater.
- Enter service mode on the water heater display (see illustration)
- Press button under "Lockout Reset" and hold for 3 seconds.
- Set thermostat to the desired setting.
- Water heater will start.
- Monitor temperatures for one complete heating cycle making sure the maximum tank temperature remains well below 200 °F

This water heater is equipped with a manual reset type gas shutoff device designed to shut off the gas to the burners if excessive water temperature occurs. To reset the control, first press the "temperature up" and "select" buttons on the water heater display for 3 seconds to enter service mode. Then press the lower right button under "RESET" in the display for 3 seconds.

Error code 65 indicates high limit lockout condition

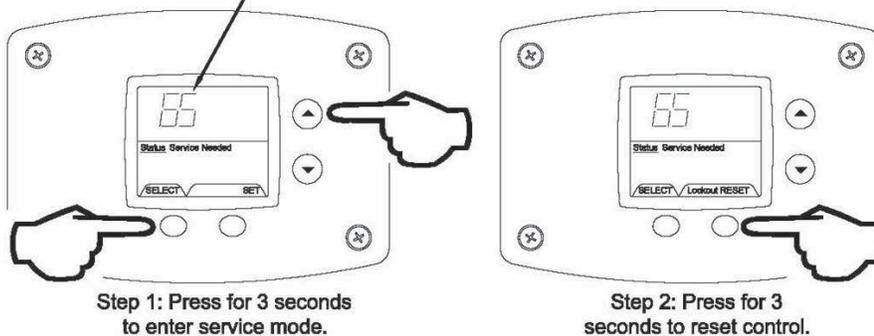









SERVICE PROCEDURE EF-I

Thermostat Circuit Testing and Replacement

For models with Hot Surface Ignition

IMPORTANT NOTE: This procedure assumes a cool tank

WARNING
120 volt potential exposure. Use caution making voltage checks to avoid personal injury.

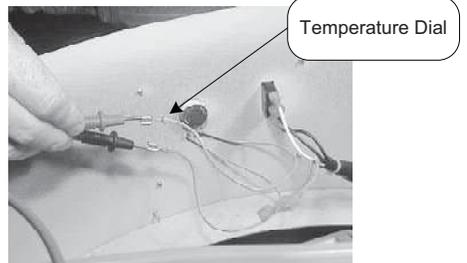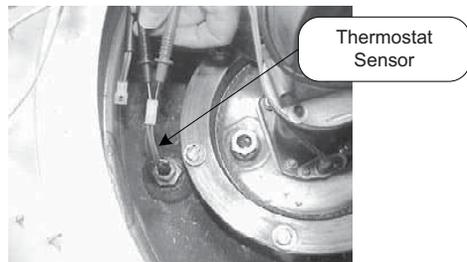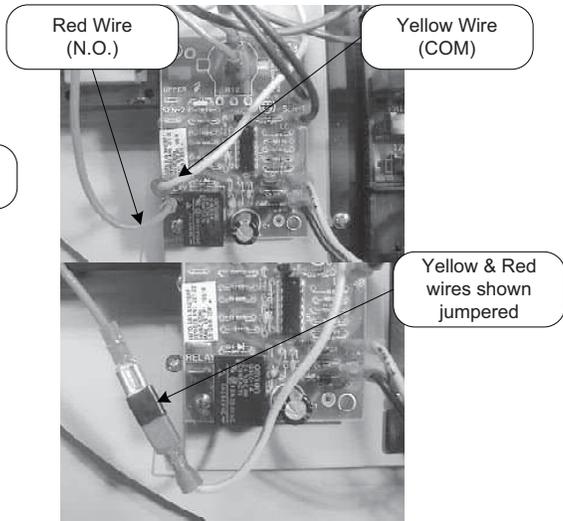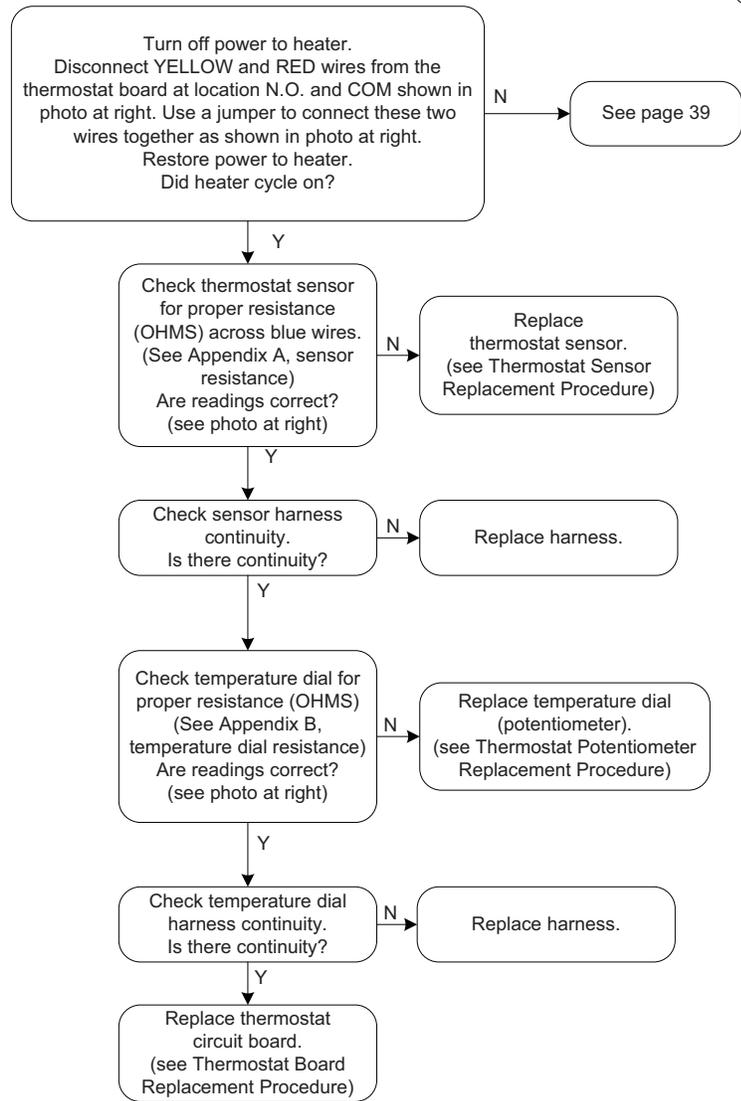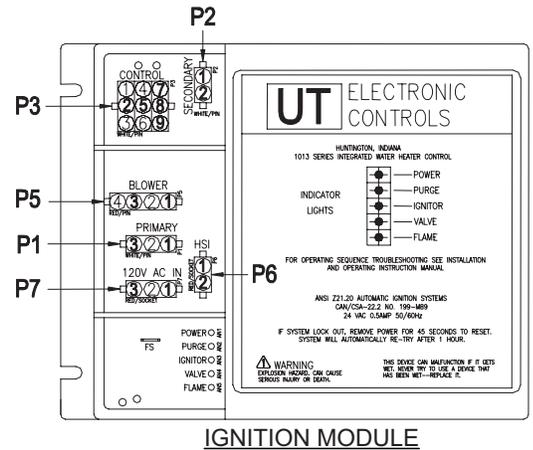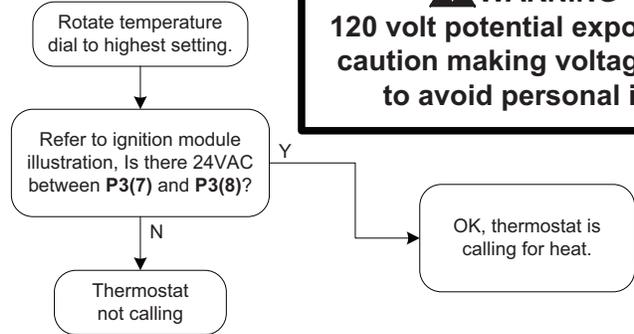



SERVICE PROCEDURE EF-I

Thermostat Circuit Testing and Replacement

APPENDIX - A

Sensor Resistance at Various Temperatures

*Be Careful When Making Voltage Measurements or Jumping Terminals
Not to Damage or Deform Connectors or Connector Pins.*

**Draw Water From The T&P Valve. Compare Temperature With
Temperature Ohms Chart Below.**

Example: If temperature of sensor is 84°F, then the resistance through the sensor would be 8449 (see shaded area).
NOTE: Sensor resistance increases as the temperature falls.

| In Degrees F | | | | | | | | | | |
|--------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| °F | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| 40 | 26109 | 25400 | 24712 | 24045 | 23399 | 22771 | 22163 | 21573 | 21000 | 20445 |
| 50 | 19906 | 19383 | 18876 | 18383 | 17905 | 17440 | 16990 | 16553 | 16128 | 15715 |
| 60 | 15314 | 14925 | 14548 | 14180 | 13823 | 13477 | 13140 | 12812 | 12494 | 12185 |
| 70 | 11884 | 11592 | 11308 | 11032 | 10763 | 10502 | 10248 | 10000 | 9760 | 9526 |
| 80 | 9299 | 9078 | 8862 | 8653 | 8449 | 8250 | 8057 | 7869 | 7685 | 7507 |
| 90 | 7333 | 7165 | 7000 | 6839 | 6683 | 6531 | 6383 | 6238 | 6098 | 5961 |
| 100 | 5827 | 5697 | 5570 | 5446 | 5326 | 5208 | 5094 | 4982 | 4873 | 4767 |
| 110 | 4663 | 4562 | 4464 | 4368 | 4274 | 4183 | 4094 | 4006 | 3922 | 3839 |
| 120 | 3758 | 3679 | 3602 | 3527 | 3453 | 3382 | 3312 | 3244 | 3177 | 3112 |
| 130 | 3048 | 2986 | 2925 | 2866 | 2808 | 2752 | 2697 | 2643 | 2590 | 2538 |
| 140 | 2488 | 2439 | 2391 | 2344 | 2298 | 2253 | 2209 | 2166 | 2124 | 2083 |
| 150 | 2043 | 2004 | 1966 | 1928 | 1891 | 1856 | 1820 | 1786 | 1753 | 1720 |
| 160 | 1688 | 1656 | 1625 | 1595 | 1566 | 1537 | 1509 | 1481 | 1454 | 1427 |
| 170 | 1402 | 1376 | 1351 | 1327 | 1303 | 1280 | 1257 | 1235 | 1213 | 1191 |
| 180 | 1170 | 1150 | 1129 | 1110 | 1090 | 1071 | 1053 | 1035 | 1017 | 999 |
| 190 | 982 | 965 | 949 | 933 | 917 | 901 | 886 | 871 | 857 | 842 |
| 200 | 828 | 814 | 801 | 788 | 775 | 762 | 749 | 737 | 725 | 713 |

APPENDIX - B

Temperature Dial Resistance

Proper Readings Should Be 5400-6600 Ohms at Minimum
Setting
And 0-50 Ohms at Maximum.

*Be Careful When Making Voltage Measurements or Jumping Terminals
Not to Damage or Deform Connectors or Connector Pins.*





SERVICE PROCEDURE EF-I

Thermostat Circuit Testing and Replacement


For models with Hot Surface Ignition

Thermostat circuit.
(continued from page 37)

WARNING
120 volt potential exposure. Use caution making voltage checks to avoid personal injury.

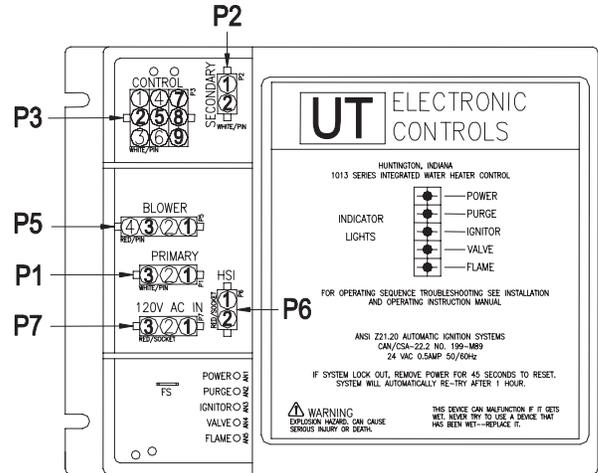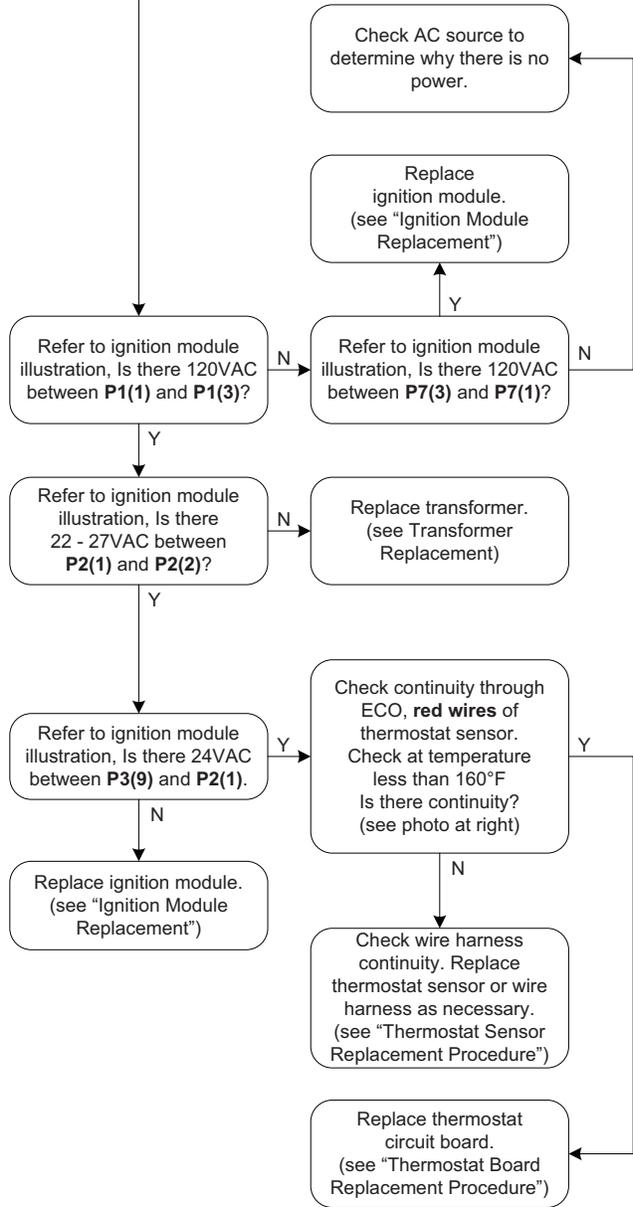

IGNITION MODULE

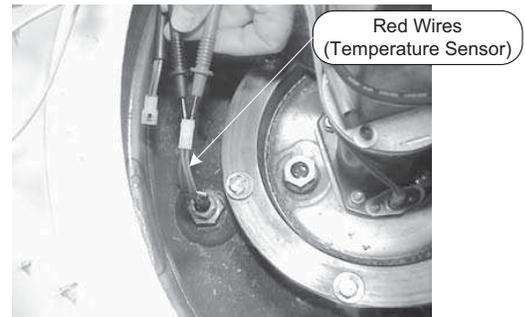




SERVICE PROCEDURE EF-I

Thermostat Circuit Testing and Replacement

Thermostat Board Replacement Procedure (Hot Surface Ignition)


- Step 1. Position main power switch to "OFF"
- Step 2. Disconnect (unplug) water heater from 120 volt power source.
- Step 3. Un-latch and remove top surround cover from top of heater.
- Step 4. Locate thermostat board on control panel. (see photo at right)
- Step 5. Carefully disconnect all wires from thermostat board.
 Note: it may be necessary to identify wires for proper re-connection.
- Step 6. Remove the two screws (Phillips head screw driver) that secure thermostat board to control panel.
- Step 7. Install new thermostat board to control panel using screws from step 6.
- Step 8. Carefully reconnect wiring per the wire diagram below. Reconfirm wire connections are correct prior to putting heater back in service
- Step 9. Restore 120 volt power supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instruction located in the installation and operating instruction manual.
- Step 10. Replace surround cover on top of heater.

⚠ WARNING
120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

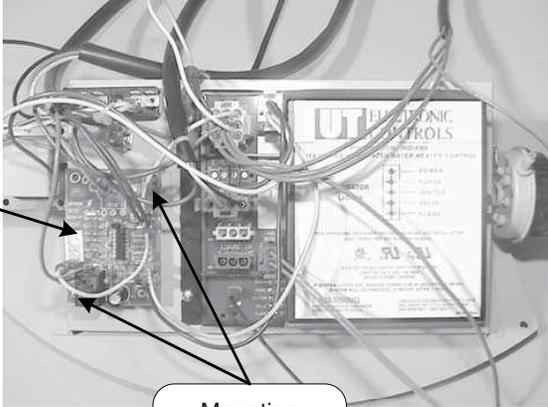


WIRING DIAGRAM

For models prior to CF serial number

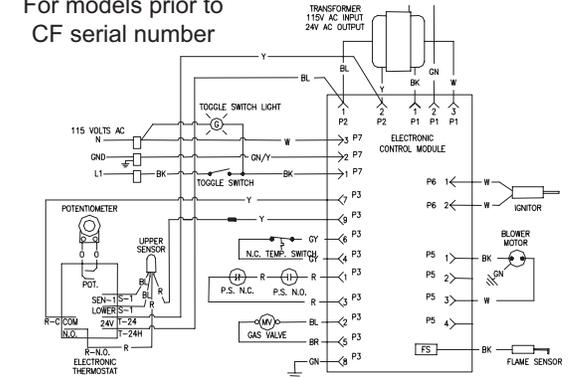

WIRING DIAGRAM

For models starting with CF serial numbers and later.

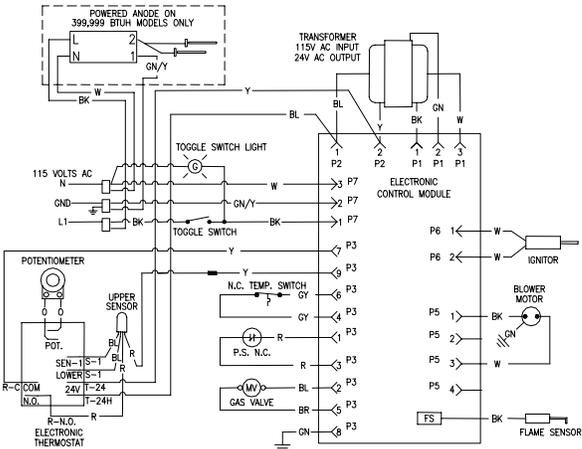



SERVICE PROCEDURE EF-I

Thermostat Circuit Testing and Replacement


Thermostat Potentiometer Replacement Procedure

- Step 1. Position main power switch to "OFF"
- Step 2. Disconnect (unplug) water heater from 120 volt power source.
- Step 3. Un-latch and remove top surround cover from top of heater.

⚠ WARNING
120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

- Step 4. Loosen set screw of adjusting knob (small blade screw driver) and remove adjusting knob from potentiometer. (see photos at right)
- Step 5. Remove retaining nut (1/2" wrench) and washer from potentiometer. (see photos at right)

Temperature
Adjusting Knob

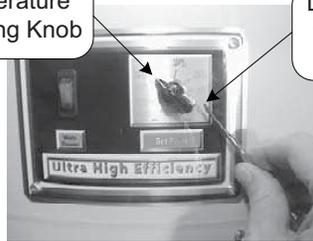


Loosen set screw
with small blade
screw driver

Remove
retaining nut




- Step 6. From inside of surround area, remove potentiometer with gasket from side of surround. Notice how indexing tab on potentiometer assembles into locating hole of surround. (see photos below)

Indexing
Tab

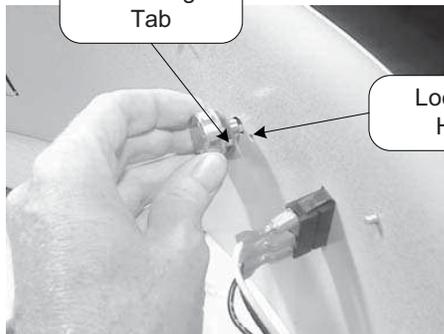

Locating
Hole

Potentiometer
Wire Leads

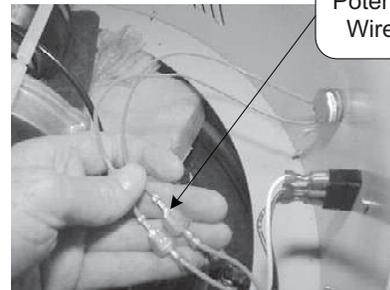

- Step 7. Disconnect potentiometer wire leads. (see photo at right)
- Step 8. Install new potentiometer with gasket into side of surround. Be sure to assemble with indexing tab inserted into locating hole on side of surround (see photos above).
- Step 9. Reconnect wires to potentiometer. Note: Wire leads are interchangeable with either wire.
- Step 10. Restore 120 volt power supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instruction located in the installation and operating instruction manual.
- Step 11. Replace surround cover on top of heater.






SERVICE PROCEDURE EF-I

Thermostat Circuit Testing and Replacement

Thermostat Sensor (Thermister) Replacement Procedure

- Step 1. Position main power switch to "OFF"
- Step 2. Disconnect (unplug) water heater from 120 volt power source.
- Step 3. **Hot Surface Ignition Models:** Drain water heater down to a point below the top of the tank.
- Step 4. Un-latch and remove top surround cover from top of heater.
- Step 5. Fold back insulation just in front of burner to expose temperature sensor (see photo below).
- Step 6. Disconnect temperature sensor from harness (see photos at right).

⚠ WARNING
120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

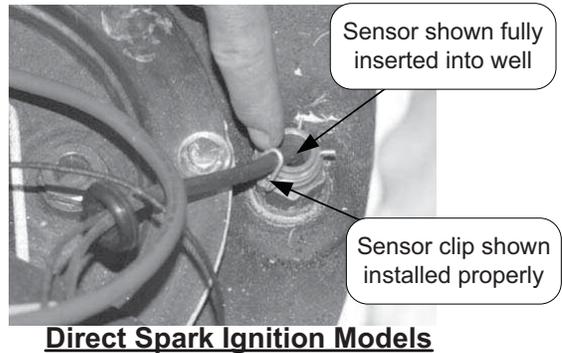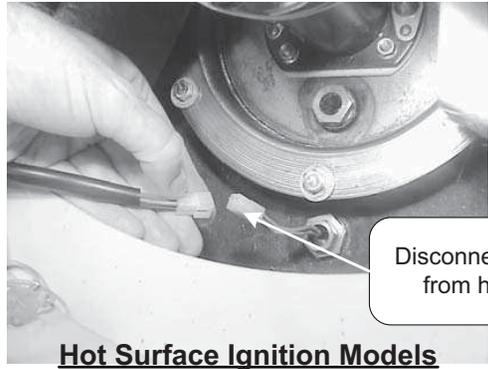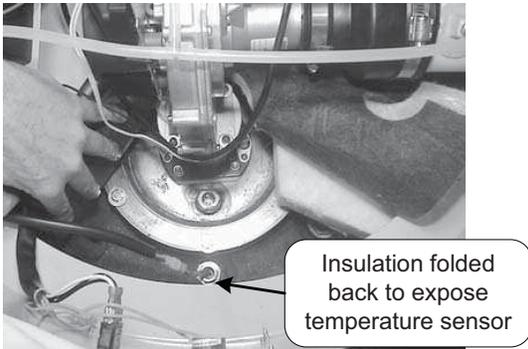

- Step 7. **Hot Surface Ignition Models:** Remove temperature sensor (1-1/16" hex, deep well socket) from heater.
Direct Spark Ignition Models: Unclip sensor from well and pull sensor to remove, do not remove well.

Note: Using a deep well socket will allow room inside socket for sensor connector and wires.

- Step 8. **Hot Surface Ignition Models:** Apply thread sealing tape or applicable thread lubricant to threads of new sensor. Install new thermostat sensor and Connect to wire harness from step 6.
Direct Spark Ignition Models: Install new sensor completely into well and reinstall sensor clip.
- Step 9. Fold insulation back into place. Be sure there are no wires in contact with burner.
- Step 10. Restore 120 volt power supply and water supply to water heater, check and repair any leaks found. Confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instruction located in the installation and operating instruction manual.
- Step 11. Replace surround cover on top of heater.




SERVICE PROCEDURE EF-II

Combustion System Testing and Replacement

Observe burner operation through the sight glass located on the combustion insert mounting flange. Normal burner operation should ignite smoothly, without evidence of coughing or huffing upon ignition. The burner flame should be a blue flame near the burner surface in a uniform flame pattern. Occasional yellow or white streaks are normal.




For models with Hot Surface Ignition System

Note: On higher input models using metal fiber mesh burner (serial number "CK" and later) a red glow from the burner surface is normal.

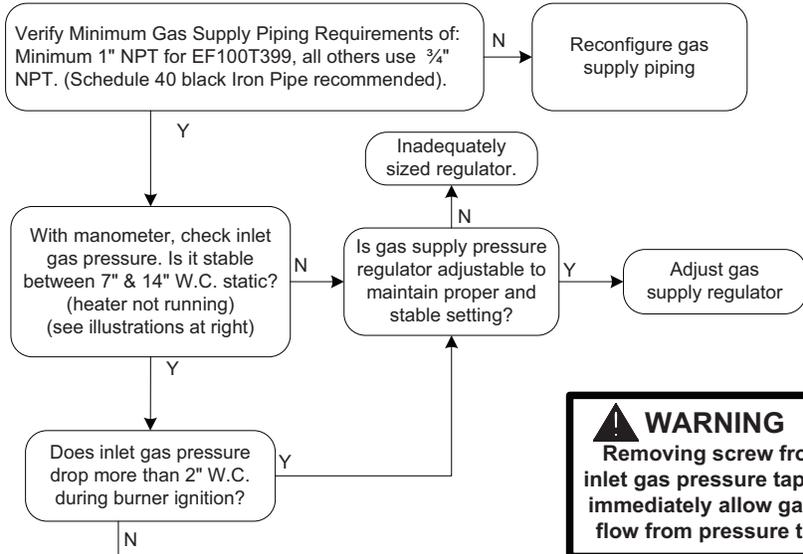


⚠ WARNING
Removing screw from inlet gas pressure tap will immediately allow gas to flow from pressure tap.

⚠ WARNING
120 volt potential exposure. Use caution making voltage checks to avoid personal injury.

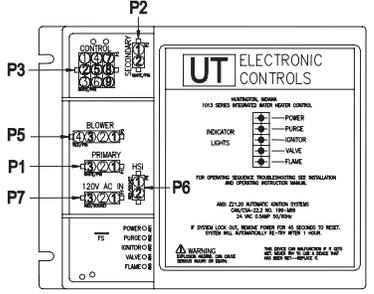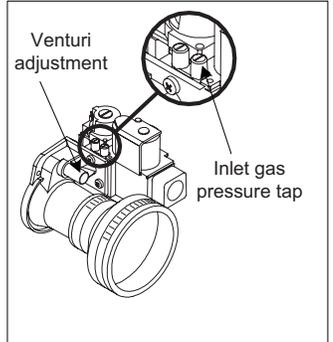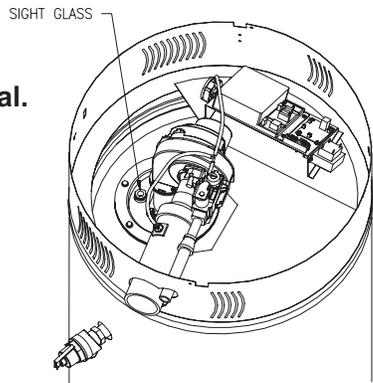

IGNITION MODULE

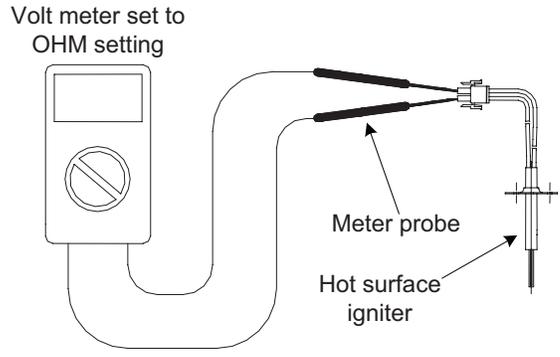

CHECK IGNITER RESISTANCE






SERVICE PROCEDURE EF-II

Combustion System Testing and Replacement

Observe burner operation through the sight glass located on the combustion insert mounting flange. Normal burner operation should ignite smoothly, without evidence of coughing or huffing upon ignition. The burner flame should be a blue flame near the burner surface in a uniform flame pattern. Occasional yellow or white streaks are normal.

For models with Hot Surface Ignition System

WARNING
 120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

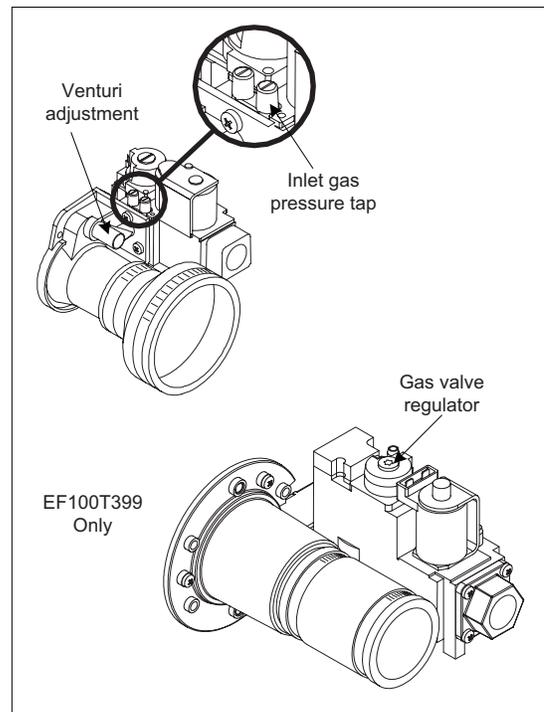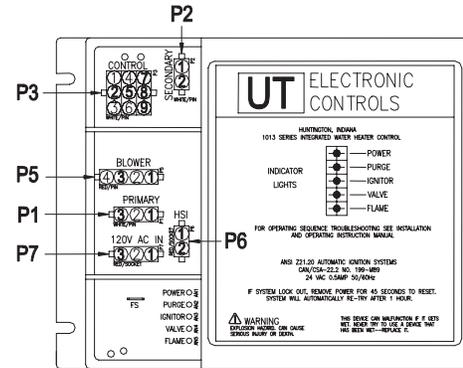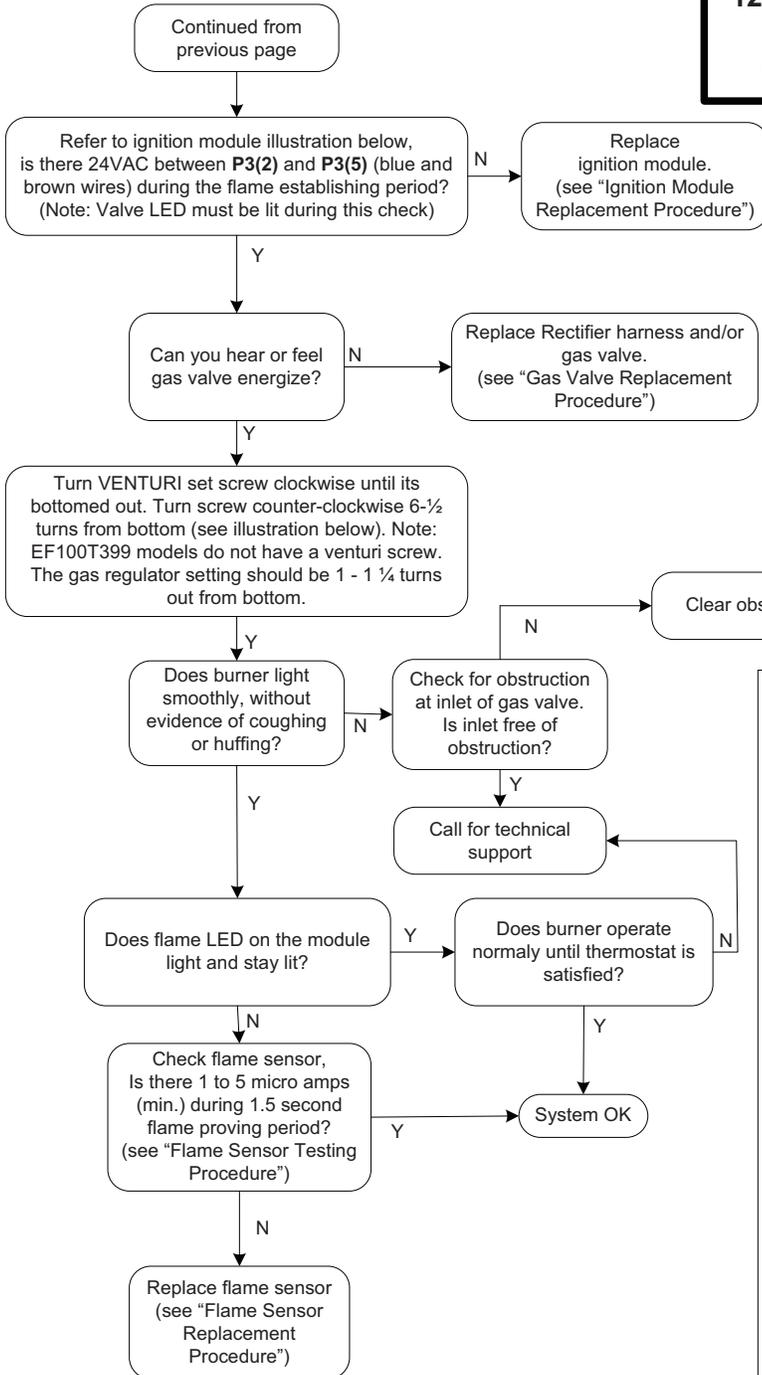




SERVICE PROCEDURE EF-II

Combustion System Testing and Replacement

Observe burner operation through the sight glass located on the combustion insert mounting flange. Normal burner operation should ignite smoothly, without evidence of coughing or huffing upon ignition. The burner flame should be a blue flame near the burner surface in a uniform flame pattern. Occasional yellow or white streaks are normal.

Serial Numbers including and AFTER GB13006174 and ALL EFR models





Note: On higher input models using metal fiber mesh burner a red glow from the burner surface is normal.

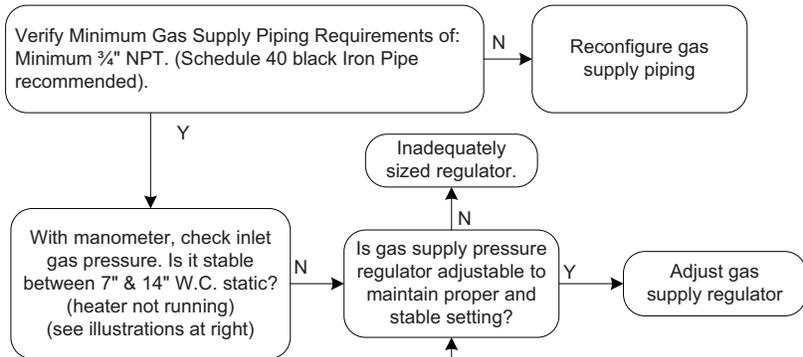


⚠ WARNING
 Removing screw from inlet gas pressure tap will immediately allow gas to flow from pressure tap.

⚠ WARNING
 120 volt potential exposure. Use caution making voltage checks to avoid personal injury.

Check resistance of high voltage cable. Resistance should be 0-1 ohms. If resistance is high, replace spark cable. If spark cable is good, replace Control Board.

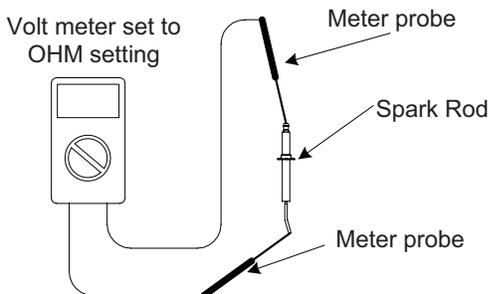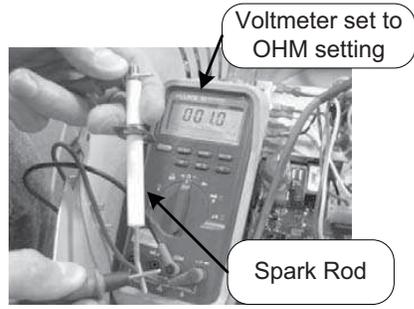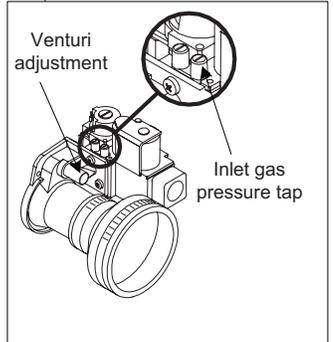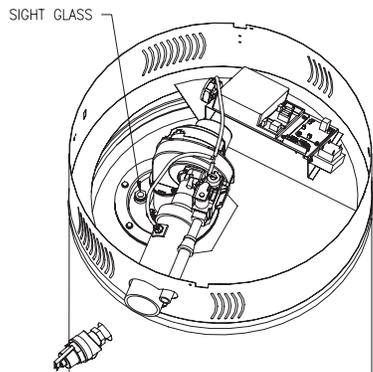

CHECK SPARK ROD RESISTANCE

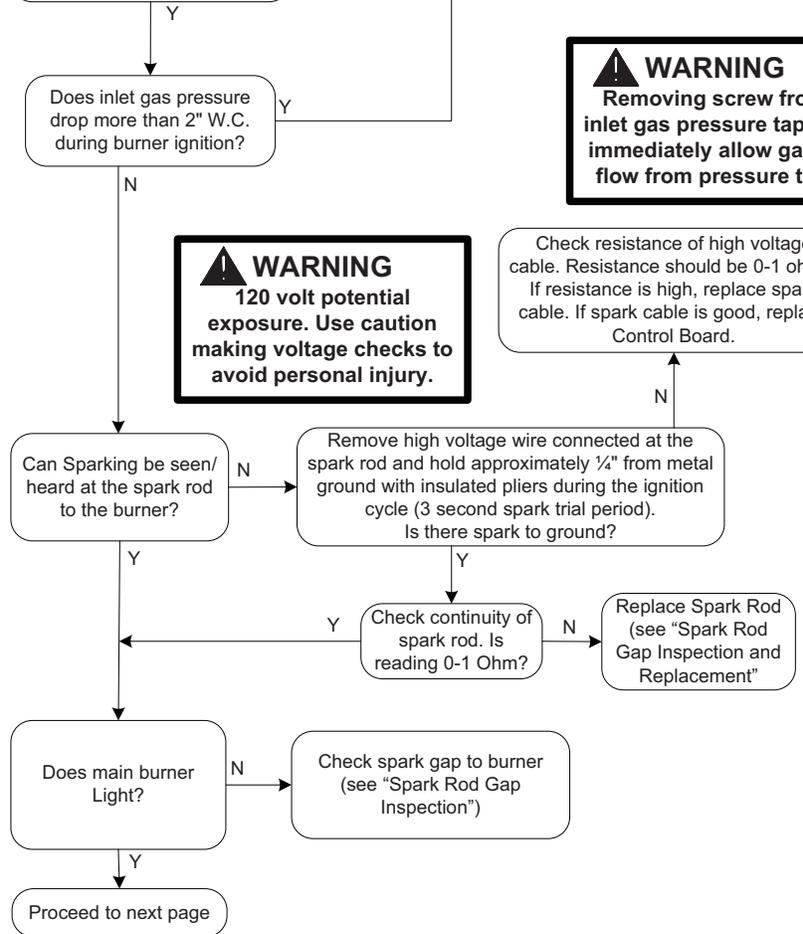






SERVICE PROCEDURE EF-II

Combustion System Testing and Replacement

Observe burner operation through the sight glass located on the combustion insert mounting flange. Normal burner operation should ignite smoothly, without evidence of coughing or huffing upon ignition. The burner flame should be a blue flame near the burner surface in a uniform flame pattern. Occasional yellow or white streaks are normal.


Serial Numbers including and AFTER GB13006174 and ALL EFR models

WARNING
 120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

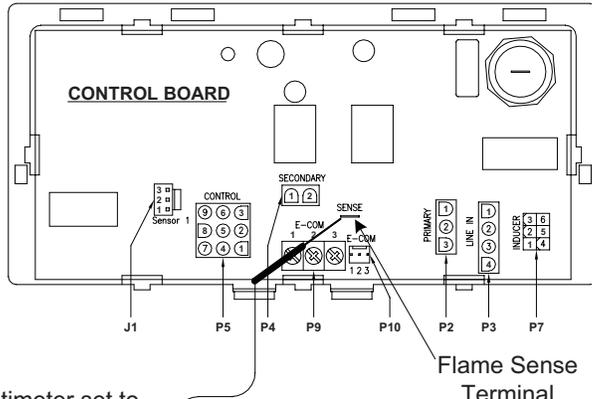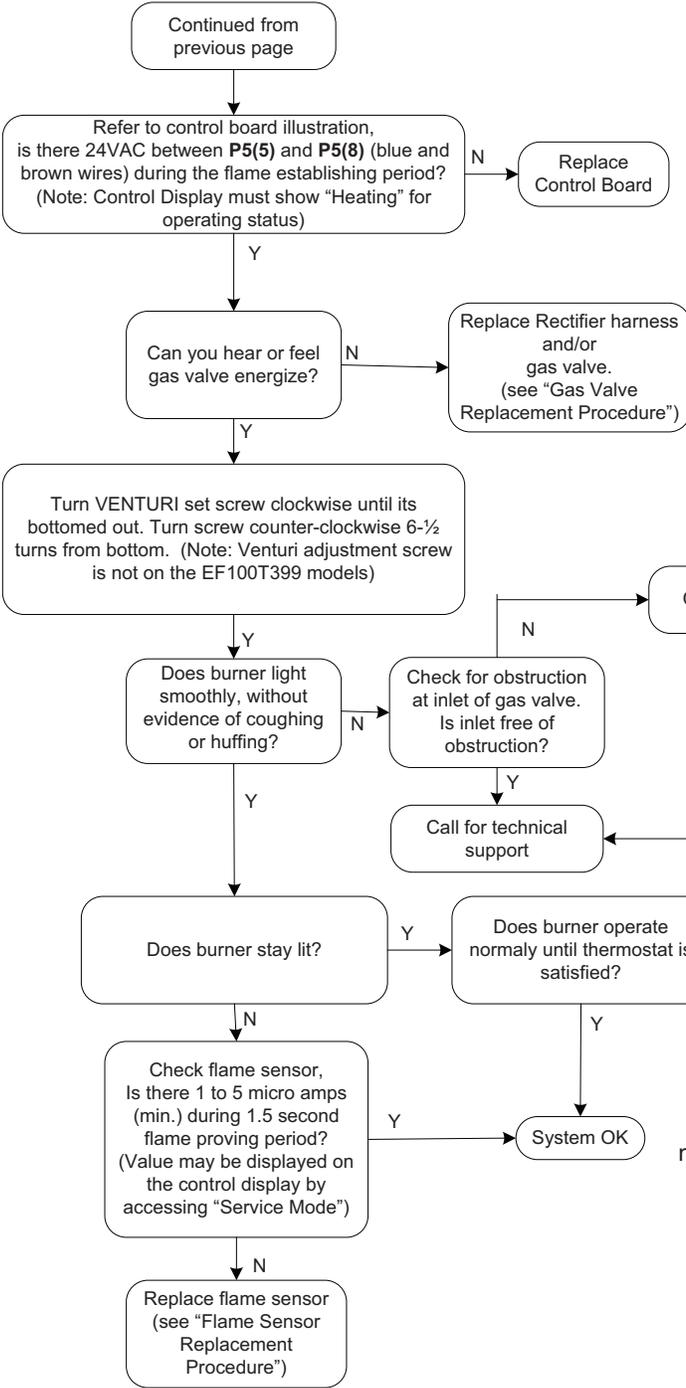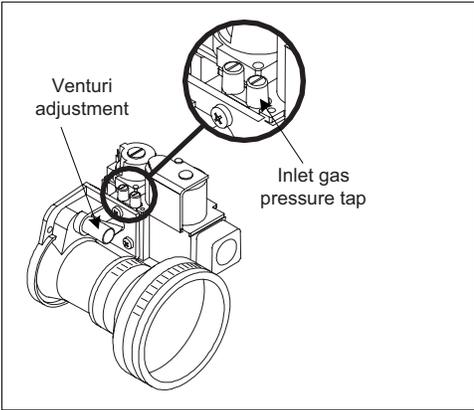

Multimeter set to microamp (µA) setting

CHECK FLAME SENSE ROD MICROAMPS

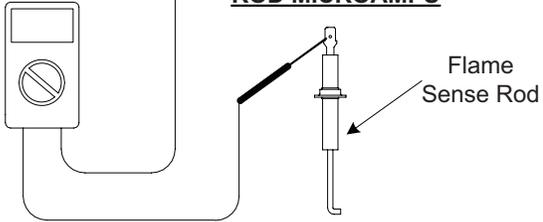



SERVICE PROCEDURE EF-II

Combustion System Testing and Replacement


⚠ WARNING
Heater components may be HOT when performing the following steps in this procedure.
Take necessary precaution to prevent personal injury.

Combustion System Removal Procedure

- Step 1. Position main power switch to "OFF".
- Step 2. Disconnect (unplug) water heater from 120 volt power source.
- Step 3. Turn off gas supply to water heater.
- Step 4. Un-latch and remove surround cover from top of heater.
- Step 5. From the gas valve, disconnect the gas connection, PVC venting, Silicone tubing and wire harness.
- Step 6. Disconnect wire harnesses flame sensor and blower.

⚠ WARNING
120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

For Hot Surface Ignition models, disconnect wire harness from hot surface igniter.
For Direct Spark Ignition models, disconnect high voltage cable from spark rod connection.

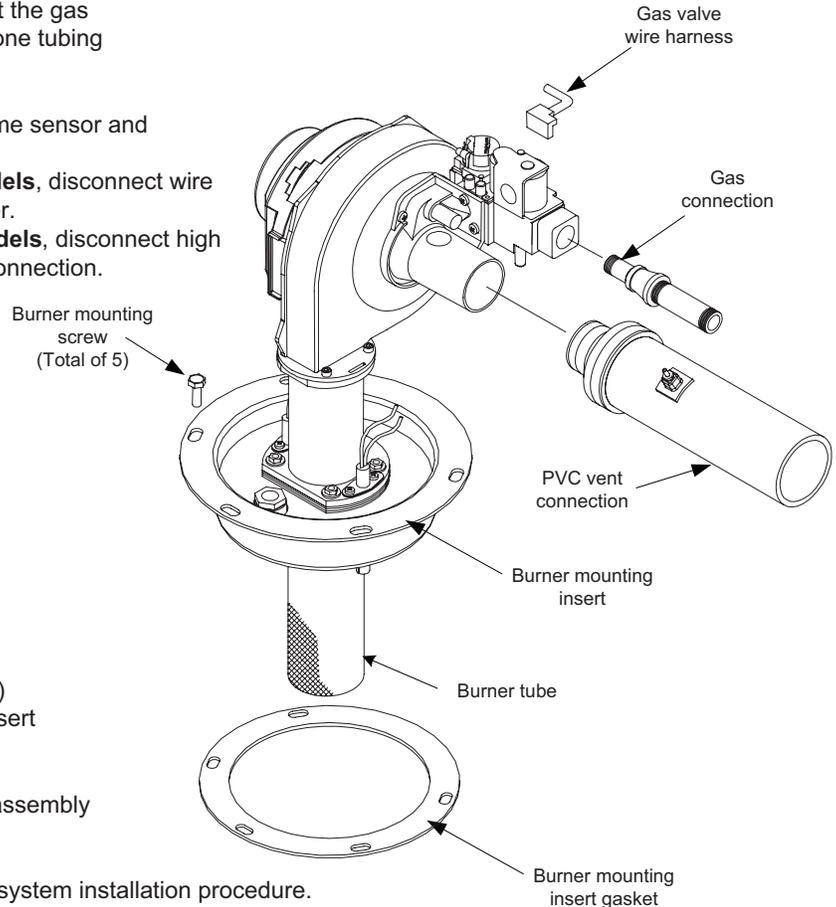

- Step 7. Remove the 5 bolts (1/2" socket) holding the burner mounting insert in place.
- Step 8. Carefully remove combustion assembly with gasket from water heater.
- Step 9. See next page for combustion system installation procedure.



SERVICE PROCEDURE EF-II


Combustion System Testing and Replacement

Combustion System Replacement Procedure

- Step 1. Fully inspect burner mounting insert gasket for the following:
- a) Tears
 - b) Missing material
 - c) Cracks
 - d) Dirt or debris
 - e) Other imperfections that would inhibit proper seal

If gasket is NOT affected by any of the above, gasket replacement is not required.

- Step 2. Install combustion assembly using new gasket or fully inspected gasket from step 1. Secure combustion assembly at the burner mounting insert using screws from step 6 on previous page. Tighten screws evenly.
- Step 3. Reconnect wire harnesses to hot surface igniter or high voltage cable to spark rod, flame sensor, blower and gas valve.
- Step 4. Reconnect PVC venting, gas supply and silicone tubing to gas valve. Turn on gas supply to heater and check for gas leaks, repair any gas leaks found.
- Step 5. Restore 120 volt power supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instruction located in the installation and operating instruction manual.
- Step 6. Replace surround cover on top of water heater.

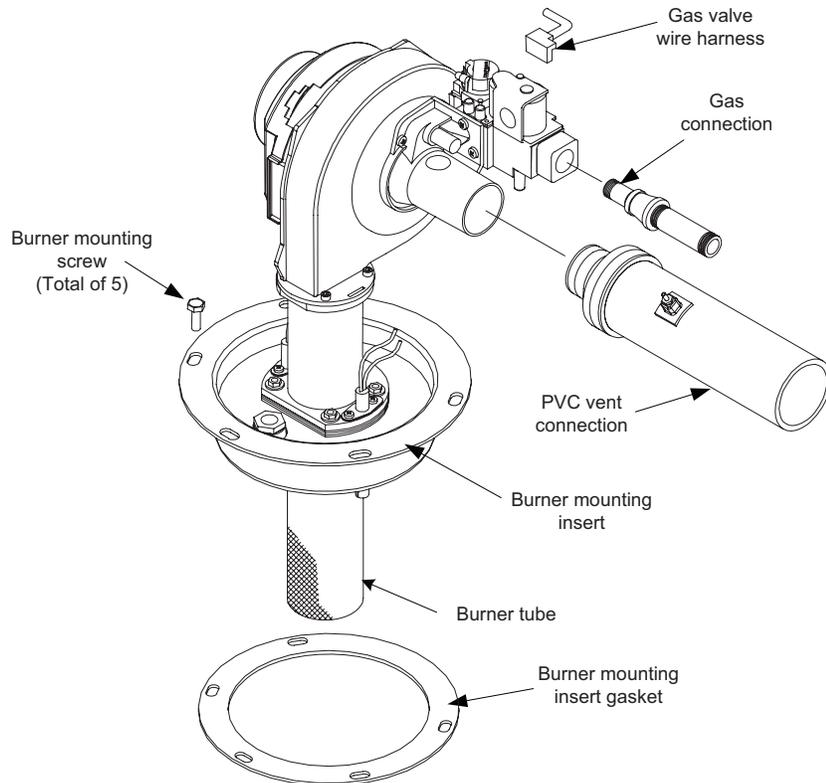



SERVICE PROCEDURE EF-III

Burner Tube Inspection and Replacement

▲ WARNING


Heater components may be **HOT** when performing the following steps in this procedure. Take necessary precaution to prevent personal injury.

Burner Tube Removal Procedure

- Step 1. Position main power switch to "OFF".
- Step 2. Disconnect (unplug) water heater from 120 volt power source.
- Step 3. Turn off gas supply to water heater.
- Step 4. Un-latch & remove surround cover from top of heater.
- Step 5. From the gas valve, disconnect the gas connection, PVC venting, wire harness and silicone tubing.
- Step 6. Disconnect wire harness from blower assembly.
- Step 7. Remove the two screws holding each the hot surface igniter and flame sensor in place (long reach magnetic Phillips screw driver). Carefully remove hot surface igniter and flame sensor from combustion assembly. For Direct Spark Ignition models, remove the two screws on the spark rod bracket and remove the spark rod.
- Step 8. Remove the 4 nuts (7/16" wrench) holding the burner transition in place. Lift the blower/gas valve transition assembly from burner mounting insert, remove gasket and set aside.
- Step 9. Remove burner tube from burner mounting insert. See next page for burner tube inspection procedure.

▲ WARNING

120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

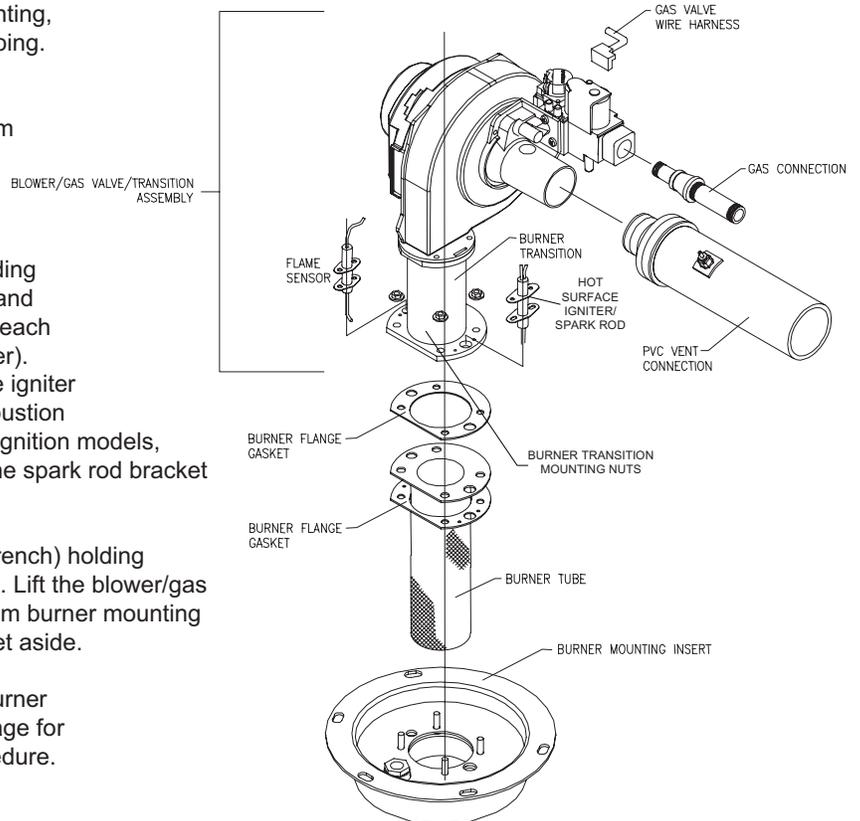



SERVICE PROCEDURE EF-III

Burner Tube Inspection and Replacement

⚠ WARNING

Heater components may be HOT when performing the following steps in this procedure. Take necessary precaution to prevent personal injury.

Burner Tube Inspection

- Step 1. **Inspect burner tube as follows (BSI ceramic fiber mesh burner, water heaters prior to serial number "CK") :**
- a) Visually inspect ceramic fiber mesh, mesh should be uniform in appearance without large gaps, tears or fraying. Mesh should have uniform pattern allowing for unrestricted gas flow.
 - b) Gently squeeze burner tube, Burner tube should feel firm without any soft areas around the sides or at the bottom.
 - c) Visually inspect inside burner tube, Burner tube should be intact with no areas of deterioration. Ports should be free of any debris.
- Inspect burner tube as follows (Acotech metal fiber mesh burner, water heaters with "CK" serial number or later).**
- a) Outer fiber mesh should be uniform with no tears or deterioration.
- Step 2. If burner tube is affected by any of the above, replacement is required. Refer to burner tube replacement procedure below.

Burner Tube Replacement Procedure

Note: New metal fiber mesh burner (Acotech) is the replacement burner for the BSI ceramic fiber sock burner. The length of burner will not be the same as the previous BSI burner. Provide the model and serial number for the correct replacement burner.

- Step 1. Fully inspect burner flange gaskets, igniter and flame sensor gaskets for the following:
- a) Tears
 - b) Missing material
 - c) Cracks
 - d) Dirt or debris
 - e) Other imperfections that would inhibit proper seal
- If gaskets are NOT affected by any of the above, gasket replacement is not required.
- Step 2. Install burner tube with gaskets into burner mounting insert. Be sure gasket surfaces are free of debris.
- Step 3. Reconnect the blower/gas valve/transition assembly to burner mounting insert. Secure using nuts from step 8 on previous page.
- Step 4. Carefully reinstall flame sensor with gasket and hot surface igniter with gasket and secure with screws from step 7 on previous page. Reconnect wire harnesses to sensor and igniter.
- Step 5. Reconnect wire harnesses to blower motor and to gas valve.
- Step 6. Reconnect PVC venting, gas supply and silicone tubing to gas valve. Turn on gas to heater and check for gas leaks, repair any gas leaks found.
- Step 7. Restore 120 volt power supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instruction located in the installation and operating instruction manual.
- Step 8. Replace surround cover on top of water heater.




Service Procedure EF-IV Gas Valve Replacement

Gas Valve Replacement Procedure

- Step 1. Position main power switch to "OFF".
- Step 2. Disconnect (unplug) water heater from 120 volt power source.
- Step 3. Turn off gas supply to water heater.
- Step 4. Un-latch & remove surround cover from top of heater.
- Step 5. From the gas valve, disconnect the gas connection, PVC venting, wire harness and silicone tubing.
- Step 6. Remove the 2 gas valve mounting screws (Torx bit) located at the 11:00 O'clock & 5:00 O'clock position on the venturi mounting flange and remove gas valve from water heater.
- Step 7. Remove any residual gasket material from blower and venturi mounting flange.

⚠ WARNING
120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

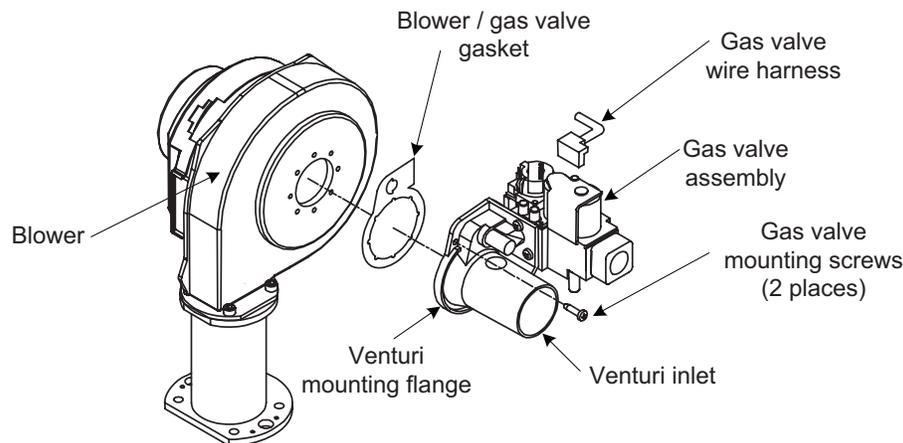

- Step 8. Install new gas valve with new gasket provided. Secure gas valve in place using screws from step 6.
- Step 9. Reconnect PVC venting, gas supply, silicone tubing & wire harness to gas valve. Turn on gas supply to heater and check for gas leaks, repair any gas leaks found.
- Step 10. Restore 120 volt power supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instruction located in the installation and operating instruction manual.
- Step 11. Replace surround cover on top of water heater.




Service Procedure EF-V Blower Testing and Replacement

Blower Replacement Procedure

- Step 1. Position main power switch to "OFF".
- Step 2. Disconnect (unplug) water heater from 120 volt power source.
- Step 3. Turn off gas supply to water heater.
- Step 4. Un-latch & remove surround cover from top of heater.
- Step 5. Disconnect wire harness from blower.
- Step 6. Disconnect intake vent and gas supply from gas valve assembly.
- Step 7. Remove the 2 gas valve mounting screws (Torx bit) located at the 11:00 O'clock & 5:00 O'clock position on the venturi mounting flange.
- Step 8. Remove The 4 blower flange mounting screws (5/32 Allen wrench) and remove blower from transition flange.

⚠ WARNING
120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

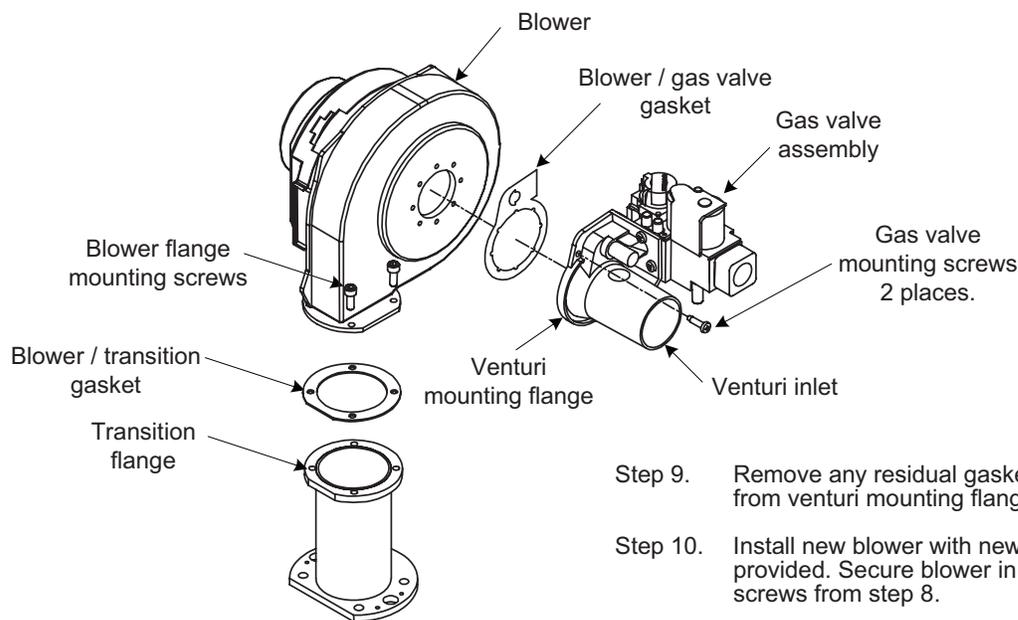

- Step 9. Remove any residual gasket material from venturi mounting flange and transition flange.
- Step 10. Install new blower with new gasket provided. Secure blower in place using screws from step 8.
- Step 11. Reconnect gas valve assembly to blower with new gasket provided. Secure gas valve in place using screws from step 7.
- Step 12. Reconnect intake vent and gas line to gas valve assembly and check for gas leaks repair any leaks found.
- Step 13. Reconnect wire harness to blower assembly, restore 120 volt power supply & Gas supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instructions located in the installation and operating instruction manual.
- Step 14. Replace surround cover on top of water heater.




Service Procedure EF-VI

Exhaust Pressure Switch Testing and Replacement

For serial numbers prior to "CF"

Sequence of operation:

With the thermostat calling for heat, prior to energizing blower, the ignition module checks the exhaust pressure switch for normal switch position of normally open. If the exhaust pressure switch contacts are closed (not in normal position), the ignition module waits 45 seconds for the pressure switch contacts to open. If the pressure switch contacts do not open after 45 seconds, the ignition module locks out with the PURGE LED flashing indicating a pressure switch fault.

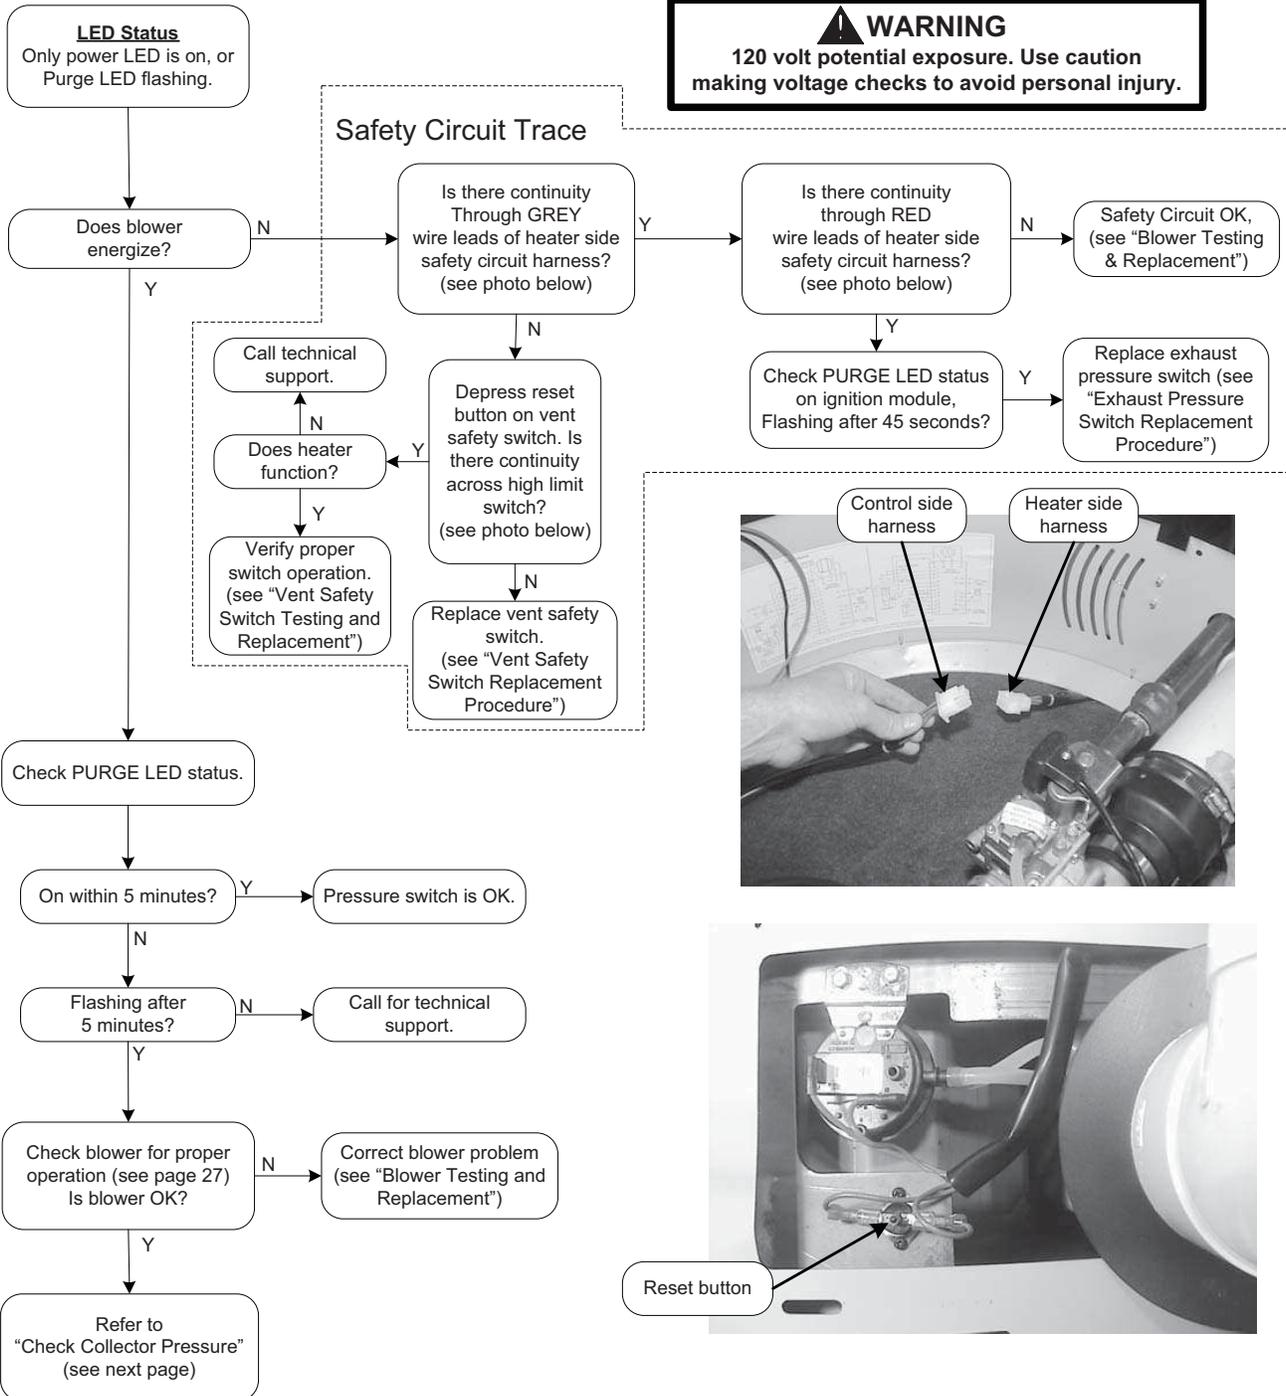





Service Procedure EF-VI

Exhaust Pressure Switch Testing and Replacement

For serial numbers prior to "CF"

Check Collector Pressure

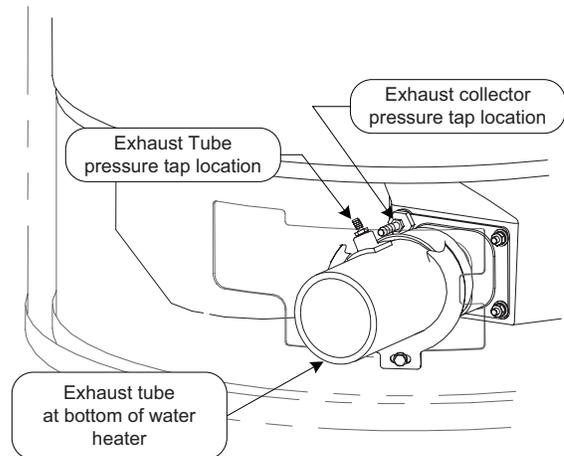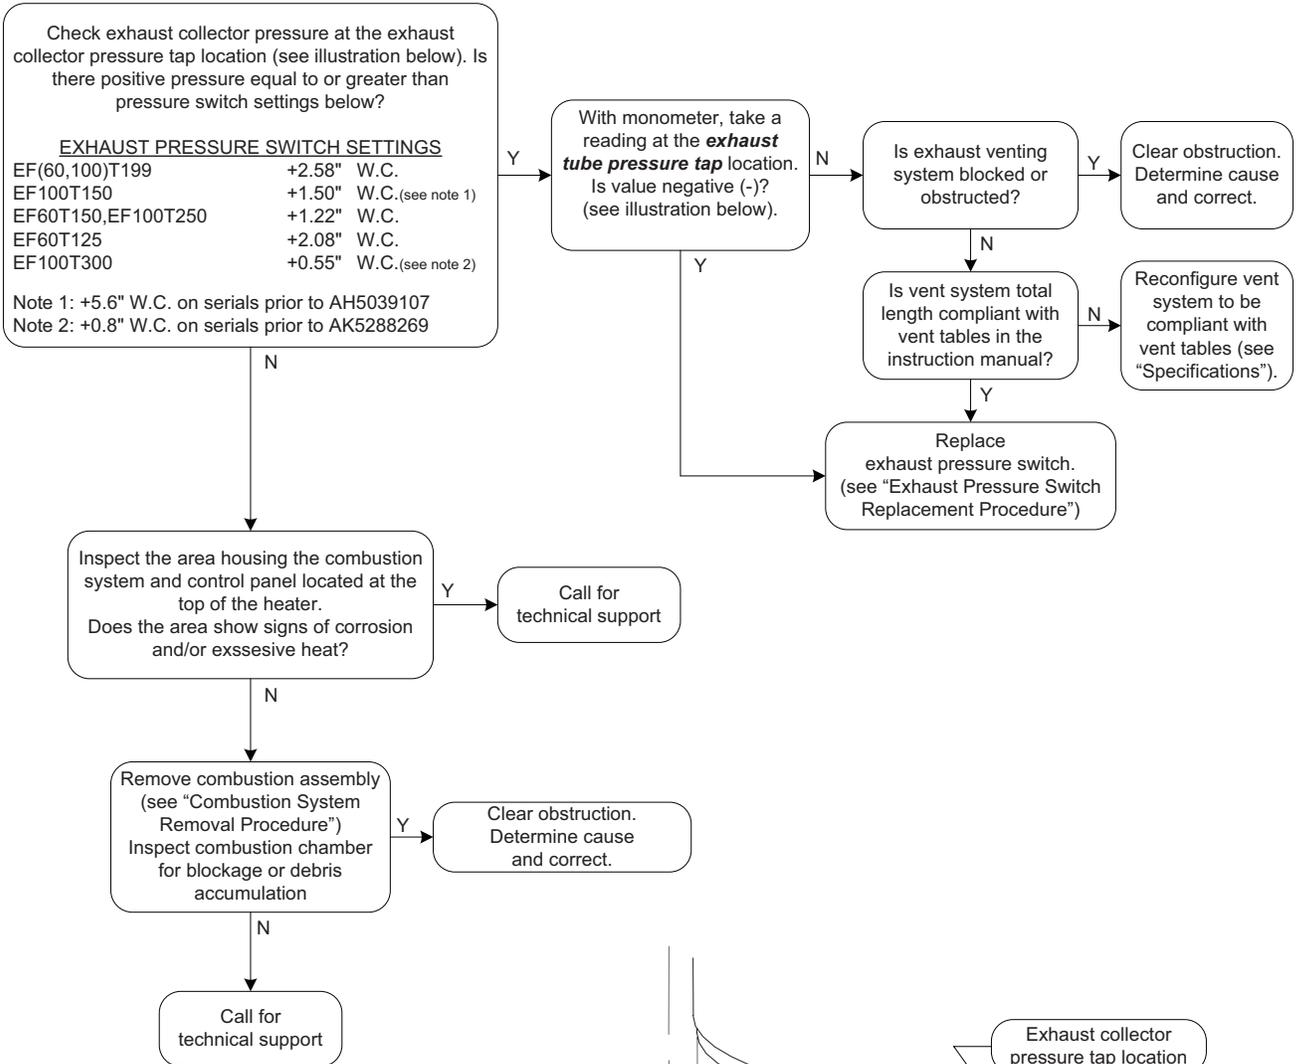






Service Procedure EF-VI

Exhaust Pressure Switch Testing and Replacement

For serial numbers prior to "CF"

Exhaust Pressure Switch Replacement Procedure

- Step 1. Position main power switch to "OFF" position.
- Step 2. Loosen adhesive backed rubber escutcheon from service panel access cover and slide escutcheon back along exhaust pipe to allow for removal of cover.
- Step 3. Remove screws from service panel access cover (1/4" nut driver) and remove cover from heater. (see photos at right)
- Step 4. Disconnect silicone tubing and wire leads from pressure switch. (see photos at right)
- Step 5. Remove pressure switch mounting screws (5/16" wrench) and remove pressure switch.
- Step 6. Assemble new pressure switch to heater using screws from step 5.
- Step 7. Reconnect wire leads. Note: wire leads are interchangeable with either terminal.
- Step 8. Reconnect silicone tubing to pressure switch as follows:

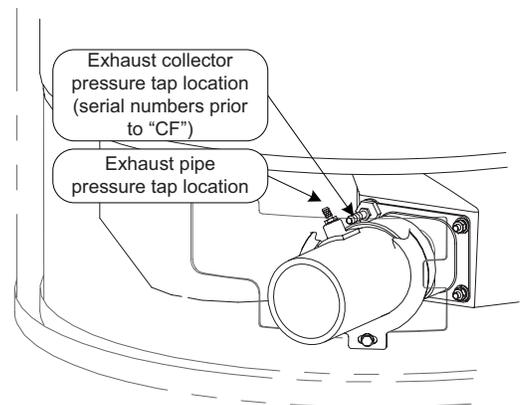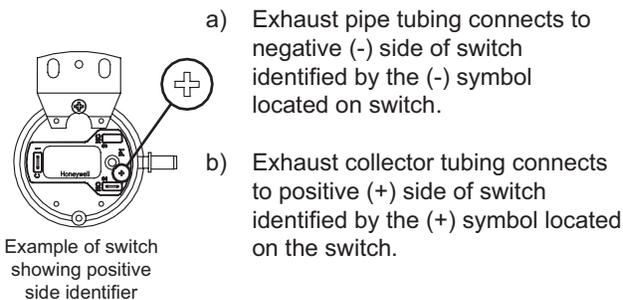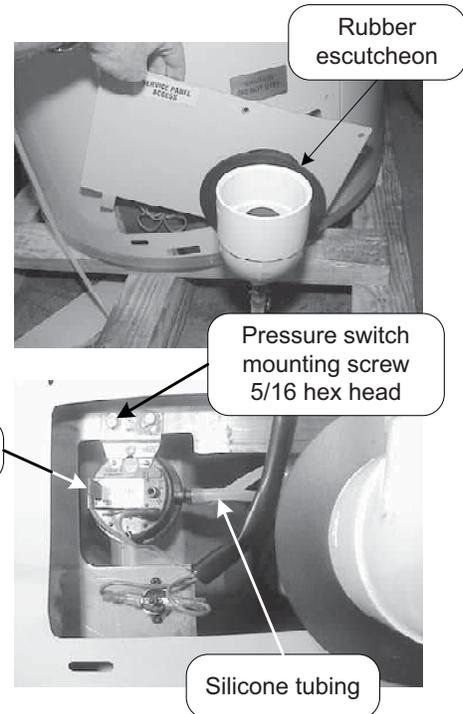

- Step 9. Restore 120 volt power supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instructions located in the installation and operating instruction manual.
- Step 10. Reinstall service panel access cover and rubber escutcheon.




Service Procedure EF-VI

Blocked Vent Pressure Switch Testing and Replacement for serial number "CF" and later

Sequence of operation:

The blocked vent pressure switch monitors the pressure in the exhaust tube. The switch contacts are normally closed and will not open unless there is a blockage in the exhaust venting or terminal (snow, ice, debris). If the blocked vent pressure switch contacts open after the thermostat initiates the blower, the blower will remain on for 5 minutes waiting for the contacts to close. If the contacts remain open, the blower will stop and the PURGE LED will flash for hot surface ignition models, or error code 29 will display for direct spark ignition models.

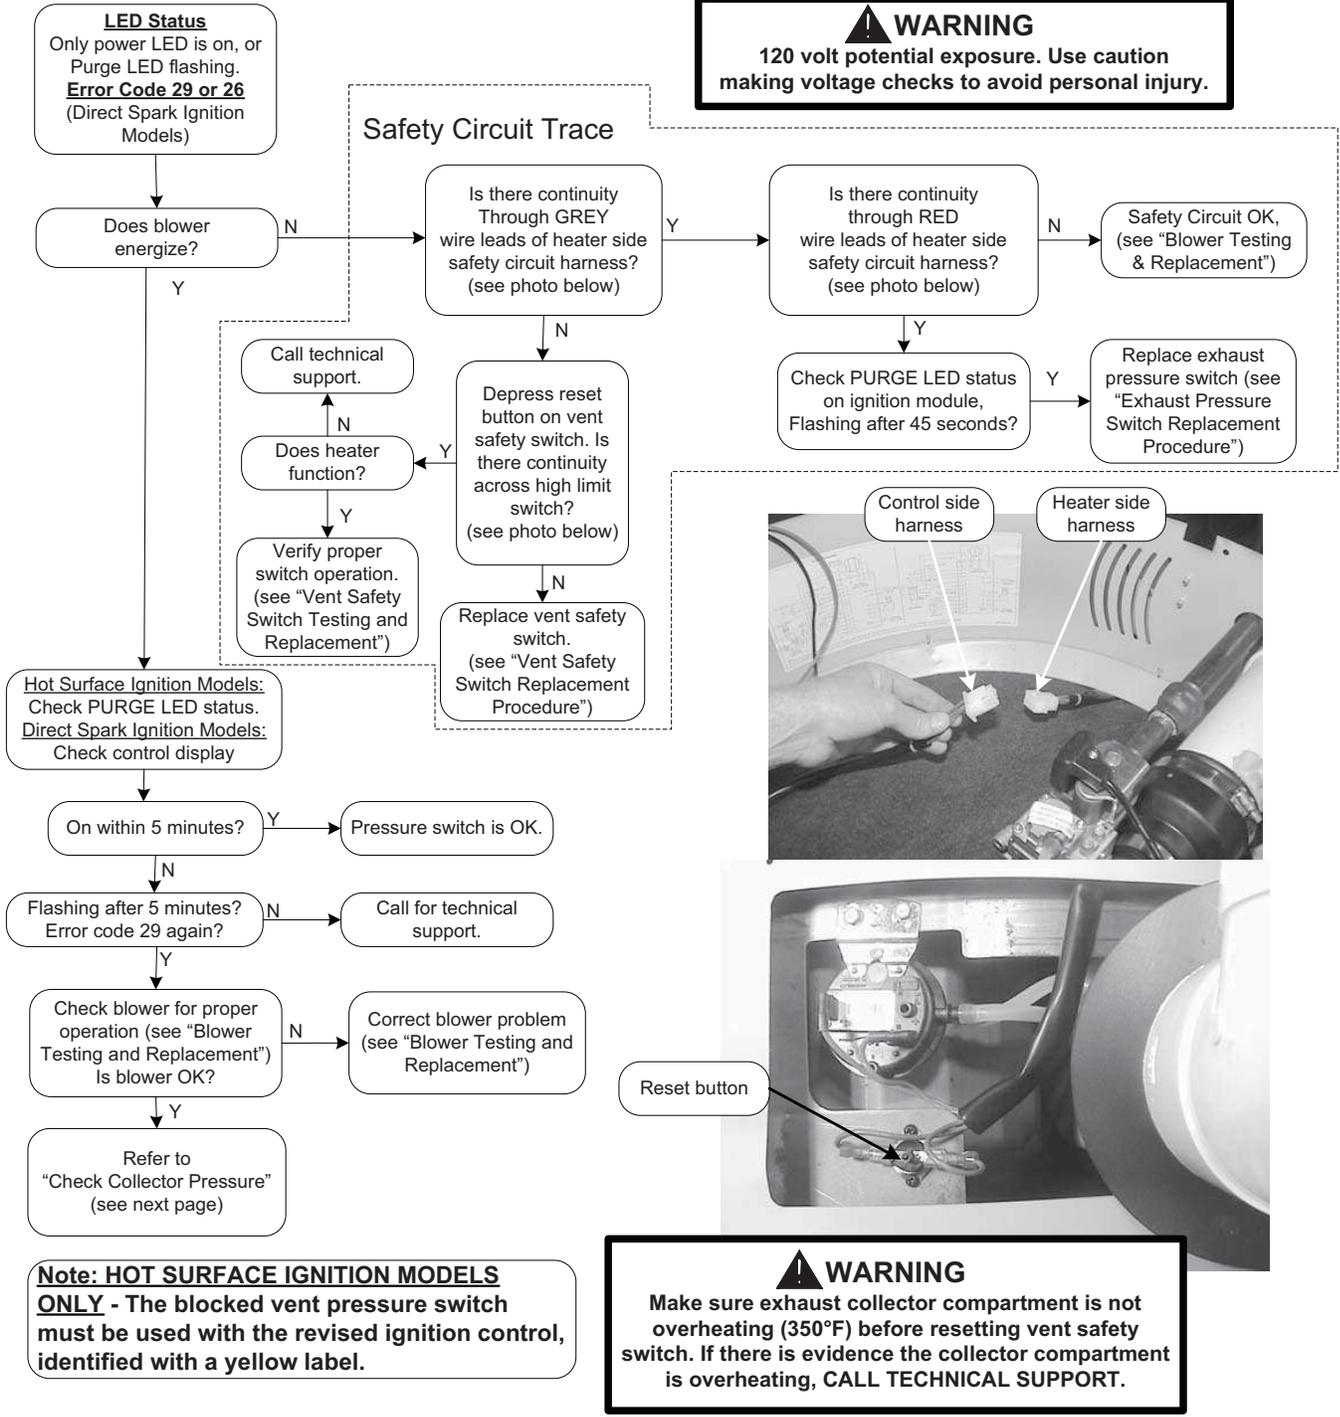




Service Procedure EF-VI

Blocked Vent Pressure Switch Testing and Replacement for serial number "CF" and later

Check Exhaust Tube Pressure

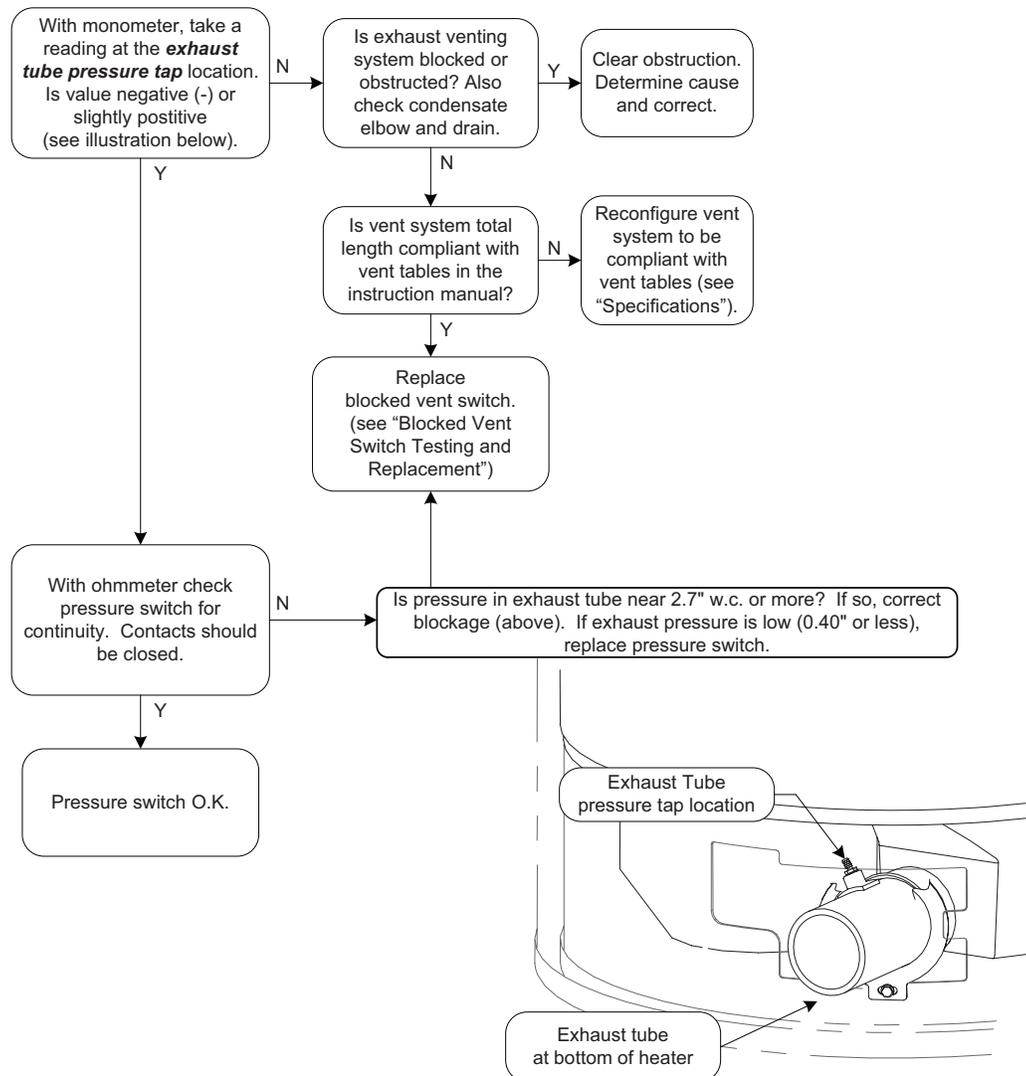





Service Procedure EF-VI

Blocked vent Switch Testing and Replacement

For serial number "CF" or later

Exhaust Pressure Switch Replacement Procedure

- Step 1. Position main power switch to "OFF" position.
- Step 2. Loosen adhesive backed rubber escutcheon from service panel access cover and slide escutcheon back along exhaust pipe to allow for removal of cover.
- Step 3. Remove screws from service panel access cover (1/4" nut driver) and remove cover from heater. (see photos at right)
- Step 4. Disconnect silicone tubing and wire leads from pressure switch. (see photos at right)
- Step 5. Remove pressure switch mounting screws (5/16" wrench) and remove pressure switch.
- Step 6. Assemble new pressure switch to heater using screws from step 5.
- Step 7. Reconnect wire leads. Note: wire leads are interchangeable with either terminal.
- Step 8. Reconnect silicone tubing to pressure switch as follows:
- Exhaust pipe tubing connects to single tap located on switch
- Step 9. Restore 120 volt power supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instructions located in the installation and operating instruction manual.
- Step 10. Reinstall service panel access cover and rubber escutcheon.

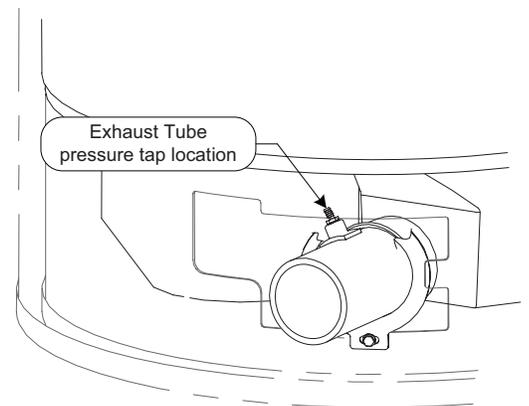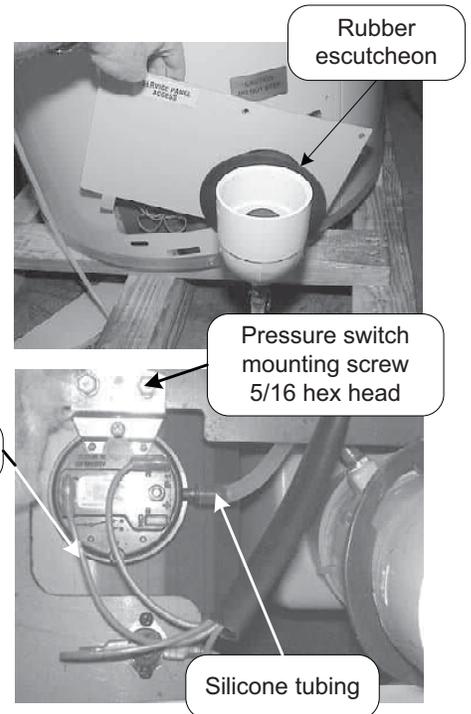





Service Procedure EF-VII


Hot Surface Igniter Testing and Replacement

Hot surface Igniter Testing Procedure

WARNING
 120 volt potential exposure. Use caution making voltage checks to avoid personal injury. Igniter may be too hot to handle, take necessary precautions

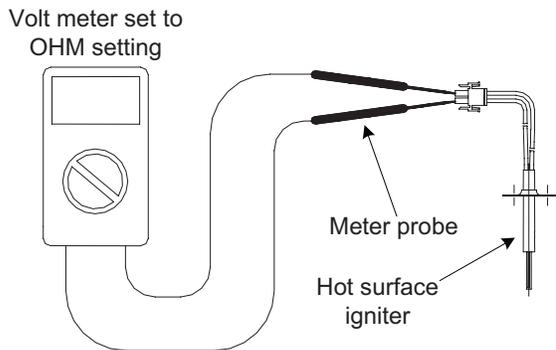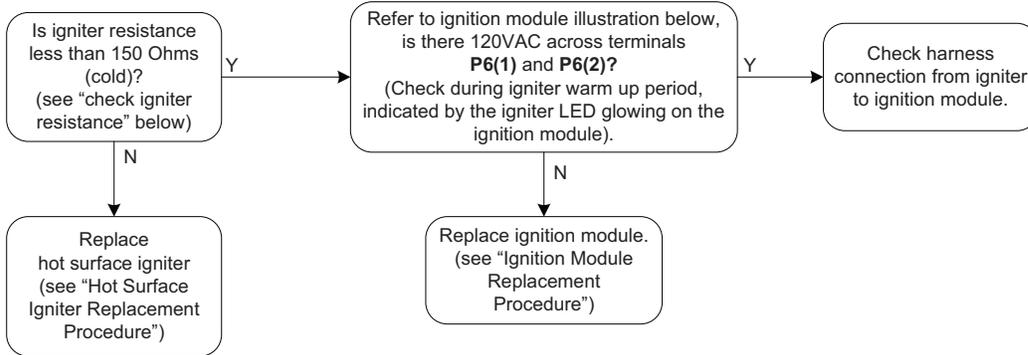

CHECK IGNITER RESISTANCE

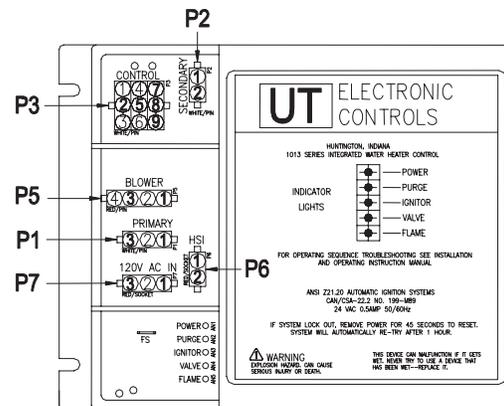

IGNITION MODULE




Service Procedure EF-VII

Hot Surface Igniter Testing and Replacement

Hot surface Igniter Replacement Procedure

- Step 1. Position main power switch to "OFF"
- Step 2. Disconnect (unplug) water heater from 120 volt power source.
- Step 3. Un-latch & remove surround cover from top of heater.
- Step 4. Fold back insulation in front of combustion assembly to expose hot surface igniter. (see photo at right)
- Step 5. Disconnect igniter wire leads from ignition module.
- Step 6. Remove the 2 igniter mounting screws (magnetic tip, long reach Phillips screw driver) and remove igniter and gasket from transition base flange.
- Step 7. Remove any residual gasket material from transition base flange.

⚠ WARNING
120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.


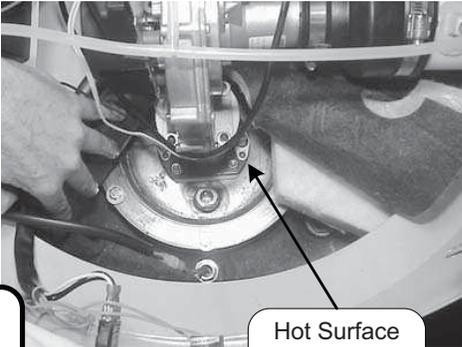


Hot Surface Igniter

Note:
New replacement igniter will not have a shield over element. Handle carefully to prevent breakage.

Note:
Do not handle igniter element or allow foreign material to come in contact with element.

- Step 8. Install new igniter with new gasket provided using screws from step 5. Arrange igniter flange with off-center hole towards front of heater.

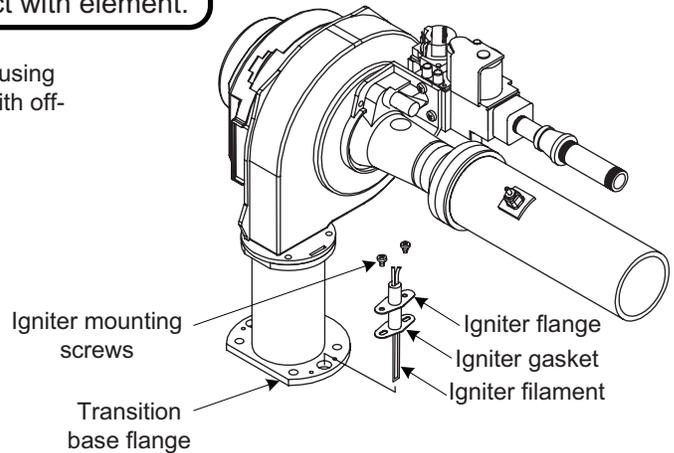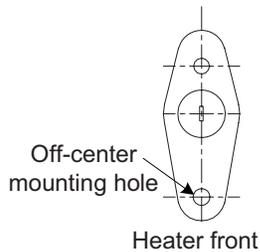

- Step 9. Reconnect igniter wire harness.
- Step 10. Fold insulation back into place. Be sure no wires are in contact with burner flange.
- Step 11. Restore 120 volt power supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instructions located in the installation and operating instruction manual.
- Step 12. Replace surround cover on top of water heater.





Service Procedure EF-VIII


Flame Sensor Testing and Replacement

Flame Sensor Testing Procedure

WARNING
 120 volt potential exposure. Use caution making voltage checks to avoid personal injury. Flame sensor may be too hot to handle, take necessary precautions

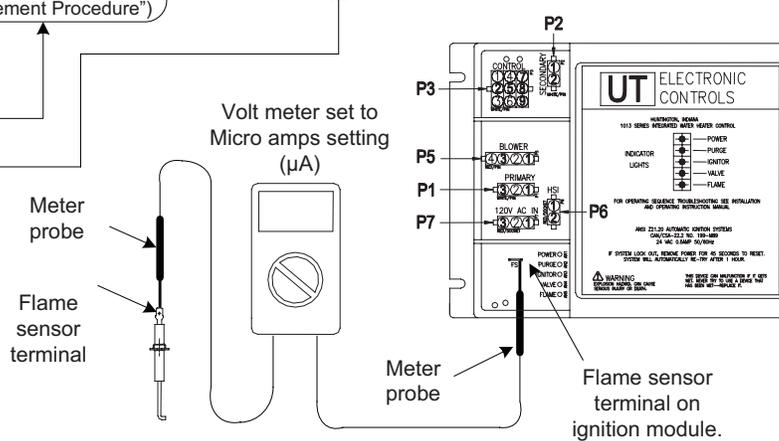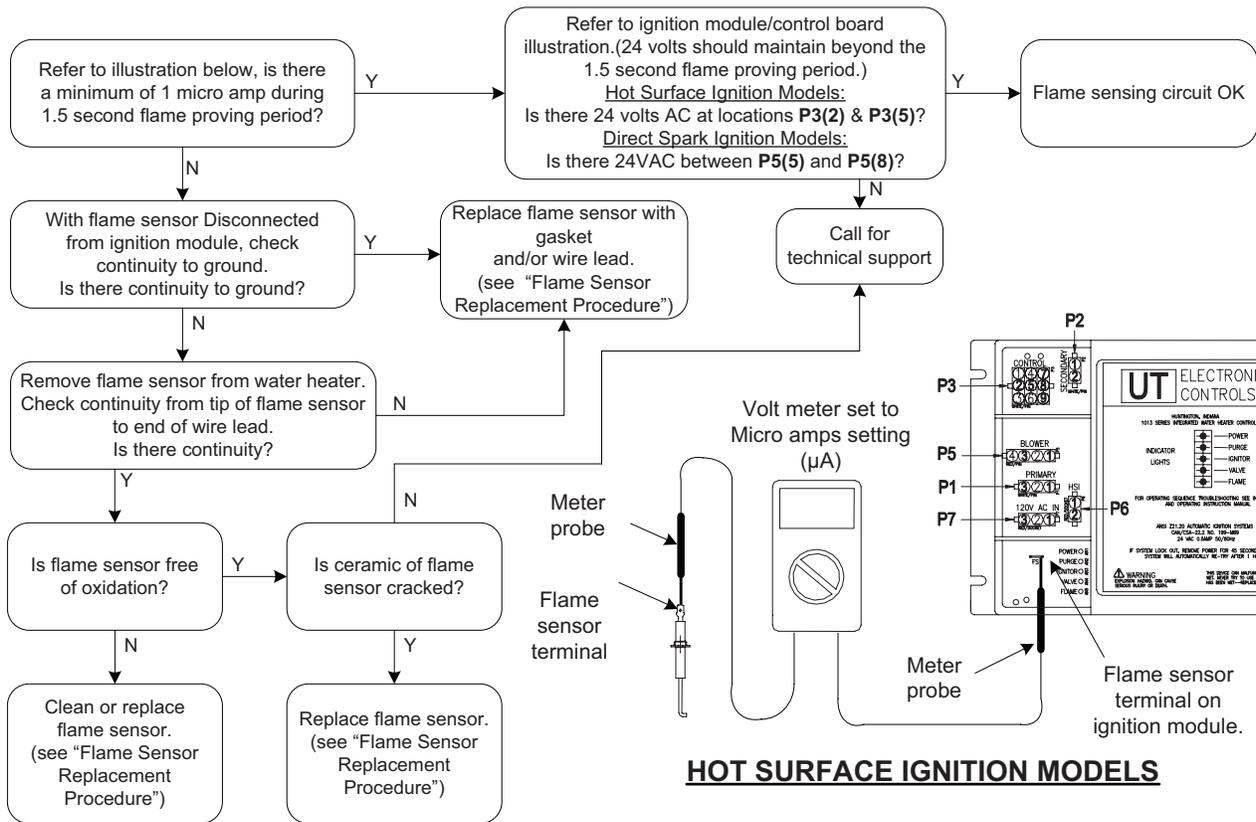

HOT SURFACE IGNITION MODELS

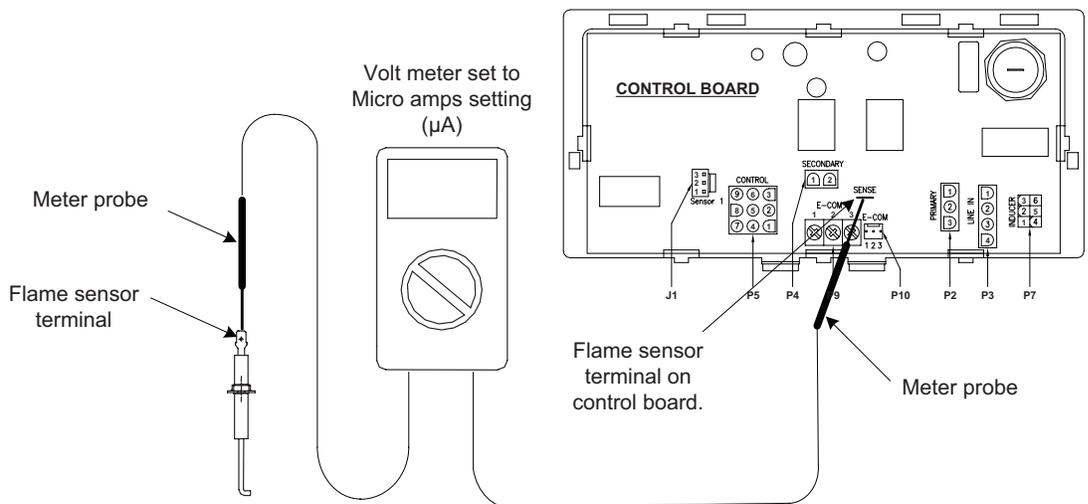

DIRECT SPARK IGNITION MODELS



Service Procedure EF-VIII


Flame Sensor Testing and Replacement

Flame Sensor Replacement Procedure

- Step 1. Position main power switch to "OFF"
- Step 2. Disconnect (unplug) water heater from 120 volt power source.
- Step 3. Un-latch & remove surround cover from top of heater.


⚠ WARNING
120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

- Step 4. Fold back insulation in front of combustion assembly to expose flame sensor. (see photo at right)
- Step 5. Disconnect wire lead from flame sensor.

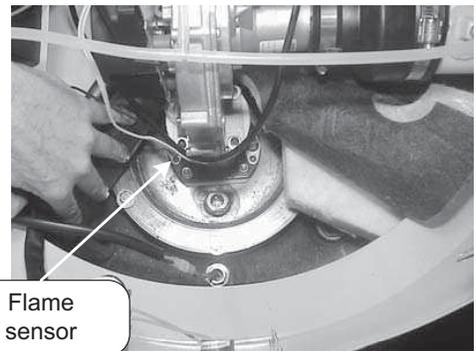

- Step 6. Remove the 2 sensor mounting screws (magnetic tip, long reach Phillips screw driver) and remove flame sensor & gasket from transition base flange.
- Step 7. Remove any residual gasket material from transition base flange.

- Step 8. Install new flame sensor with new gasket provided using screws from step 6. Arrange flame sensor with hook towards burner.

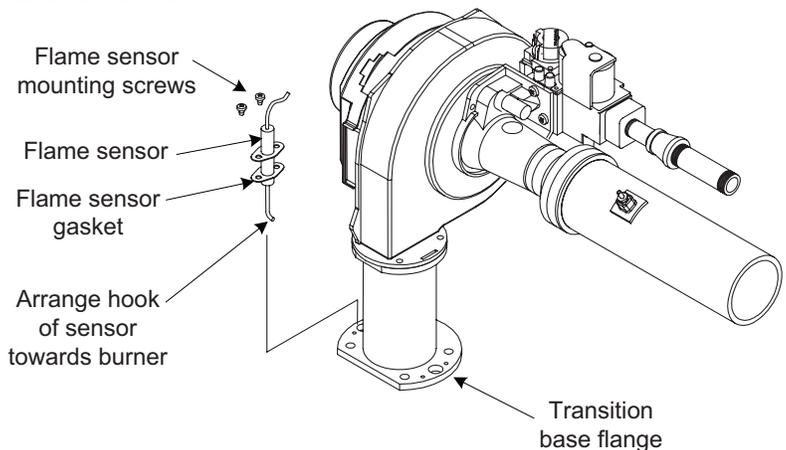

- Step 9. Reconnect flame sensor wire.
- Step 10. Fold insulation back into place. Be sure no wires are in contact with burner flange.
- Step 11. Restore 120 volt power supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instructions located in the installation and operating instruction manual.
- Step 12. Replace surround cover on top of water heater.



SERVICE PROCEDURE EF-IX




Spark Rod Gap Adjustment and Replacement

Spark Rod Gap Inspection and Adjustment

- Step 1. Remove combustion system as described in "Combustion System Removal Procedure".
- Step 2. Measure spark gap between the spark rod and burner tube. Acceptable spark gap is between 3/16" - 1/4" (see photo below).
- Step 3. If spark gap is not between 3/16" - 1/4", the spark rod may be carefully bent by supporting the end near the ceramic insulator with pliers and bending the end near the burner tube with needle nose pliers (see photo below).
- Step 4. Re-measure and verify spark gap is between 3/16" - 1/4" after bending.
- Step 5. Reinstall the combustion system per "Combustion System Replacement Procedure" and check several ignitions to ensure the burner lights smoothly.

⚠ WARNING
Spark gap must be set to 3/16" to 1/4". Failure to set and verify proper spark gap may result in a delayed ignition resulting in damage to the water heater.

⚠ CAUTION
Use caution while performing these steps to prevent stressing or cracking the ceramic insulator.

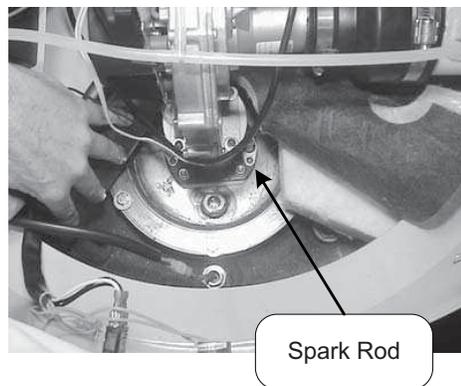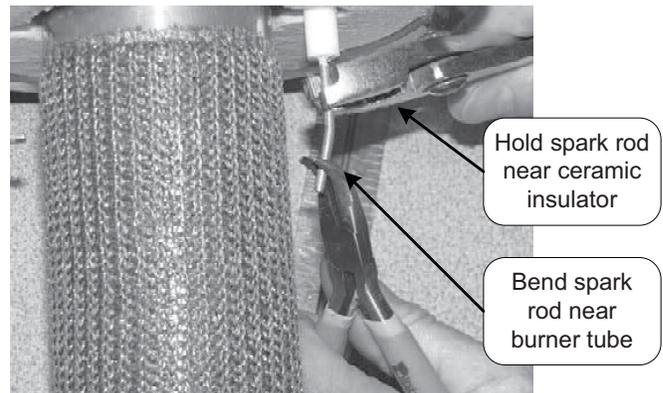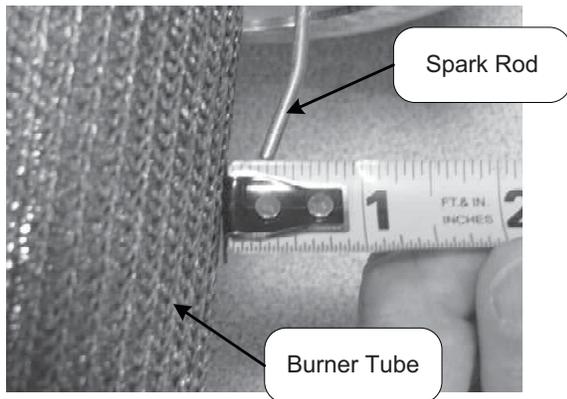



SERVICE PROCEDURE EF-IX


Spark Rod Gap Adjustment and Replacement

Spark Rod Replacement Procedure


- Step 1. Position main power switch to "OFF"
- Step 2. Disconnect (unplug) water heater from 120 volt power source.
- Step 3. Un-latch & remove surround cover from top of heater.
- Step 4. Fold back insulation in front of combustion assembly to expose spark rod. (see photo at right)
- Step 5. Disconnect wire lead from spark rod.
- Step 6. Remove the 2 mounting screws (magnetic tip, long reach Phillips screw driver) and remove spark rod & gasket from transition base flange.
- Step 7. Remove any residual gasket material from transition base flange.
- Step 8. Install new spark rod with new gasket provided using screws from step 6. Arrange spark rod with hook towards burner (off-center mounting hole towards the front of the water heater).
- Step 9. Remove combustion system following "Combustion System Removal Procedure", and verify spark gap following "Spark Rod Gap Inspection and Adjustment".

⚠ WARNING
120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

⚠ WARNING
If spark rod is replaced for any reason, the combustion system MUST be removed and the spark gap to the burner measured and adjusted properly.

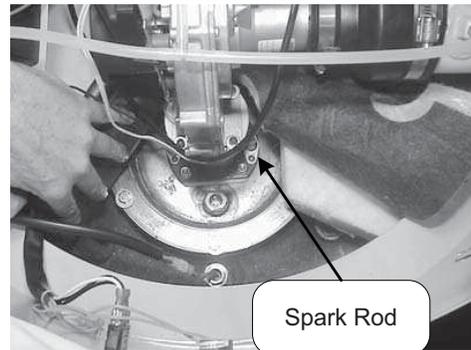

⚠ WARNING
Spark gap must be set to 3/16" to 1/4". Failure to set and verify proper spark gap may result in a delayed ignition resulting in damage to the water heater.

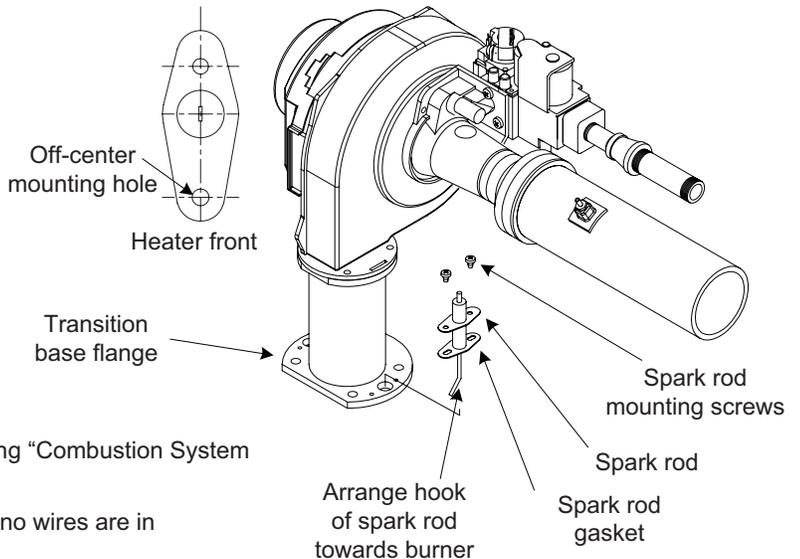

- Step 9. Reassemble combustion system following "Combustion System Replacement Procedure".
- Step 10. Fold insulation back into place. Be sure no wires are in contact with burner flange.
- Step 11. Restore 120 volt power supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instructions located in the installation and operating instruction manual.
- Step 12. Replace surround cover on top of water heater.




Service Procedure EF-X Ignition Module/Control Board Replacement

Ignition Module Replacement Procedure

- Step 1. Position main power switch to "OFF".
- Step 2. Disconnect (Unplug) water heater from 120 Volt power source.
- Step 3. Un-latch & remove surround cover from top of water heater.
- Step 4. Locate Ignition module on control panel inside surround area. (see photo below)

⚠ WARNING
120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

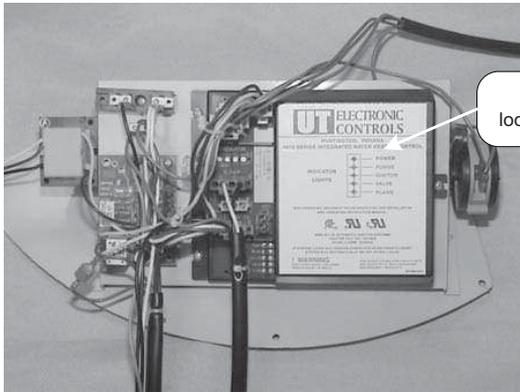

Note: Replacement hot surface ignition module works on all EF models prior to and later than "CF" serial numbers. Direct spark ignition models use a different control board (detailed in following section).

- Step 5. Carefully disconnect all wire harness connection to ignition module. Connection are non-interchangeable to insure proper reinstallation.
- Step 6. Remove the 3 screws (Phillips screw driver) holding the ignition module in place and remove ignition module from control panel.
- Step 7. Install new ignition module and secure in place with screws from step 6.
- Step 8. Carefully reconnect all wire harness connection to ignition module. Connection are non-interchangeable to insure proper reinstallation.
- Step 9. Restore 120 volt power supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instruction located in the installation and operating instruction manual.
- Step 10. Replace surround cover on top of water heater.



Service Procedure EF-X Ignition Module/Control Board Replacement


Control Board Replacement (Honeywell Integrated Control w/ Direct Spark Ignition)

- Step 1. Position main power switch to "OFF"
- Step 2. Disconnect (unplug) water heater from 120 volt power source.
- Step 3. Un-latch and remove top surround cover from top of water heater.
- Step 4. Locate control board.


WARNING
120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

- Step 5. Carefully disconnect all wire connections from control board.

Note: It may be necessary to identify wires for proper re-connection.

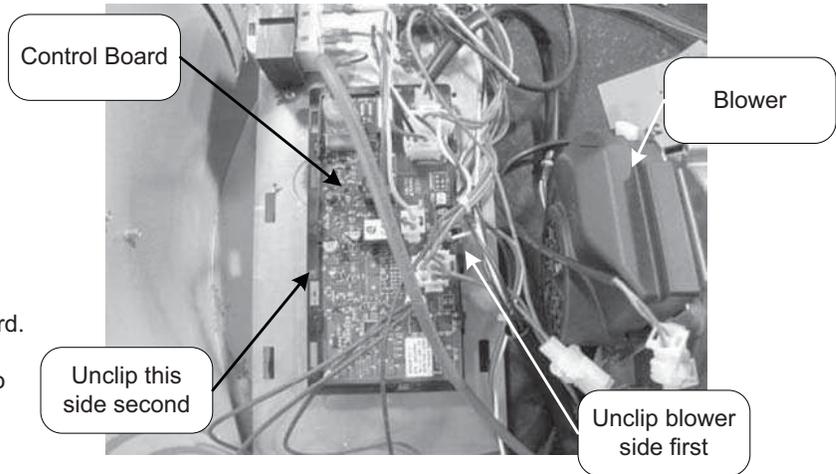

- Step 6. Depress the plastic tabs on the blower side of the control board first.
- Step 7. Tilt the control panel and slide control hook tabs from slots in the control panel (see photo at right).
- Step 8. Replace control board and all wire connections.
- Step 9. Restore 120 volt power supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instruction located in the installation and operating instruction manual.
- Step 10. Replace surround cover on top of water heater.

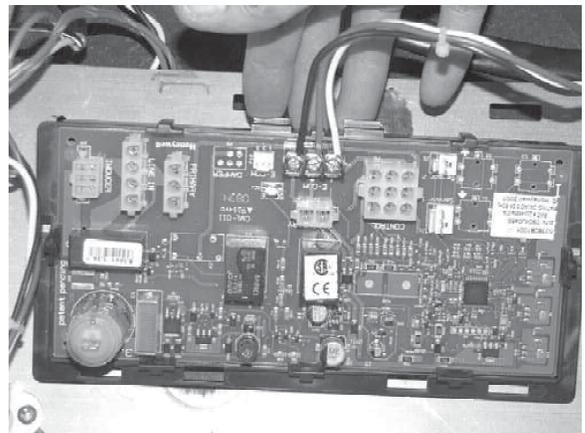

Transformer Replacement Procedure



- Step 1. Position main power switch to "OFF".
- Step 2. Disconnect (Unplug) water heater from 120 Volt power source.
- Step 3. Un-latch & remove surround cover from top of water heater.

⚠ WARNING

120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.


- Step 4. **For Hot Surface Ignition models**, refer to ignition module illustration below, Disconnect wire harness P1 labeled "PRIMARY" and P2 labeled "SECONDARY" from ignition module.

- Step 5. **For Hot Surface Ignition models.** Disconnect secondary leads (blue & yellow wire) from thermostat board. Note the blue wire is connected to 24 volt "HOT" terminal. (see photo below)
- For Direct Spark Ignition models.** Disconnect primary leads (black & white) and secondary leads (blue & yellow) from the transformer. (leads are different sizes to prevent interchanging)

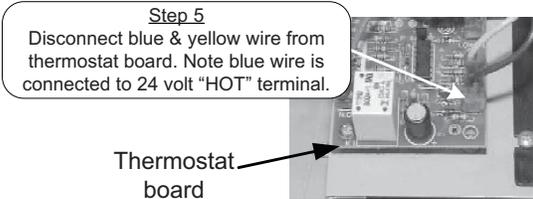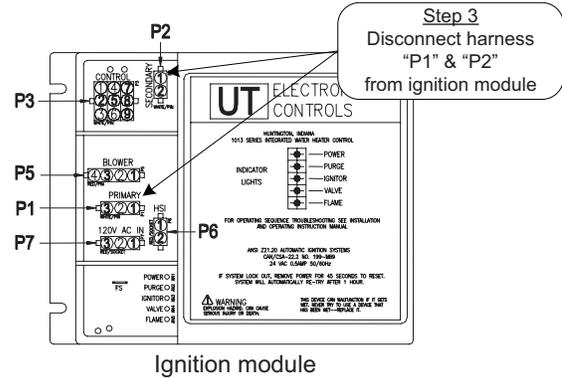


- Step 6. Remove the 2 screws (short Phillips screw driver) holding the transformer in place and remove transformer from control panel. (see photo below)

- Step 7. Install new transformer and secure in place with screws from step 6.

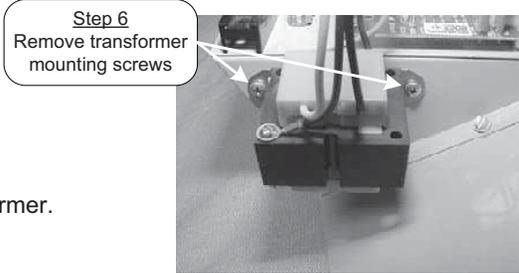

- Step 8. **For Hot Surface Ignition models.** Reconnect wire harness P1 & P2, connections are non-interchangeable to insure proper reconnection.
- For Direct Spark Ignition models.** Reconnect primary and secondary wires to transformer. (leads are different sizes to prevent interchanging)

- Step 9. **For Hot Surface Ignition models.** Reconnect blue & yellow wire leading from the P2 connection on ignition module to thermostat board. Note the blue wire must connect to the 24 volt "HOT" terminal. (see photo at right)

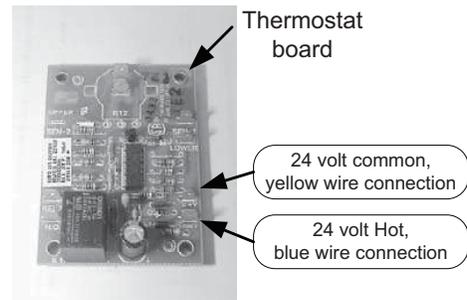

- Step 10. Restore 120 volt power supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instruction located in the installation and operating instruction manual.

- Step 11. Replace surround cover on top of water heater.





Service Procedure EF-XII

Intake Pressure Switch Testing and Replacement



Used on EF water heaters prior to "CF" serial number.

Notice:
The intake pressure switch is not used on serial number "CF" and later.

WARNING
120 volt potential exposure. Use caution making voltage checks to avoid personal injury.

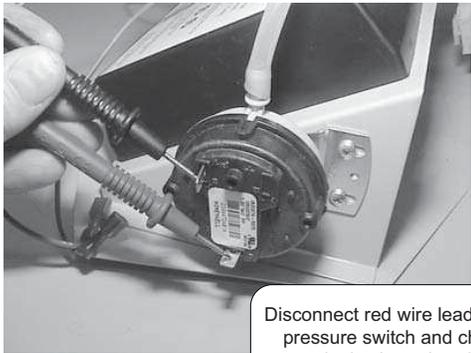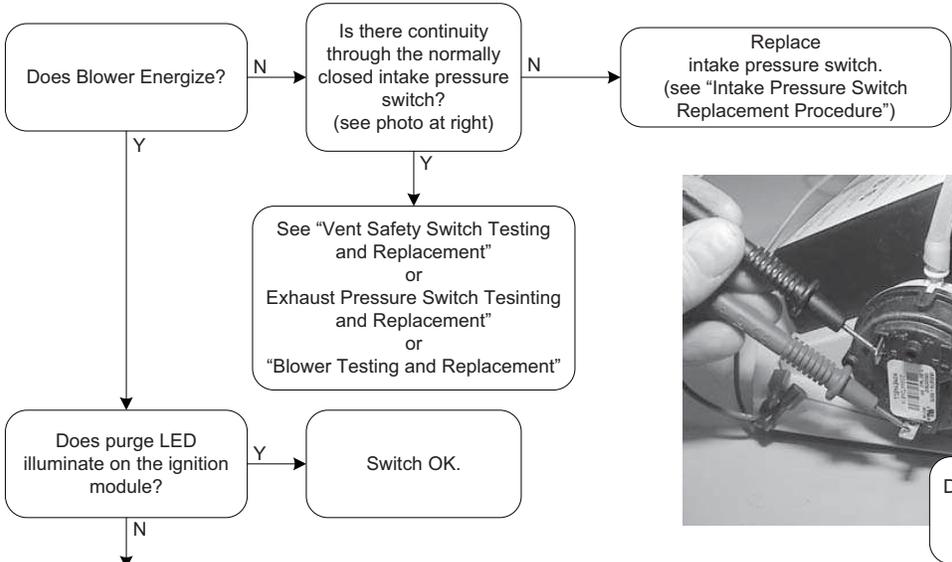

Disconnect red wire leads from pressure switch and check continuity through switch.

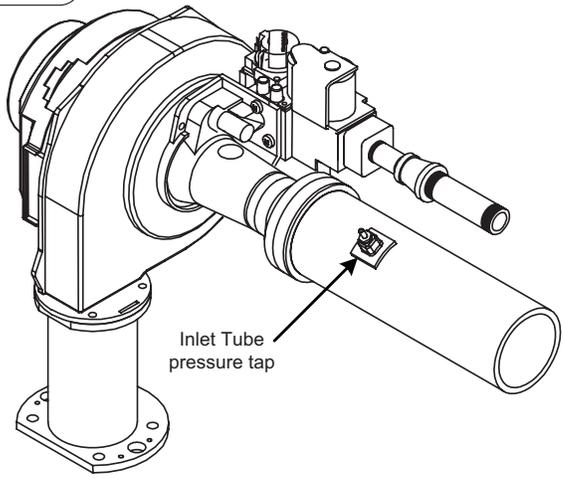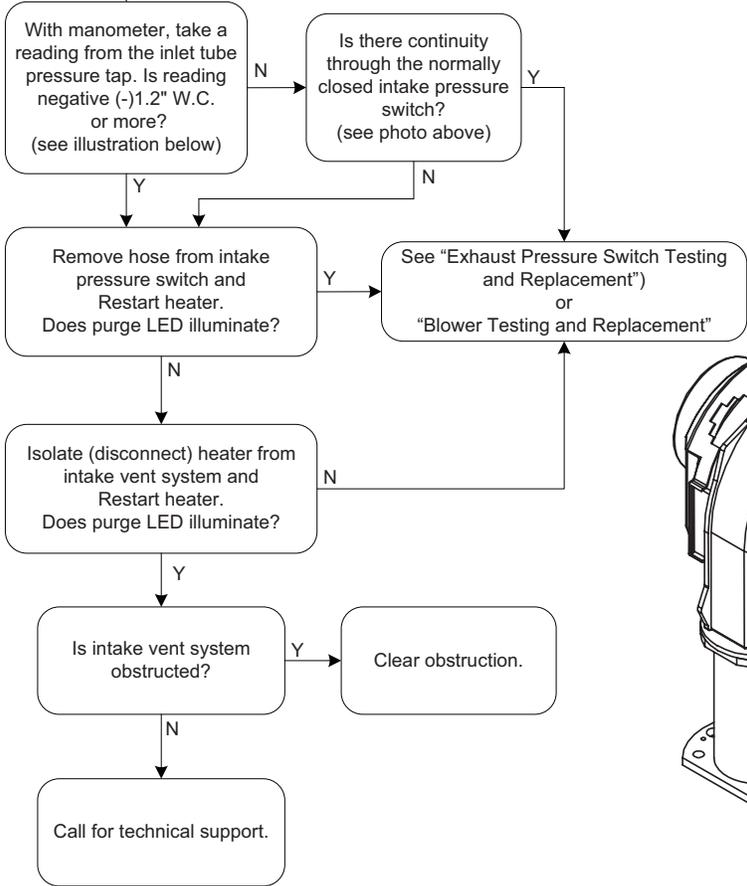



Service Procedure EF-XII


Intake Pressure Switch Testing and Replacement

Used on EF water heaters prior to "CF" serial number.


Intake Pressure Switch Replacement Procedure

⚠ WARNING
120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

- Step 1. Position main power switch to "OFF".
- Step 2. Disconnect (Unplug) water heater from 120 Volt power source.
- Step 3. Un-latch & remove surround cover from top of water heater.
- Step 4. Locate intake pressure switch on control panel inside surround area (see photos below).

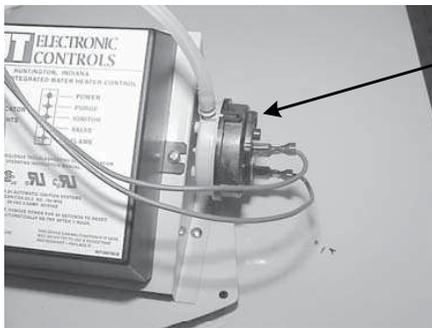

Intake pressure switch located on side of control panel

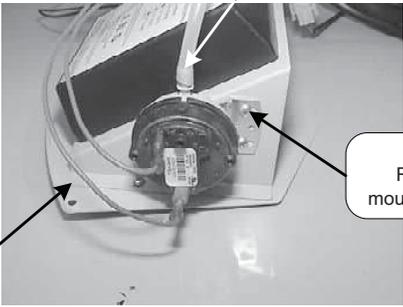

Step 6
Disconnect tubing from pressure switch

Step 7
Remove 2 mounting screws

Step 5
Disconnect red wires

- Step 5. Disconnect red wire leads from pressure switch (see photo at right).
- Step 6. Disconnect silicone tubing from pressure switch (see photos above).
- Step 7. Remove the two screws (Phillips screw driver) holding the intake pressure switch in place and remove pressure switch from control panel (see photos above).
- Step 8. Install new pressure switch and secure in place with screws from step 7.
- Step 9. Reconnect silicone tubing (from step 6) to pressure switch.
- Step 10. Reconnect red wires (from step 5) to pressure switch. Note: wires are interchangeable with either switch terminal.
- Step 11. Restore 120 volt power supply to heater & verify proper heater operation following the instructions on the lighting instruction label or the lighting instructions located in the installation & operation manual.
- Step 12. Replace surround cover on top of heater.



Service Procedure EF-XIII




Vent Safety Switch Testing and Replacement

Sequence of operation:

For Hot Surface Ignition models, with the thermostat calling for heat, prior to energizing blower, the ignition module checks the vent safety switch for normal switch position of normally closed. If the vent safety switch contacts are open, (not in normal position), the ignition module waits indefinitely for contact to close, The vent safety switch must be manually reset to close the switch contacts.

For Direct Spark Ignition models, error code 26 will display indicating an open circuit for the vent safety switch. Determine if temperature has reached 350°F before resetting switch and restoring operation. If evidence of extreme temperature is present, call technical support.

⚠ WARNING
120 volt potential exposure. Use caution making voltage checks to avoid personal injury.

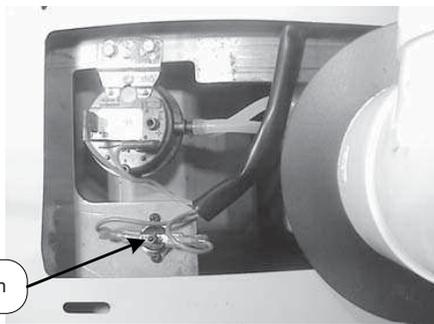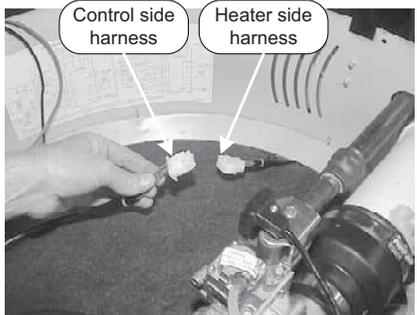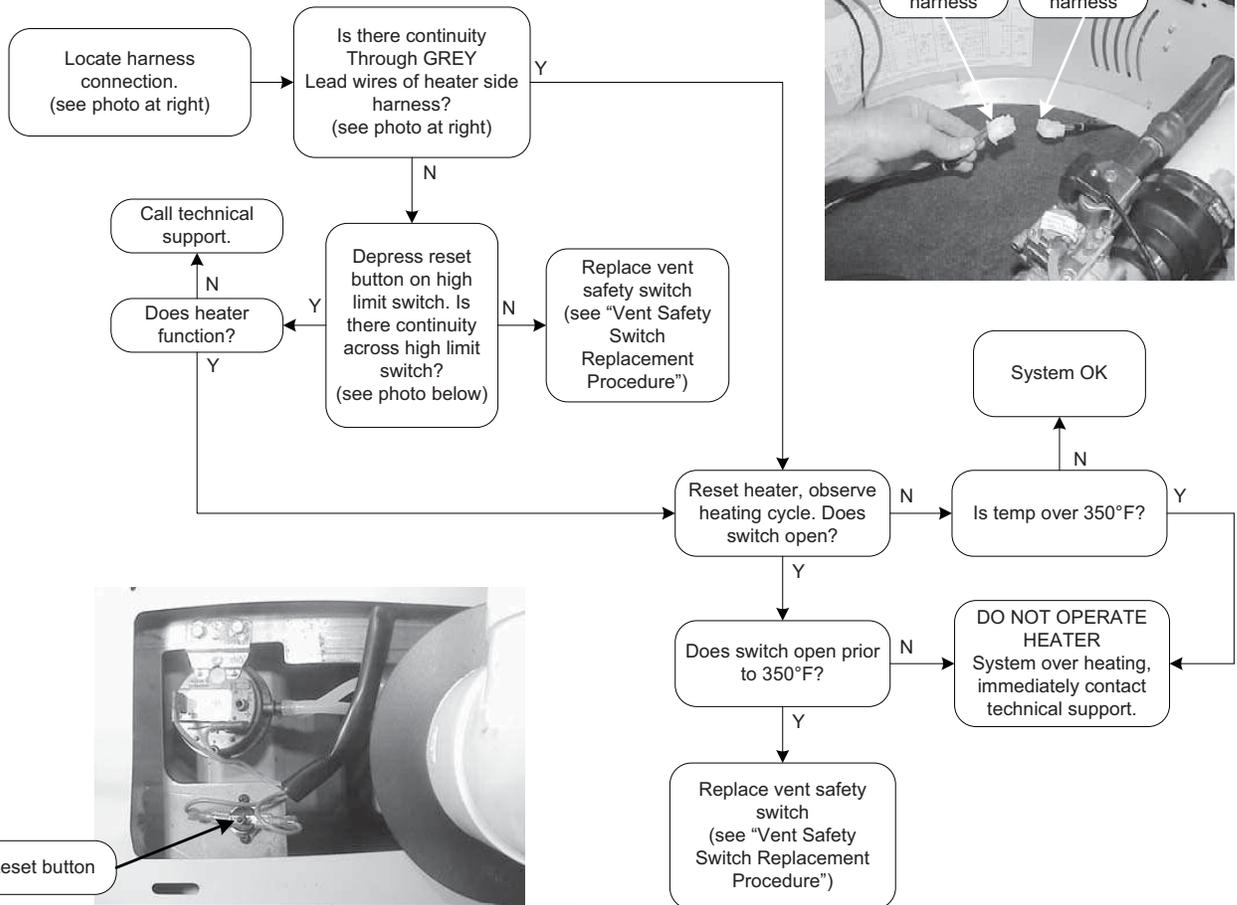

⚠ WARNING
Make sure exhaust collector compartment is not overheating (350°F) before resetting vent safety switch. If there is evidence the collector compartment is overheating, CALL TECHNICAL SUPPORT.



Service Procedure EF-XIII

Vent Safety Switch Testing and Replacement

Vent Safety Switch Replacement Procedure

Step 1. Position main power switch to "OFF".

Step 2. Loosen adhesive backed rubber escutcheon from service panel access cover and slide escutcheon back along exhaust pipe to allow for removal of cover (see photos at right).

Step 3. Remove screws from service panel access cover ($\frac{1}{4}$ " nut driver) and remove cover from heater (see photos at right)




Step 4. Disconnect wire leads from vent safety switch (see photo at right).

Step 5. Remove the 2 switch mounting screws (Phillips screw driver) and nuts ($\frac{5}{16}$ wrench) and remove switch from heater.

Step 6. Install new switch using screws from step 5.

Step 7. Reconnect wire leads.
Note: wire leads are interchangeable with either switch terminal.

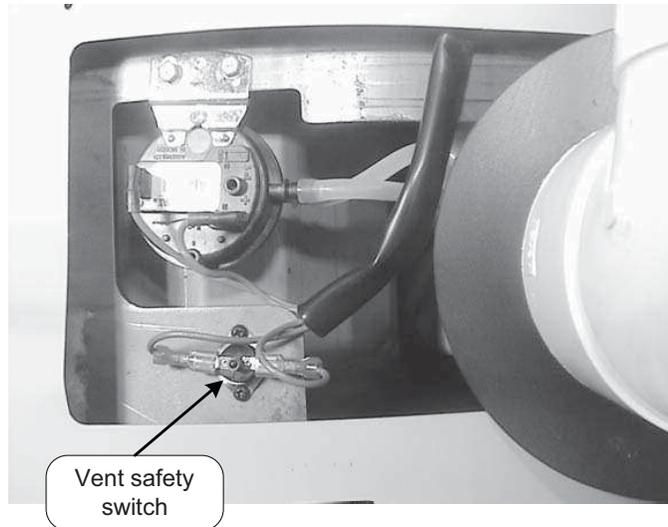

Step 8. Restore 120 volt power supply to water heater and confirm proper operation following the lighting instructions on the lighting instruction label or the lighting instruction located in the installation and operating instruction manual.

Step 9. Reinstall service panel access cover and rubber escutcheon.



Service Procedure EF-XIV

Anode/Flue Baffle Inspection and Replacement

Disassembly Procedure for Access to Anodes & Flue Baffles

⚠ WARNING
 Heater components may be HOT when performing the following steps in this procedure.
 Take necessary precaution to prevent personal injury.


⚠ WARNING
120 volt potential exposure. Isolate the appliance and reconfirm power is disconnected using a multi-meter.

- Step 1. Position main power switch to "OFF".
- Step 2. Disconnect (Unplug) water heater from 120 Volt power source.
- Step 3. Un-latch & remove surround cover from top of heater.
- Step 4. Disconnect wire harnesses to allow for removal of control panel.
 Note: Where ever possible, rather than disconnecting at the control panel, follow wire harness away from control panel and disconnect at control component location.
- Step 5. Remove the three control panel mounting screws (1/4" nut driver) and remove control panel from the water heater (see photos below).




- Step 6. Completely remove insulation (two pieces) from top of heater to expose collector cover

- Step 7. Remove all collector cover screws (5/16" socket) and remove collector cover (see photos at right).

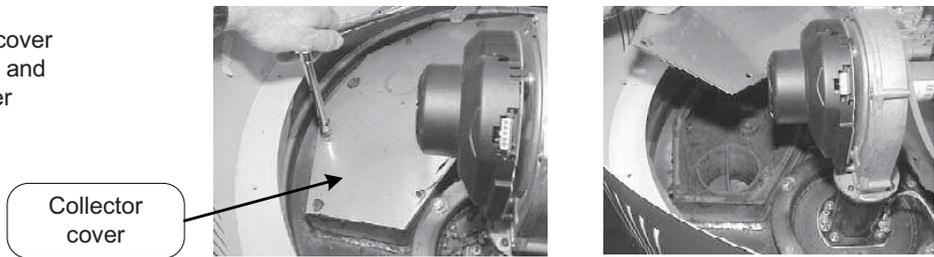

- Step 8. Photo 44 shows heater with collector cover removed allowing access to anode rods and flue baffles.

- a) for anode service, see "Anode Inspection and Replacement"
- b) for flue baffle service, see "Flue Baffle Inspection and Replacement"
- c) for powered anode service, see "Powered Anode Replacement"

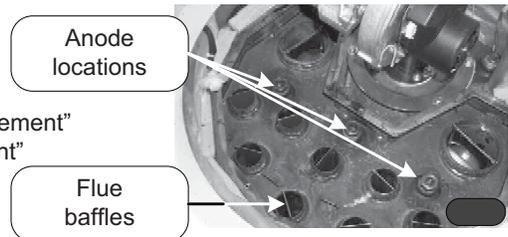

Note: EF100T399 models have only 1 anode rod under the 2nd pass collector cover.



Service Procedure EF-XIV

Anode/Flue Baffle Inspection and Replacement

Anode inspection and replacement

⚠ WARNING

Heater components and stored water may be **HOT** when performing the following steps in this procedure. Take necessary precaution to prevent personal injury.

- Step 1. Turn off water supply and drain water heater.
- Step 2. Disassemble water heater per “Disassembly Procedure for Access to Anodes & Flue Baffles”.
- Step 3. Locate and remove anode rods from heater (1-1/16 hex socket).
- Step 4. Visually inspect anode rod. Anode rod should show signs of depletion, this is normal. If the depletion is $\frac{1}{2}$ of the original diameter (approximately $\frac{3}{4}$ " diameter), replacement is recommended. If any of the steel core of the anode is exposed, replacement is recommended.
- Step 5. Upon completion of inspection or subsequent replacement, apply thread sealing tape or other thread compound to threads of anode and reinstall into heater. Restore water supply and check for and repair any leaks found.
- Step 6. Reinstall collector cover per “Collector Cover Installation Procedure”.
- Step 7. Reinstall collector insulation and control panel, reconnect control panel wire harnesses.
- Step 8. Restore 120 volts to water heater and verify proper heater operation following the instructions on the lighting instruction label or the lighting instruction located in the installation and operating instruction manual.
- Step 9. Replace surround cover on top of water heater.



Service Procedure EF-XIV

Anode/Flue Baffle Inspection and Replacement

Flue baffle inspection and replacement

▲ WARNING

Heater components may be **HOT** when performing the following steps in this procedure.
Take necessary precaution to prevent personal injury.

- Step 1. Disassemble heater per “Disassembly Procedure for Access to Anodes & Flue Baffles”.
- Step 2. Remove flue baffles from heater (pliers) (8 two inch baffles & 2 four inch baffles).
- Step 3. Visually inspect flue baffles. Flue baffles should show signs of oxidation, this is normal. If the oxidation has deteriorated any portion of the flue baffle, replacement is recommended. If any restrictors are missing, replacement is recommended.
- Step 4. Upon completion of inspection or subsequent replacement, reinstall flue baffles into heater.
- Step 5. Reinstall collector cover per “Collector Cover Installation Procedure”.
- Step 6. Reinstall collector insulation and control panel, reconnect control panel wire harnesses.
- Step 7. Restore 120 volts to water heater and verify proper heater operation following the instructions on the lighting instruction label or the lighting instruction located in the installation and operating instruction manual.
- Step 8. Replace surround cover on top of water heater.



Service Procedure EF-XIV

Powered Anode Replacement for EF100T399 only

Powered Anode Replacement EF100T399 models only

▲ WARNING

Heater components may be HOT when performing the following steps in this procedure.
Take necessary precaution to prevent personal injury.

The powered anode control module is located on the right vertical side of the control panel inside the surround panel. The control has a LED indicator light to show the status of operation. When the tank is filled with water and the power supply is on to the water heater, the light should have a steady green glow to indicate that protection current is flowing and operating normally. If the indicator light is not glowing, the power supply to the water heater or powered anode system is disconnected.


Step 1. Check the power supply or wire connections to the powered anode control.

Step 2. Indicator light diagnostic codes:

- a) If the control is flashing red, then there is a malfunction with the powered anode system.
Make sure there are no bare spots in the wire insulation to the powered anode rods.

Step 3. Check all electrical connections. The powered anode rods are insulated from the water heater tank in the bushing.

- a) With an ohmmeter, check continuity between the powered anode terminal and the bushing. There should not be continuity. If there is continuity, replace the powered anode assembly.

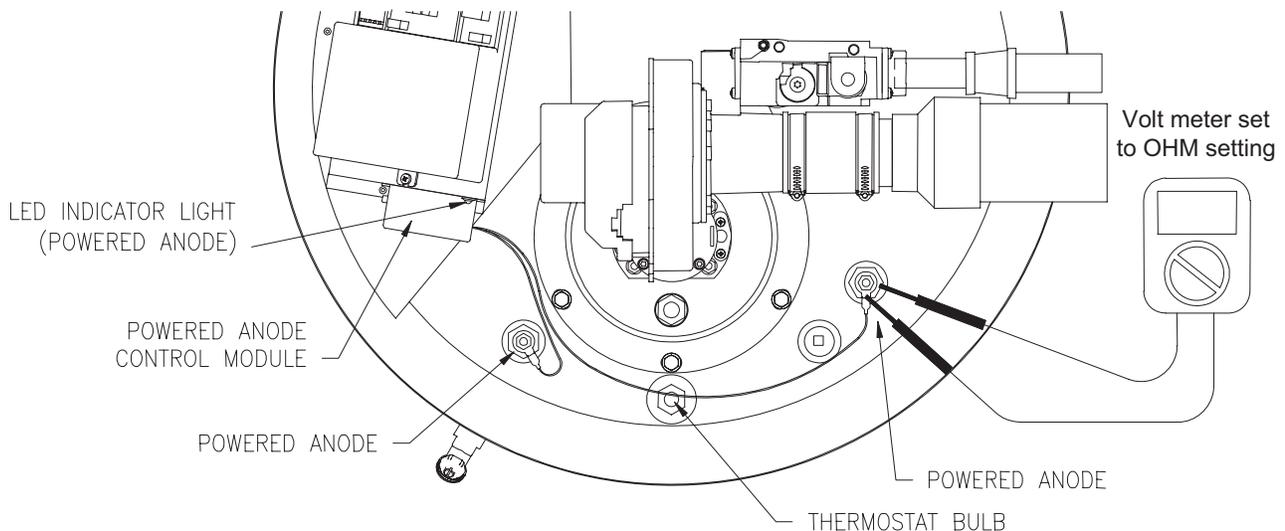




Service Procedure EF-XIV

Anode/Flue Baffle Inspection and Replacement

Collector Cover Installation Procedure

- Step 1. Remove old silicone from top surface of collector flange and collector cover.
- Step 2. Apply ¼" bead of Ultra Copper Silicone around entire collector flange surface. Allow caulk to "cure" for 10 minutes.
- Step 3. Carefully reinstall collector cover, tighten screws evenly.
- Step 4. Allow a minimum of 6 hours before putting heater back in service.

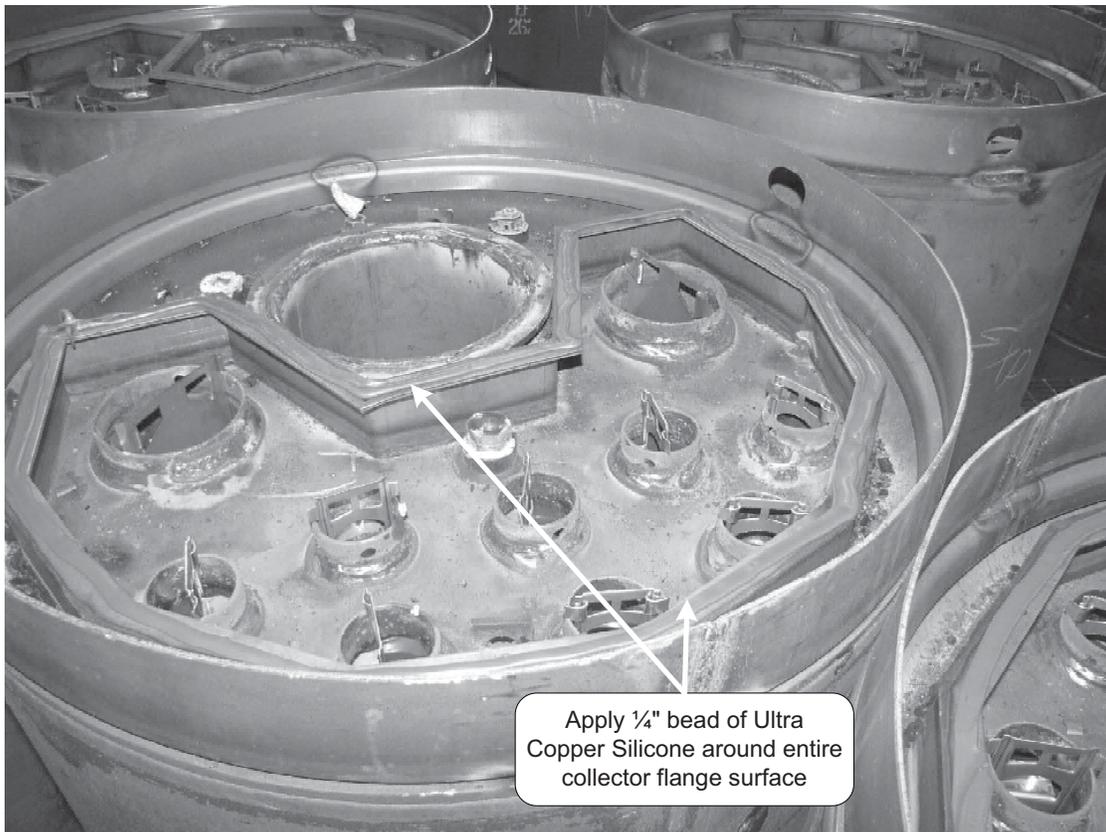



Water Heater Installation Check List

Product Handling - Carefully uncrate the heater. Move in place with a hand truck (Do not use the venting pipes for handles).

Electrical Requirements - Make sure there is 120 volts line voltage. Line voltage must be properly polarized. Adequate ground supplied to the heater.

Venting Requirements - All venting must stay within the required lengths and diameter (see table below). Proper support of the venting pipe is a MUST (every 5ft vertical and 3ft horizontal). Termination must be located to prevent re-circulation of flue gases. Medium to long sweep 90° elbows or straight exhaust terminal coupling recommended.

Gas Requirements - Gas piping sized adequately, 3/4" or larger to heater or 1" or larger for EF100T399 models. Install a properly sized regulator (if unknown, assure an adequate volume of gas is available). 7" W.C. is required when the unit is running. Gas pressure must stay below 14" W.C. static pressure. Pressure drops between static pressure and operating flow should be less than 3" W.C.

Condensate Requirements - Condensate line needs to slope to a drain at a minimum of 1/4" per foot. Make sure the condensate line does not have the potential to freeze. If using more than one heater and using a common condensate line, make sure the condensate line is properly sized.

Service/Mechanical Room - Provide adequate space for servicing heater. Leave room to get to the top and bottom pressure switches as well as enough overhead room to remove the anode rods for servicing (18" min.).

Vent tables

| Balanced Direct Vent Systems PVC, CPVC | | | |
|---|-----|------|------|
| Total length of intake piping and exhaust piping added together must not exceed "Maximum Combined Length" Shown below | | | |
| Maximum Combined Length (feet) | | | |
| Model Number | 2" | 3" | 4" |
| <u>EFR-1-60T120</u> | 60' | 120' | 170' |
| <u>EF60T125, EF100T150</u> | 30' | 120' | 170' |
| <u>EF60T150, EF100T199</u> | 30' | 100' | 150' |
| <u>EF60T199</u> | 30' | 80' | 130' |
| <u>EF100T250</u> | N/A | 80' | 130' |
| <u>EF100T300</u> | N/A | 60' | 110' |
| <u>EF100T399</u> | N/A | 50' | 100' |
| Unbalanced Direct Vent Systems | | | |
| Air intake <u>CAN NOT</u> exceed exhaust by more than 30 feet | | | |

Note: each 3" & 4" 90° Elbow is equivalent to 5 feet of straight pipe.

Note: each 3" & 4" 45° Elbow is equivalent to 2.5 feet of straight pipe.

| Power Vented Systems PVC, CPVC | | | |
|--|-----|------|------|
| Total length of exhaust piping must not exceed "Maximum Vent Length" Shown below | | | |
| Maximum Vent Length (feet) | | | |
| Model Number | 2" | 3" | 4" |
| <u>EFR-1-60T120</u> | 60' | 120' | 170' |
| <u>EF60T125, EF100T150</u> | 30' | 120' | 170' |
| <u>EF60T150, EF100T199</u> | 30' | 100' | 150' |
| <u>EF60T199</u> | 30' | 80' | 130' |
| <u>EF100T250</u> | N/A | 80' | 130' |
| <u>EF100T300</u> | N/A | 60' | 110' |
| <u>EF100T399</u> | N/A | 50' | 100' |

WARNING! The EF100T250 and EF100T300 models are not approved for 2 inch diameter vent pipe. Venting with 2 inch pipe on these models may result in damage to the water heater or cause an unsafe condition. DO NOT use 2 inch Vent or Air Intake Pipe on EF100T250/300 models.



**eF Series[®] Heater
Service Report**

Date _____

Service Provider _____

Model Number _____

Phone Number _____

Serial Number _____

Venting (PVC, CPVC):

Vent size 3" or 4" _____

Intake 90's (qty) _____

Intake 45's (qty) _____

Length of straight pipe
(intake) _____

Exhaust 90's (qty) _____

Exhaust 45's (qty) _____

Length of straight pipe
(exhaust) _____

Gas Line:

Size & material _____

Distance from meter
to water heater _____

Gas Pressure:

Static _____

Running Inlet _____

Manifold _____

Venturi:

Setting from Bottom in Turns _____

Electrical:

Line Voltage _____

Low Voltage _____

Polarity _____

Igniter Resistance: _____

Flame Sense Micro -Amps: _____

Spark Gap: _____

LED Flashing Y or N Which One(s) _____

Error Codes on Control Display (Direct Spark Ignition System Only): _____

Condensate Line:

Size & Material _____

Length _____

Is trap provided Y or N

**Exhaust Collector
Pressure:**

Positive Inches W.C. _____

Combustion: CO₂ _____

CO _____


Installation Site Name & Address:

**Installation Site Contact Name &
Phone Number**




Parts List

Models prior to "CF" serial number

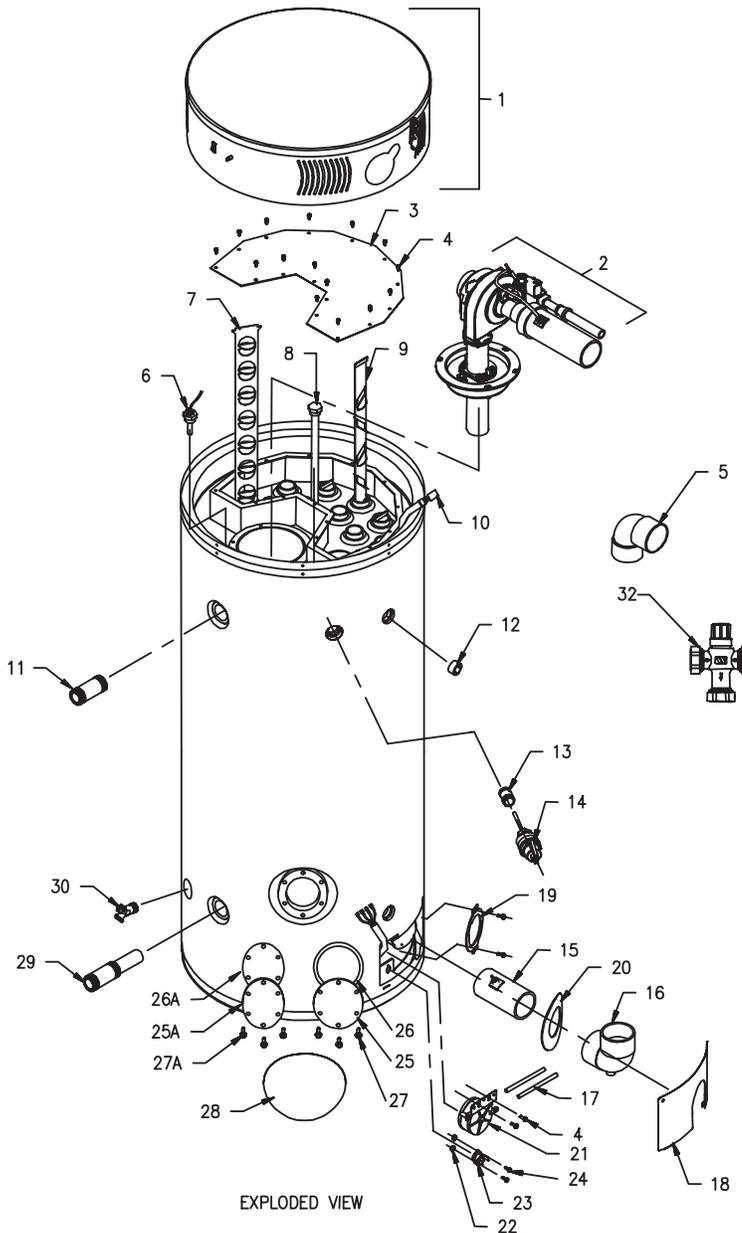

| | |
|----|--|
| 1 | Combustion Surround Assy. |
| 2 | Burner Assy |
| 3 | 2 nd Pass Top Collector Cover |
| 4 | Screw 10-16 x 3/4 |
| 5 | Vent Termination Elbow |
| 6 | Thermostat Sensor Probe |
| 7 | Baffle 4" Flue |
| 8 | Anode |
| 9 | Baffle 2" Flue |
| 10 | Wire Harness Service Panel |
| 11 | Plastisert Nipple 1-1/2" NPT |
| 12 | Plug |
| 13 | Nipple |
| 14 | T&P Relief Valve |
| 15 | Exhaust Pipe (PVC) w/Hose Barb |
| 16 | Condensate Trap Elbow |
| 17 | Silicone Hose |
| 18 | Outer Door Service Panel |
| 19 | Vent Pipe Support Bracket |
| 20 | NSF Escutcheon |
| 21 | Exhaust Pressure Switch |
| 22 | Nut |
| 23 | Vent Safety Switch |
| 24 | Screw 6-32x 3/8 |
| 25 | Cleanout Access Cover |
| 26 | Cleanout Gasket |
| 27 | Screw 5/16-18 x 3/4 HH Grade 5 |
| 28 | Cleanout Cover |
| 29 | Cold Water Inlet |
| 30 | No Handle Brass Drain Valve |
| 31 | Coaxial Vent System |
| 32 | ASSE Approved Mixing Valve |

Customer must specify complete model number and serial number when ordering service parts.

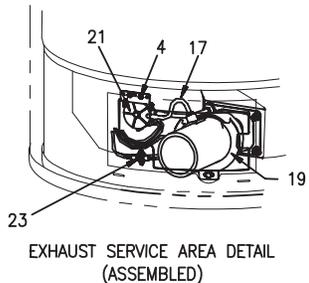





Parts List

Models prior to "CF" serial number

| | |
|----|-----------------------|
| AA | Latch Assy |
| BB | Screw 8-32 x 1/2 RHCR |
| CC | Ignition Control Assy |
| DD | Jacket Head |
| EE | Main Power Switch |
| FF | Potentiometer |
| GG | Combustion Surround |
| JJ | Surround Base |

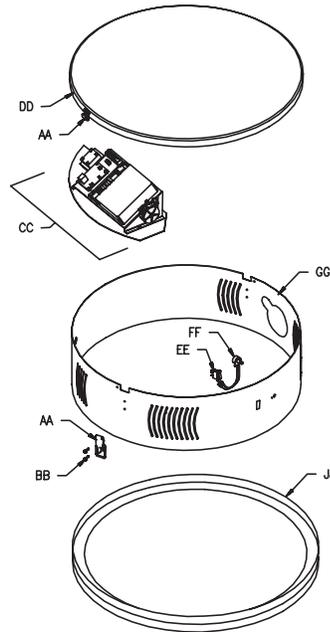

Customer must specify complete model number and serial number when ordering service parts.

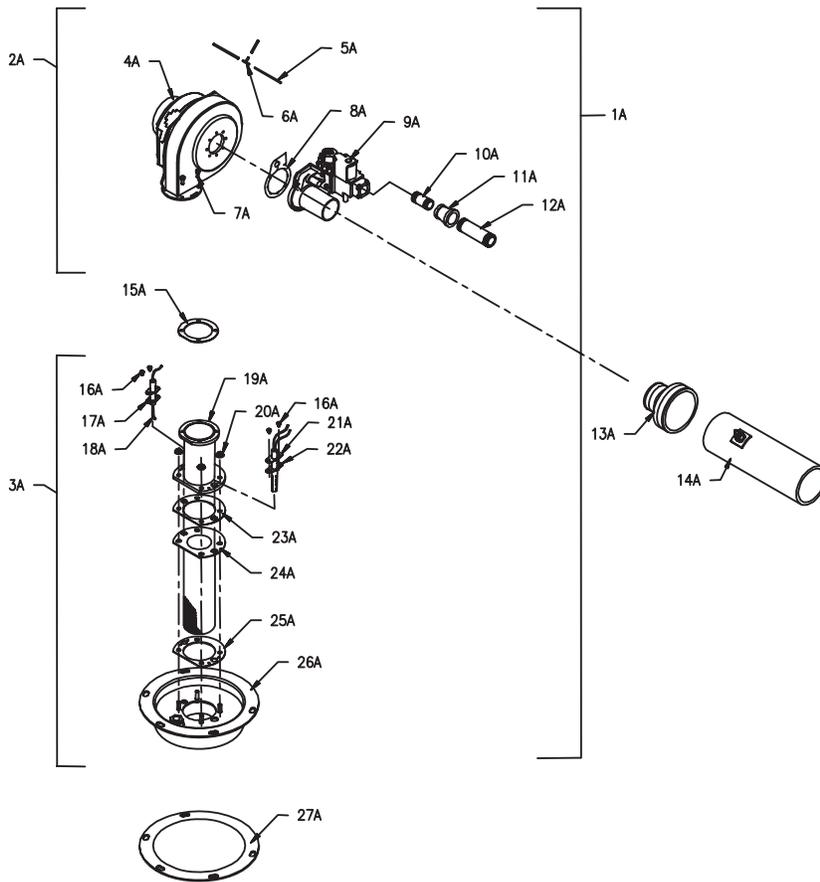


| | |
|-----|-------------------------------|
| 1A | Combustion Surround Assy. |
| 2A | Blower Gas Valve Assy |
| 3A | Burner Assy |
| 4A | Blower EBM |
| 5A | Silicone Hose |
| 6A | Hose Tee Fitting |
| 7A | Screw 10-32 x3/4 |
| 8A | Gasket & Screw |
| 9A | Gas Valve |
| 10A | Nipple 1/2" NPT X3" |
| 11A | Reducer 3/4 x 1/2 NPT |
| 12A | Nipple 3/4 NPT x 6" |
| 13A | 2" dia. Flex Reducer |
| 14A | Inlet (PVC) |
| 15A | Gasket Blower Transition |
| 16A | Screw 8-32 x 1/4 RHCR |
| 17A | Gasket Flame Sensor |
| 18A | Flame Sensor |
| 19A | Transition Tube |
| 20A | Nut Hex Washer |
| 21A | Gasket Hot Surface Igniter |
| 22A | Hot Surface Igniter |
| 23A | Burner Mounting Gasket |
| 24A | Burner Tube |
| 25A | Burner Mounting Gasket |
| 26A | Burner Mounting Insert |
| 27A | Burner Mounting Insert Gasket |



Parts List

Models prior to "CF" serial number

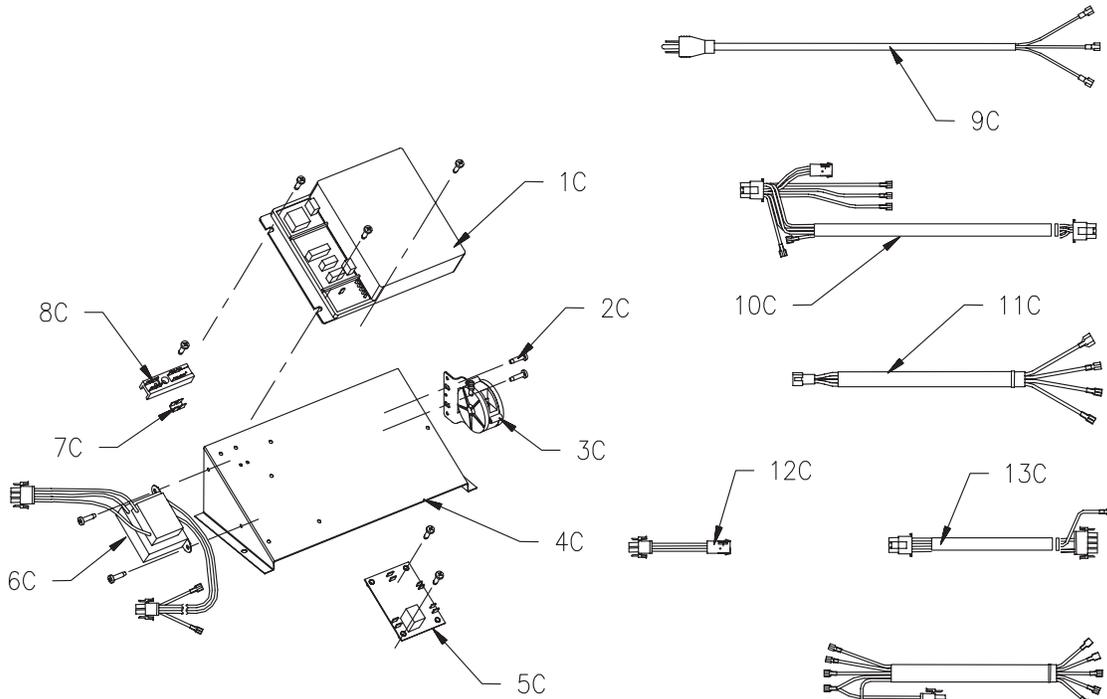


| | |
|-----|-----------------------------------|
| 1C | Electronic Control Module |
| 2C | Screw 8-32 x 1/2 |
| 3C | Intake Pressure Switch |
| 4C | Control Mounting Panel |
| 5C | Thermostat PC Board |
| 6C | Transformer 120VAC x 24VAC x 40VA |
| 7C | Terminal |
| 8C | Terminal Strip |
| 9C | Power Cord |
| 10C | Control Wire Harness |
| 11C | Thermostat Wire Harness |
| 12C | Igniter Extension Wire |
| 13C | Blower Wire Harness |
| 14C | Power Switch Wire Harness |
| 15C | Flame Sensor Wire Harness |
| 16C | Rectifier Harness |

Customer must specify complete model number and serial number when ordering service parts.



Parts List

For models with "CF" serial or later.

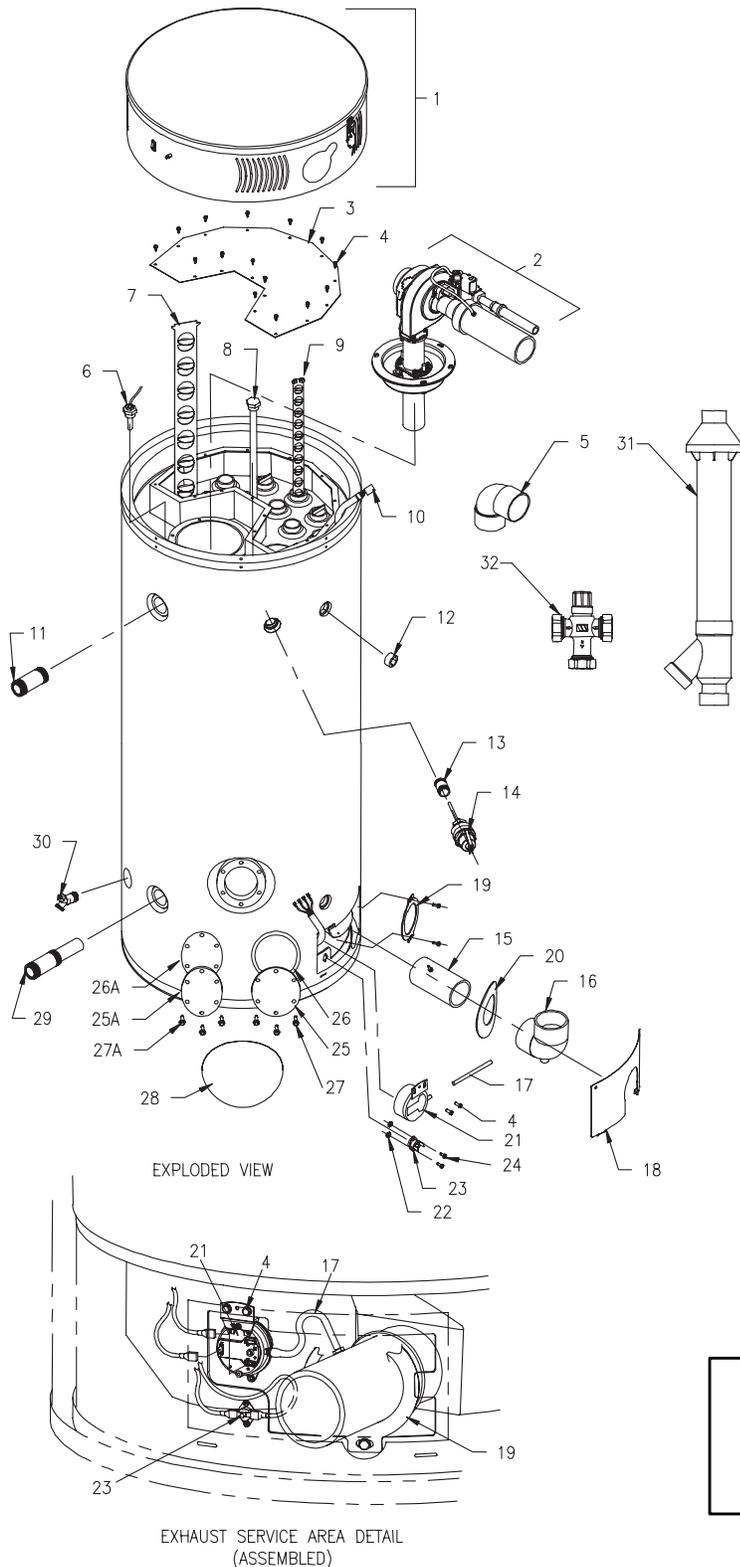

| | |
|----|---|
| 1 | Combustion Surround Assy. |
| 2 | Burner Assy (specify model) |
| 3 | 2 nd Pass Top Collector Cover |
| 4 | Screw 10-16 x 3/4 |
| 5 | Vent Termination Elbow |
| 6 | Thermostat Sensor Probe |
| 7 | Baffle 4" Flue (specify model) |
| 8a | Anode Rod Assy |
| 8b | Powered Anode (for EF100T399) |
| 9 | Baffle 2" Flue |
| 10 | Wire Harness Service Panel |
| 11 | Plastisert Nipple 1-1/2" NPT |
| 12 | Plug |
| 13 | Nipple |
| 14 | T&P Relief Valve |
| 15 | Exhaust Pipe (PVC) w/Hose Barb (except EF100T399) |
| 16 | Condensate Trap Elbow (specify model) |
| 17 | Silicone Hose |
| 18 | Outer Door Service Panel (specify model) |
| 19 | Vent Pipe Support Bracket (except EF100T399) |
| 20 | NSF Escutcheon |
| 21 | Exhaust Pressure Switch |
| 22 | Nuts |
| 23 | Collector Temperature Limit Switch |
| 24 | Screw 6-32x 3/8 |
| 25 | Cleanout Access Cover |
| 26 | Cleanout Gasket |
| 27 | Screw 5/16-18 x 3/4 HH Grade 5 |
| 28 | Cleanout Cover |
| 29 | Cold Water Inlet (Hydrojet) Assy. |
| 30 | No Handle Brass Drain Valve |
| 31 | Concentric Vent System (optional) |
| 32 | ASSE Approved Mixing Valve (optional) |

Customer must specify complete model number and serial number when ordering service parts.





Parts List

For models with "CF" serial or later.

| | |
|----|-----------------------|
| AA | Latch Assy |
| BB | Screw 8-32 x 1/2 RHCR |
| CC | Ignition Control Assy |
| DD | Jacket Head |
| EE | Main Power Switch |
| FF | Potentiometer |
| GG | Combustion Surround |
| JJ | Surround Base |

Customer must specify complete model number and serial number when ordering service parts.

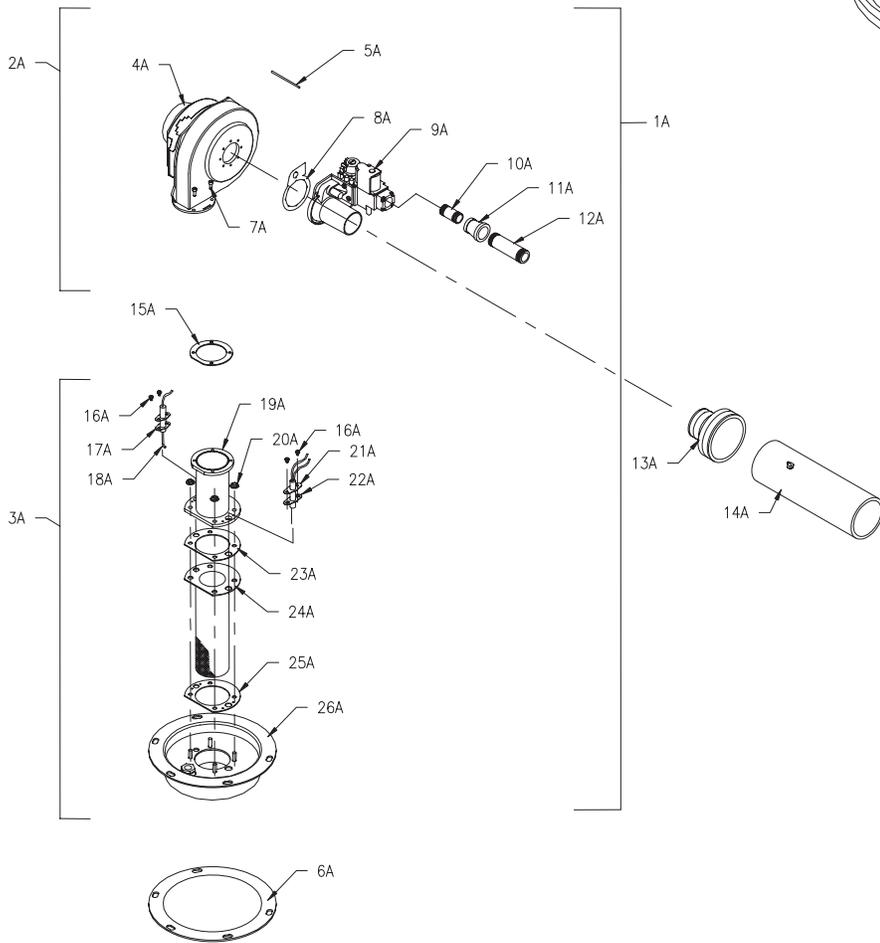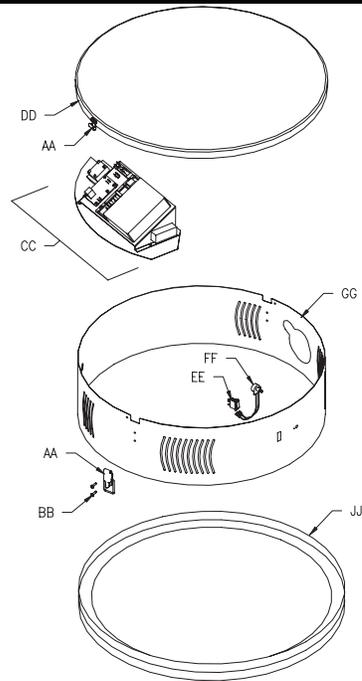


| | |
|-----|---|
| 1A | Combustion Surround Assy. (specify model) |
| 2A | Blower Gas Valve Assy (specify model) |
| 3A | Burner Assy (specify model) |
| 4A | Blower EBMs (specify model) |
| 5A | Silicone Hose |
| 6A | Burner Mounting Insert Gasket |
| 7A | Screw 10-32 x3/4 |
| 8A | Gasket & Screw |
| 9A | Gas Valve (specify model) |
| 10A | Nipple (specify model) |
| 11A | Reducer (specify model) |
| 12A | Nipple (specify model) |
| 13A | 2" dia. Flex Reducer (or PVC reducer for 399) |
| 14A | Inlet (PVC) |
| 15A | Gasket Blower Transition (specify model) |
| 16A | Screw 8-32 x 1/4 RHCR |
| 17A | Gasket Flame Sensor |
| 18A | Flame Sensor |
| 19A | Transition Tube |
| 20A | Nut Hex Washer |
| 21A | Gasket Hot Surface Igniter |
| 22A | Hot Surface Igniter |
| 23A | Burner Mounting Gasket |
| 24A | Burner Tube |
| 25A | Burner Mounting Gasket |
| 26A | Burner Mounting Insert |



Parts List

For models with "CF" serial or later.

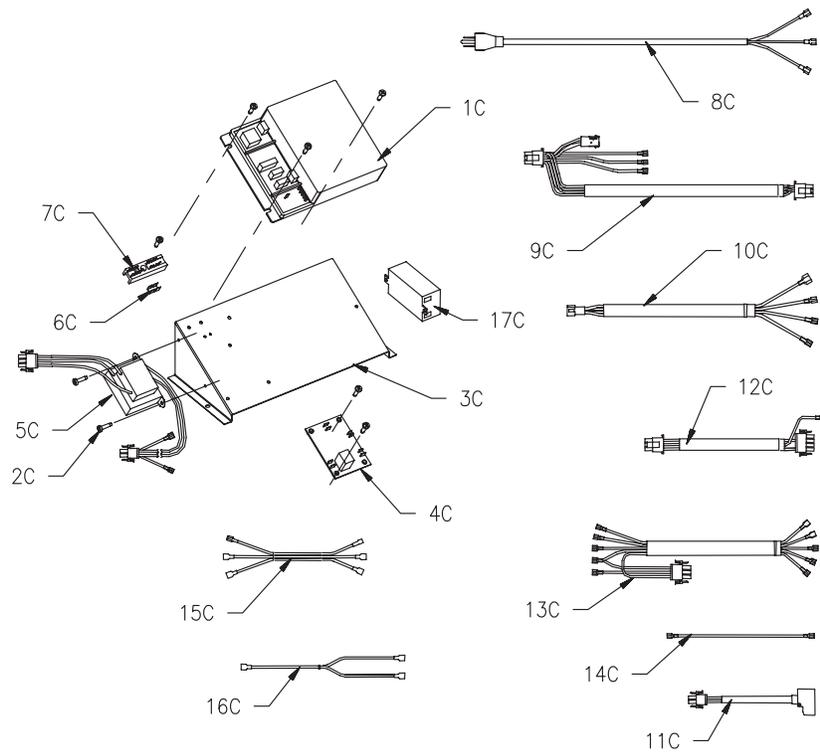


| | |
|-----|--|
| 1C | Electronic Control Module |
| 2C | Screw 8-32 x 1/2 |
| 3C | Control Mounting Panel |
| 4C | Thermostat PC Board |
| 5C | Transformer 120VAC x 24VAC x 40VA |
| 6C | Terminal |
| 7C | Terminal Strip |
| 8C | Power Cord |
| 9C | Control Wire Harness |
| 10C | Thermostat Wire Harness |
| 11C | Rectifier Harness (specify model) |
| 12C | Blower Wire Harness (specify model) |
| 13C | Power Switch Wire Harness |
| 14C | Flame Sensor Wire Harness |
| 15C | Powered Anode Control Harness (399 only) |
| 16C | Powered Anode Harness (399 only) |
| 17C | Powered Anode Control (399 only) |

Customer must specify complete model number and serial number when ordering service parts.



Parts List

For models with Direct Spark Ignition

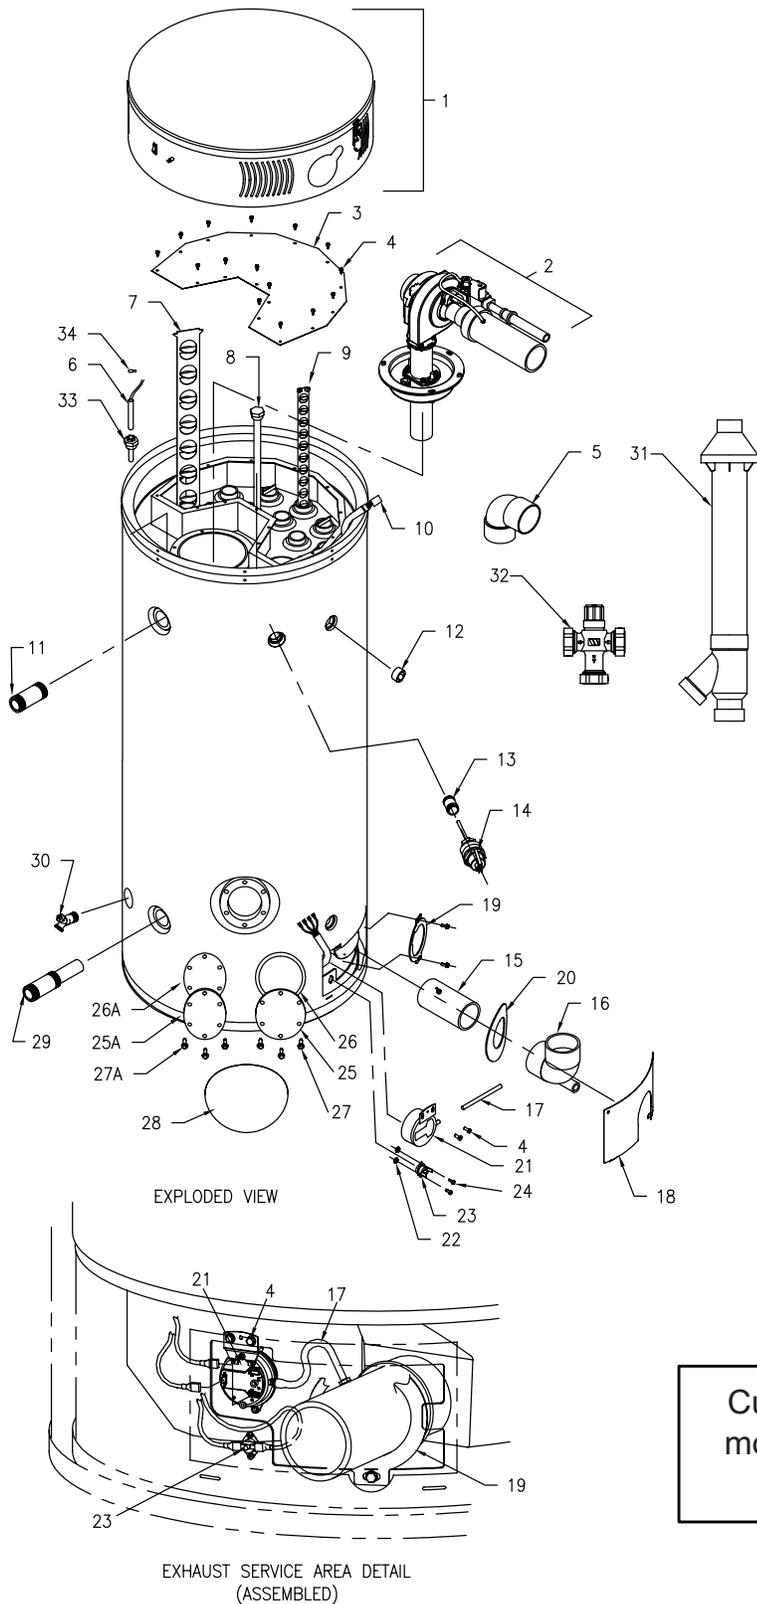

| | |
|----|--|
| 1 | Combustion Surround Assembly |
| 2 | Burner Assembly (specify model) |
| 3 | 2 nd Pass Top Collector Cover |
| 4 | Screw 10-16 x 3/4 |
| 5 | Vent Termination Elbow |
| 6 | Thermostat Sensor Probe |
| 7 | Baffle 4" Flue (specify model) |
| 8 | Anode Rod Assembly |
| 9 | Baffle 2" flue |
| 10 | Wire Harness Service Panel |
| 11 | Plastisert Nipple 1-1/2" NPT |
| 12 | Plug |
| 13 | Nipple |
| 14 | T&P Relief Valve |
| 15 | Exhaust Pipe (PVC) w/Hose Barb |
| 16 | Condensate Trap Elbow (specify model) |
| 17 | Silicone Hose |
| 18 | Outer Door Service Panel (specify model) |
| 19 | Vent Pipe Support Bracket |
| 20 | NSF Escutcheon |
| 21 | Exhaust Pressure Switch |
| 22 | Nuts |
| 23 | Collector Temperature Limit Switch |
| 24 | Screw 6-32x 3/8 |
| 25 | Cleanout Access Cover |
| 26 | Cleanout Gasket |
| 27 | Screw 5/16-18 x 3/4 HH Grade 5 |
| 28 | Cleanout Cover |
| 29 | Cold Water Inlet (Hydrojet) Assembly |
| 30 | No Handle Brass Drain Valve |
| 31 | Concentric Vent System (optional) |
| 32 | ASSE Approved Mixing Valve (optional) |
| 33 | Thermal Well |
| 34 | Clip |
| 35 | Hole Closure |
| 36 | Reducer |

Customer must specify complete model number and serial number when ordering service parts.





Parts List

For models with Direct Spark Ignition

| | |
|----|---------------------------|
| 1B | Latch Assy |
| 2B | Screw 8-32 x 1/2 RHCR |
| 3B | Ignition Control Assy |
| 4B | Jacket Head |
| 5B | Main power switch |
| 6B | Honeywell Control Display |
| 7B | Combustion Surround |
| 8B | Surround Base |

Customer must specify complete model number and serial number when ordering service parts.

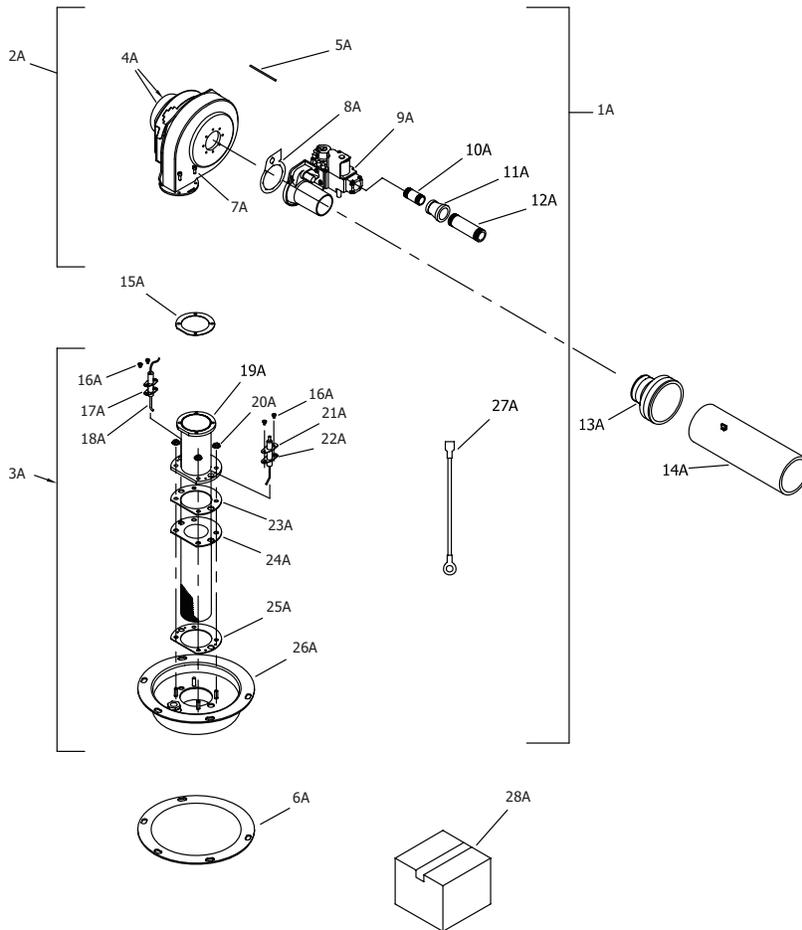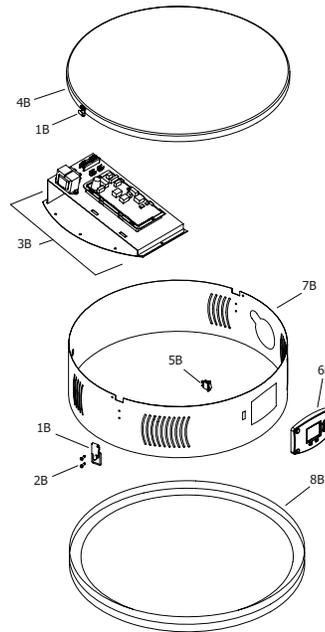


| | |
|-----|--|
| 1A | Combustion Surround Assembly (specify model) |
| 2A | Blower Gas Valve Assy. (specify model) |
| 3A | Burner Assy. (specify model) |
| 4A | Blower EBM (specify model) |
| 5A | Silicone Hose |
| 6A | Burner Mounting Insert Gasket |
| 7A | Screw 10-32 x3/4 |
| 8A | Gasket |
| 9A | Gas Valve (specify model) |
| 10A | Nipple (specify model) |
| 11A | Reducer (specify model) |
| 12A | Nipple (specify model) |
| 13A | 2" dia. Flex Reducer |
| 14A | Inlet (PVC) |
| 15A | Gasket Blower Transition (specify model) |
| 16A | Screw 8-32 x 1/4 RHCR |
| 17A | Gasket Flame Sensor |
| 18A | Flame Sensor |
| 19A | Transition Tube |
| 20A | Nut Hex Washer |
| 21A | Spark Rod |
| 22A | Spark Rod Gasket |
| 23A | Burner Mounting Gasket |
| 24A | Burner Tube |
| 25A | Burner Mounting Gasket |
| 26A | Burner Mounting Insert |
| 27A | Ground Wire |
| 28A | Gas Regulator Kit (Optional) |



Parts List

For models with Direct Spark Ignition

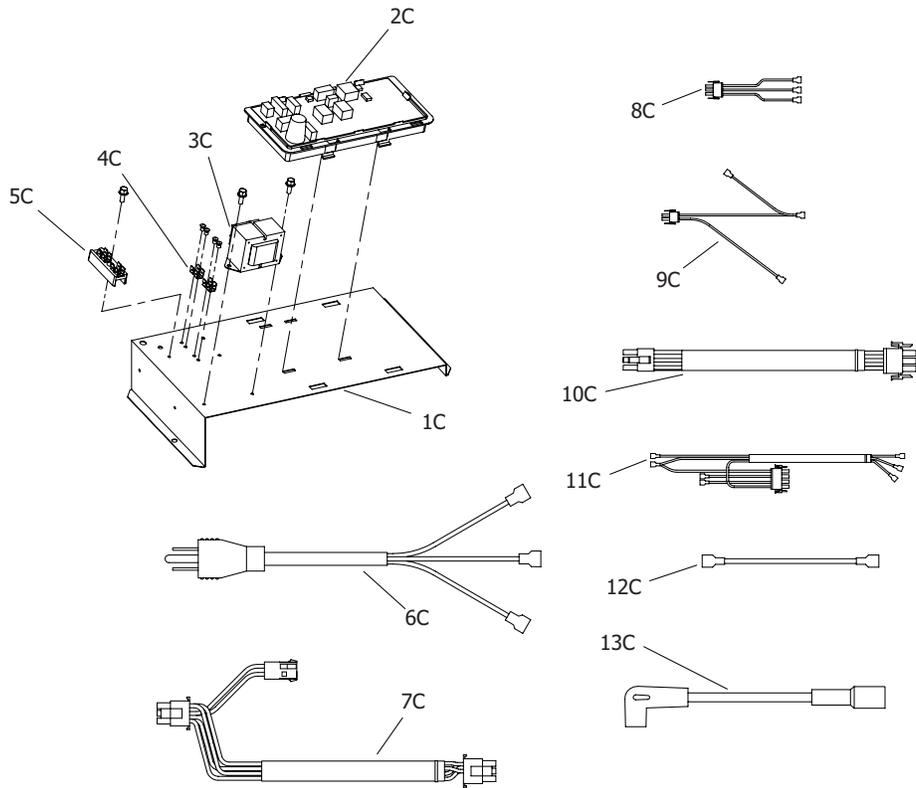

| | |
|-----|------------------------------------|
| 1C | Control Panel |
| 2C | Control Board |
| 3C | Transformer 120VAC x 24VAC x 40VA |
| 4C | Terminal |
| 5C | Terminal Strip |
| 6C | Power Cord |
| 7C | Controller Wire Harness |
| 8C | Transformer Primary Wire Harness |
| 9C | Transformer Secondary Wire Harness |
| 10C | Blower Wire Harness |
| 11C | Power Switch Wire Harness |
| 12C | Sensor Wire Harness |
| 13C | High Voltage Spark Cable |

Customer must specify complete model number and serial number when ordering service parts.



BRADFORD WHITE®

W A T E R H E A T E R S

Ambler, PA

For U.S. and Canada field service,
contact your professional installer or
local Bradford White sales representative.

Sales/800-523-2931
Fax/215-641-1670
Parts Fax/215-641-2180

Technical Support/800-334-3393
Fax/269-795-1089

Warranty/800-531-2111
Fax/269-795-1089

International:
Telephone/215-641-9400
Telefax/215-641-9750



BRADFORD WHITE-CANADA® INC.

Mississauga, ON

Sales/866-690-0961
905-238-0100

Fax/905-238-0105

Technical Support/800-334-3393

Email

parts@bradfordwhite.com
techserv@bradfordwhite.com

www.bradfordwhite.com