



27C

27T

54T2

Write purchase model number here for future reference  
Pour référence future, inscrivez ci-dessus le N° de modèle du produit acheté  
Escriba el número del modelo comprado aquí para referencia futura

## Please Leave This Instruction Sheet With The Installed Faucet

### Maintenance

When performing routine maintenance, do not void your warranty by installing non-genuine parts. Use only authorized parts that carry the Delta genuine parts logo. Important - After any maintenance, thoroughly flush the faucet as stated in the installation instructions.

- If faucet leaks from spout outlet or from under handle:  
SHUT OFF WATER SUPPLIES. Replace cartridge.
- If faucet exhibits very low flow:  
A) Remove and clean Aerator, or  
B) SHUT OFF WATER SUPPLIES. Clean cartridge of any debris.

### Care Instructions

Your Delta® faucet is designed and engineered in accordance with the highest quality and performance standards. With proper care, it will give you years of trouble free service. Care should be given to the cleaning of this product. Although its finish is extremely durable, it can be damaged by harsh abrasives or polish. To clean, simply wipe gently with a damp cloth and blot dry with a soft towel.

### Installation Instructions

Shut off water supplies.

- Position faucet on lavatory. Use silicone sealant between faucet and lavatory to prevent water from leaking beneath lavatory. From underneath the lavatory, secure the faucet with nuts and washers.
- MAKE CONNECTIONS TO WATER LINES. Use 1/2" I.P.S. faucet connections, or use the enclosed coupling nuts with 3/8" O.D. ball-nose risers.
- Important: After connections have been made, remove aerator. Turn handles to full on position. Turn on water supplies, check for leaks and let lines flush for one minute without moving faucet handle. This will remove debris from lines which can damage internal parts of faucet and create leaks. After flushing, shut off water at faucet and replace aerator.

## Veuillez laisser cette fiche d'instructions avec la robinetterie nouvellement installée

### Entretien

L'utilisation de pièces autres que des pièces d'origine au cours de l'entretien entraîne l'annulation de la garantie. N'utiliser que des pièces autorisées qui portent le logo Delta Genuine Parts. Important - Après un entretien quel qu'il soit, bien purger le robinet conformément aux instructions d'installation.

- Si le robinet fuit par le bec ou par le dessous de la poignée :  
COUPEZ L'EAU. Remplacez la cartouche.
- Si le débit du robinet est très faible :  
A) Enlevez l'aérateur et nettoyez-le, ou  
B) COUPEZ L'EAU, puis nettoyez la cartouche.

### Instructions de nettoyage

Votre robinet Delta® a été conçu pour satisfaire à des exigences rigoureuses de qualité et de rendement. Il vous donnera entière satisfaction pendant des années pour autant qu'il soit bien entretenu. Nettoyez-le avec soin. Même si son fini est extrêmement durable, il peut être abîmé par des produits fortement abrasifs ou des produits de polissage. Pour le nettoyer, il vous suffit de le frotter doucement avec un chiffon humide et le sécher à l'aide d'un chiffon doux.

### Instructions d'installation

Coupez l'eau.

- Placez le robinet sur le lavabo. Placez du composé d'étanchéité à la silicone entre le robinet et le lavabo pour empêcher les fuites d'eau sous le lavabo. Pardessus le lavabo, serrez les écrous contre les rondelles.
- Raccordez le robinet à la tuyauterie d'alimentation. Utilisez des raccords de robinet 1/2 po I.P.S. ou les écrous de raccordement et les tubes-raccords à nez arrondi 3/8 po D.E. fournis.
- Important : Après avoir raccordé la tuyauterie, retirez l'aérateur. Tournez la poignée en position de débit maximal. Rétablissez l'alimentation en eau. Vérifiez l'étanchéité de l'installation et laissez couler l'eau une minute sans bouger la poignée pour évacuer les saletés qui pourraient abîmer les éléments internes du robinet et rendre celui-ci non étanche. Fermez ensuite le robinet et remettez l'aérateur en place.

## Deje Esta Hoja De Instrucción Con La Llave Instalada

### Mantenimiento

Cuando lleve a cabo un servicio de mantenimiento rutinario, no anule su garantía instalando piezas que no son genuinas. Use solamente los repuestos autorizados que llevan el emblema de los repuestos genuinos Delta. Importante - Después de hacer cualquier mantenimiento, deje correr el agua a través de la llave por un minuto, como se indica en las instrucciones para la instalación.

- Si la llave de agua (grifo) tiene una filtración desde el tubo de salida o por debajo de la manija:  
CIERRE LOS SUMINISTROS DE AGUA. Reemplace el cartucho.
- Si la llave de agua muestra un flujo muy bajo:  
A) Quite y limpie el Aireador, o  
B) CIERRE LOS SUMINISTROS DE AGUA. Limpie, de cualquier escombros, el cartucho.

### Instrucciones Sobre el Cuidado

Su llave Delta® está diseñada y fabricada de acuerdo con las normas de calidad y rendimiento más altas. Con un cuidado apropiado, le dará años de servicio sin dificultades. Se debe tener cuidado con la limpieza de este producto. Aunque su acabado es extremadamente resistente, puede ser dañado por abrasivos o pulimentos ásperos. Para limpiarla, simplemente frote con un paño húmedo y séquela con una toalla suave.

### Instrucciones de Instalación

Cierre los suministros de agua.



- Coloque en sitio la llave de agua (grifo). Use sellador de silicona entre la llave de agua y el lavamanos para prevenir que se forme una filtración por debajo del lavamanos. Desde debajo del lavamanos fije la llave de agua con tuercas y arandelas.
- HAGA LAS CONEXIONES A LAS LÍNEAS DE AGUA. Use conexiones de llave de agua de 1/2" I.P.S., o use las tuercas de acoplamiento incluidas con tuberías verticales de punta redondeada de un D.E. de 3/8".
- Importante: Después que haya hecho las conexiones, quite el aireador. Gire la manija hasta la posición completamente abierta. Abra los suministros de agua, fíjese si hay filtraciones y deje que el agua corra por las líneas por un minuto sin mover la manija de la llave de agua (grifo). Esto eliminará escombros de las líneas que pueden dañar las partes internas de la llave de las líneas que filtraciones. Después de dejar correr el agua, cierre el agua a nivel de la llave de agua y reemplace el aireador.

|                                                                                                                                                                                                                                               |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 27C                                                                                                                                                                                                                                           |
| 27T                                                                                                                                                                                                                                           |
| 54T2                                                                                                                                                                                                                                          |
| <small>Write purchase model number here for future reference<br/>         Pour référence future, inscrivez ci-dessus le N° de modèle du produit acheté<br/>         Escriba el número del modelo comprado aquí para referencia futura</small> |

## WIDESPREAD FAUCET

| #  | PART #  | DESCRIPTION                                                                                                                                    | #   | PART #    | DESCRIPTION                                                                                                                                                           |
|----|---------|------------------------------------------------------------------------------------------------------------------------------------------------|-----|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1  | 060794A | 5 Fluted Handle with Screw, Red and Blue Index                                                                                                 | 14  | 063044A   | 8" Wallform Swing Spout Assembly Complete                                                                                                                             |
| 2  | 060022A | Handle Screws and Index Kit (includes short and long handle screws, red and blue index washers)                                                | 15  | 060052A   | "O"Rings (24/pkg)                                                                                                                                                     |
|    | 060145A | 11/16" Handle Screw for Handles 3, 5, 6, 17, 33, 34 & 35 (12/pkg)                                                                              | 16  | 063120A   | Escutcheon and Adapter for Swing Spouts                                                                                                                               |
|    | 060146A | 7/8" Handle Screw for Handle #1 (12/pkg)                                                                                                       |     | 063049A   | Escutcheon and adapter for Rigid/Swivel Spouts                                                                                                                        |
|    | 060148A | Red and Blue Index Package (12/pkg)                                                                                                            | 17  | 060865A   | 6" Wrist Handle with Screw, Red and Blue Index (1 of each)                                                                                                            |
|    | 060441A | No.3 Scrulox Drive Bit                                                                                                                         | 18  | 060467A   | Diverter Assembly                                                                                                                                                     |
|    | 060440A | No.3 Square Drive Bit                                                                                                                          | 19  | WP76005-1 | Spray Valve and Hose                                                                                                                                                  |
| 3  | 060543A | 4" Hooded Blade Handle with Screw, Red and Blue Indexes and Alignment Insert (1 of each)                                                       | 20  | RP6015    | Hose Guide                                                                                                                                                            |
|    | 063121A | Retrofit Package - Two 4" Hooded Blade Handles with Screws, Red and Blue Indexes, 2 Alignment Inserts, 1 RH and 1 LH CER-TECK® Cartridge       | 21  | 060060A   | RH Chrome Plated Brass TUF-TECK® Structure with Gasket and Renewable Seat (T series only)                                                                             |
| 4  | 060544A | Alignment Insert (12/pkg)                                                                                                                      |     | 060061A   | LH Chrome Plated brass TUF-TECK® Structure with Gasket and Renewable Seat (T series only)                                                                             |
| 5  | 060599A | 3" Hooded Lever Handle with Screw, Red and Blue Index and Alignment Insert (1 of each)                                                         | 22  | 060637A   | VR Laminar Outlet and Wrench with Agion® Antimicrobial (1.5 USGPM / 5.7 L/min)                                                                                        |
|    | 063107A | Retrofit Package - Two 3" Hooded Blade Handles with Screws, Red and Blue Indexes, 2 Alignment Inserts, 1 RH and 1 LH CER-TECK® cartridge       |     | 060688A   | Antimicrobial Laminar Flow Insert only (1.5 USGPM / 5.7 L/min) (12/pkg)                                                                                               |
| 6  | 060602A | 4" Blade Handle with Screw, Red and Blue Index and Alignment Insert (1 of each)                                                                | 23  | 060641A   | Flow Control Aerator (1.5 USGPM / 5.7 L/min)                                                                                                                          |
|    | 063108A | Retrofit Package - Two 4" Blade Handles with Screws, Sani-Guards, Red and Blue indexes, 2 Alignment Inserts, 1 RH and 1 LH CER-TECK® cartridge |     | 060689A   | Insert only (1.5 USGPM / 5.7 L/min) (12/pkg)                                                                                                                          |
| 7  | 060037A | Sani-Guards (2/pkg)                                                                                                                            | 24  | 060639A   | VR Flow Control Aerator and Wrench (1.5 USGPM / 5.7 L/min)                                                                                                            |
| 8  | 063000A | (RH) Right-hand CER-TECK® Cartridge (C series only)                                                                                            |     | 060689A   | Insert only (1.5 USGPM / 5.7 L/min) (12/pkg)                                                                                                                          |
|    | 063001A | (LH) Left-hand CER-TECK® Cartridge (C series only)                                                                                             | 25  | 060765A   | Wrench for VR Outlets                                                                                                                                                 |
|    | 063054A | Retrofit Package - 1 RH and 1 LH CER-TECK® Cartridge (C series only) (also see #9)                                                             | 26  | 060021A   | Structure Repair Parts Kit (includes 12 seat washers, 2 seat washer screws, 24 stem O-rings, 6 capnut O-rings, 18 capnut fibre gaskets, 4 renewable seats) (27T only) |
| 8a | 060553A | Structure "O"Ring Kit (24/pkg) (C series only)                                                                                                 | 26a | 060142A   | Structure "O"Ring Package (24/pkg) (T series only)                                                                                                                    |
| 8b | 060554A | CER-TECK® Bottom Seal (24/pkg) (C series only)                                                                                                 | 26b | 060243A   | Screw (6/pkg) (T series only)                                                                                                                                         |
| 9  | 063057A | CER-TECK® Widespread Seat (6/pkg) (C series only)                                                                                              | 26c | 060139A   | Seat Washer Package (6/pkg) (T series only)                                                                                                                           |
| 10 | 060445A | Deck Flange                                                                                                                                    | 26d | 060140A   | Stem "O"Ring Package (24/pkg) (T series only)                                                                                                                         |
| 11 | 063088A | Gooseneck Spout Complete with Outlet End A = 6.0"                                                                                              | 27  | 063031A   | Centre Body Assembly for "with spray models"                                                                                                                          |
|    | 060872A | Gooseneck Spout Complete with Smooth End A = 6.0"                                                                                              |     | 063032A   | Centre Body Assembly for "less spray models"                                                                                                                          |
|    | 060318A | Inlet Flow Control for inside base of Smooth End Goosenecks (6/pkg)                                                                            |     | 060426A   | Centre Body Assembly for third valve models                                                                                                                           |
| 12 | 060026A | Gooseneck Spout Repair Kit (includes retaining rings, "O"rings, swivel and rigid collars and spout nut)                                        | 28  | 060444A   | Locknut                                                                                                                                                               |
|    | 060143A | Spout "O"Ring Package (24/pkg)                                                                                                                 | 29  | 060362A   | Fibre Washer Kit (12/pkg)                                                                                                                                             |
|    | 060199A | Rigid and Swivel Collar Package                                                                                                                | 30  | 060364A   | Compression Sleeves and Coupling Nuts for 3/8 OD Tube (6/each)                                                                                                        |
|    | 060245A | Retaining Ring Kit (6/pkg)                                                                                                                     | 31  | 060367A   | Rubber Washer Kit (12/pkg)                                                                                                                                            |
|    | 060244A | Rigid Collar Kit (6/pkg)                                                                                                                       | 32  | 060446A   | Fibre Washer Kit (12/pkg)                                                                                                                                             |
|    | 060246A | Swivel Collar Kit (6/pkg)                                                                                                                      | 33  | 060947A   | (Hot and Cold Handles) 3" Hooded Lever Temperature Indicator Handles with Screw, Red and Blue Index and Alignment Insert                                              |
|    | 060373A | Spout Nut                                                                                                                                      | 34  | 060949A   | (Hot and Cold Handles) 4" Hooded Blade Temperature Indicator Handles with Screw, Red and Blue Index and Alignment Insert                                              |
| 13 | 060269A | 8" Tubular Swing Spout Assembly Complete                                                                                                       | 35  | 060948A   | (Hot and Cold Handles) 4" Blade Temperature Indicator Handles with Screw, Red and Blue Index and Alignment Insert                                                     |
|    |         |                                                                                                                                                | 36  | 060365A   | "O"Ring Kit (6 of ea/pkg)                                                                                                                                             |
|    |         |                                                                                                                                                | 37  | 063024A   | Tee Subassembly                                                                                                                                                       |
|    |         |                                                                                                                                                | 38  | 060443A   | Long Renewable Seat TUF-TECK® (T series only)                                                                                                                         |

**GOOSENECK SPOUT WITH OUTLET END  
BEC EN-COL-DE-CYGNE AVEC EXTRÉMITÉ  
SORTIE  
CHORRO CUELLO DE CISNE CON EL  
EXTREMO ENCHUFE**

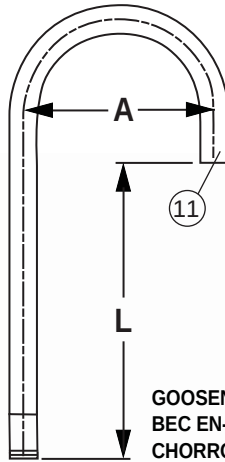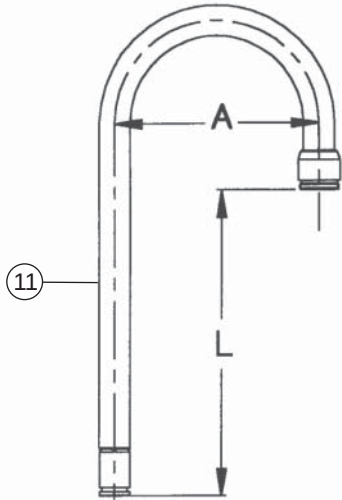


**GOOSENECK SPOUT WITH SMOOTH END  
BEC EN-COL-DE-CYGNE AVEC EXTRÉMITÉ LISSE  
CHORRO CUELLO DE CISNE CON EL EXTREMO LISO**

**063016A**

- Extension kit for 1-1/4" deck thickness on in-line swing spout models.
- Nécessaire de rallonge pour modèles avec bec orientable droit et comptoir d'une épaisseur de 1-1/4 po.
- Juego para extensión de la cubierta de 1-1/4" de espesor en los grifos de modelos giratorio en línea.

**063017A**

- Extension kit for 1-1/4" deck thickness for in-line gooseneck models.
- Nécessaire de rallonge pour modèles avec bec en col-de-cygne droit et comptoir d'une épaisseur de 1-1/4 po.
- Juego para extensión de la cubierta de 1-1/4" de espesor en los grifos de modelos cuello de cisne en línea.

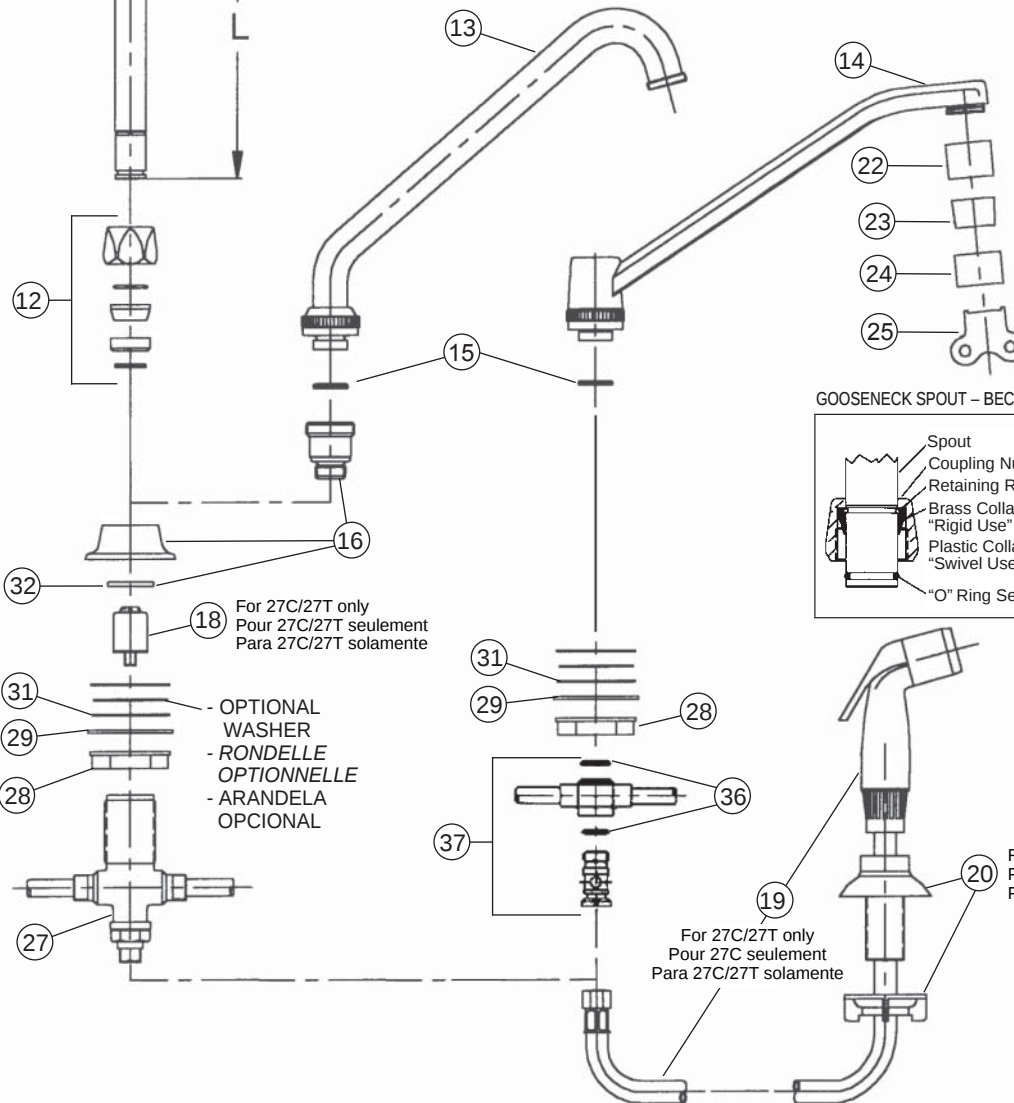

**GOOSENECK SPOUT - BEC EN COL-DE-CYGNE - TUBO DE SALIDA CUELLO DE GANSO**


|                                                         |                                                                                                     |                                                                      |
|---------------------------------------------------------|-----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|
| Spout                                                   | — Bec                                                                                               | —Tubo de salida                                                      |
| Coupling Nut                                            | — Écrou d'accouplement                                                                              | —Tuerca de acoplamiento                                              |
| Retaining Ring                                          | — Anneau de retenue                                                                                 | — Anillo de retención                                                |
| Brass Collar "Rigid Use" OR Plastic Collar "Swivel Use" | — Bague de laiton pour une installation fixe QU Bague en plastique pour une installation orientable | — Collar de bronce "Uso Rígido" O Collar de plástico "Uso giratorio" |
| "O" Ring Seal                                           | — Joint torique                                                                                     | — Anillo sellador "O"                                                |

# WIDESPREAD FAUCET

## ROBINET DE GRANDE ÉTENDUE

### CHORRO LAVATORIO/LAVAMANOS EXTENSIBLE

- Note: Alignment inserts are standard with handles where required.
- Remarque : Les inserts d'alignement sont offerts avec les manettes lorsque requis.
- Nota: Los insertos de alineación son estándar con manijas donde sean requeridas.


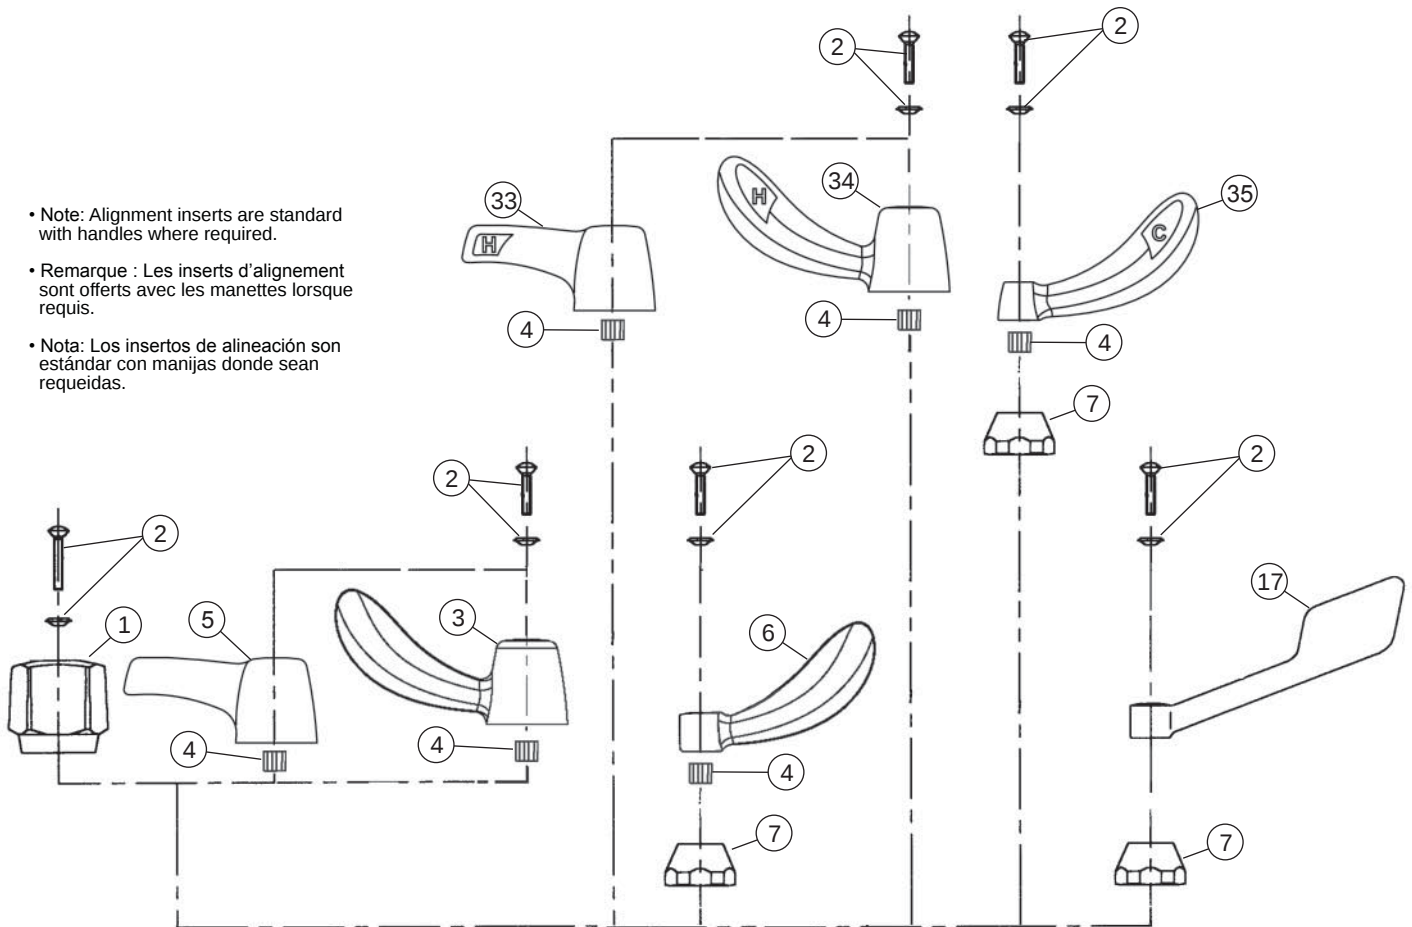


#### A) 060553A

- Structure "O" ring kit (24/pkg)
- Jeu de joints toriques pour cartouche d'obturation (24/pqt)
- Paquete de anillos "O" para el ensamble de la espiga (24/pcs)

#### B) 060554A

- CER-TECK® bottom seal (24/pkg)
- Joint torique de CER-TECK® (24/pqt)
- Sello inferior CER-TECK® (24/pcs)

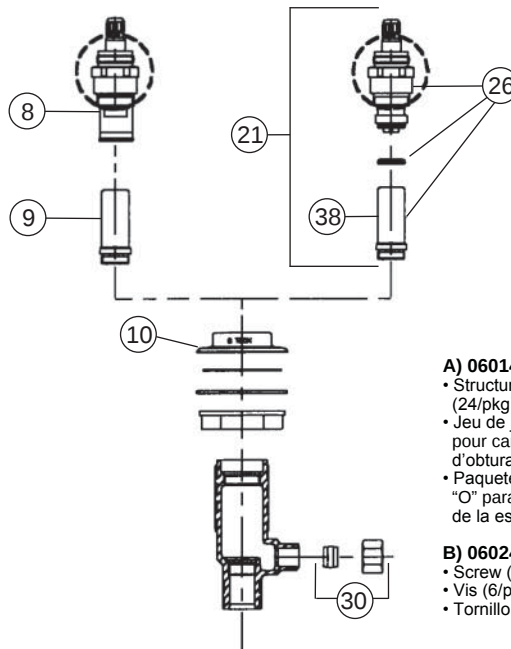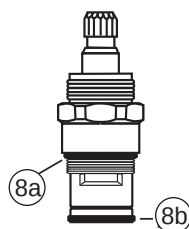

#### A) 060142A

- Structure "O" ring kit (24/pkg)
- Jeu de joints toriques pour cartouche d'obturation (24/pqt)
- Paquete de anillos "O" para el ensamble de la espiga (24/pcs)

#### B) 060243A


- Screw (6/pkg)
- Vis (6/pqt)
- Tornillo (6/pcs)

#### C) 060139A

- Seat washer kit (6/pkg)
- Jeu de rondelles de siège (6/pqt)
- Paquete de arandela de asiento (6/pcs)

#### D) 060140A

- Stem "O" ring kit (24/pkg)
- Jeu de joints toriques pour tige (24/pqt)
- Paquete de anillos "O" para la espiga (24/pcs)

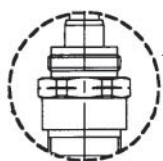

- Left Hand Identification Groove
- Rainure d'identification pour main gauche
- Ranura de identificación para la izquierda