IN-SINK-ERATOR

U.S.A.

MODEL BADGER 5-55 GSA

115v/60Hz.

START DATE 7-1-91

ENGINEER NUMBER 70359

REV

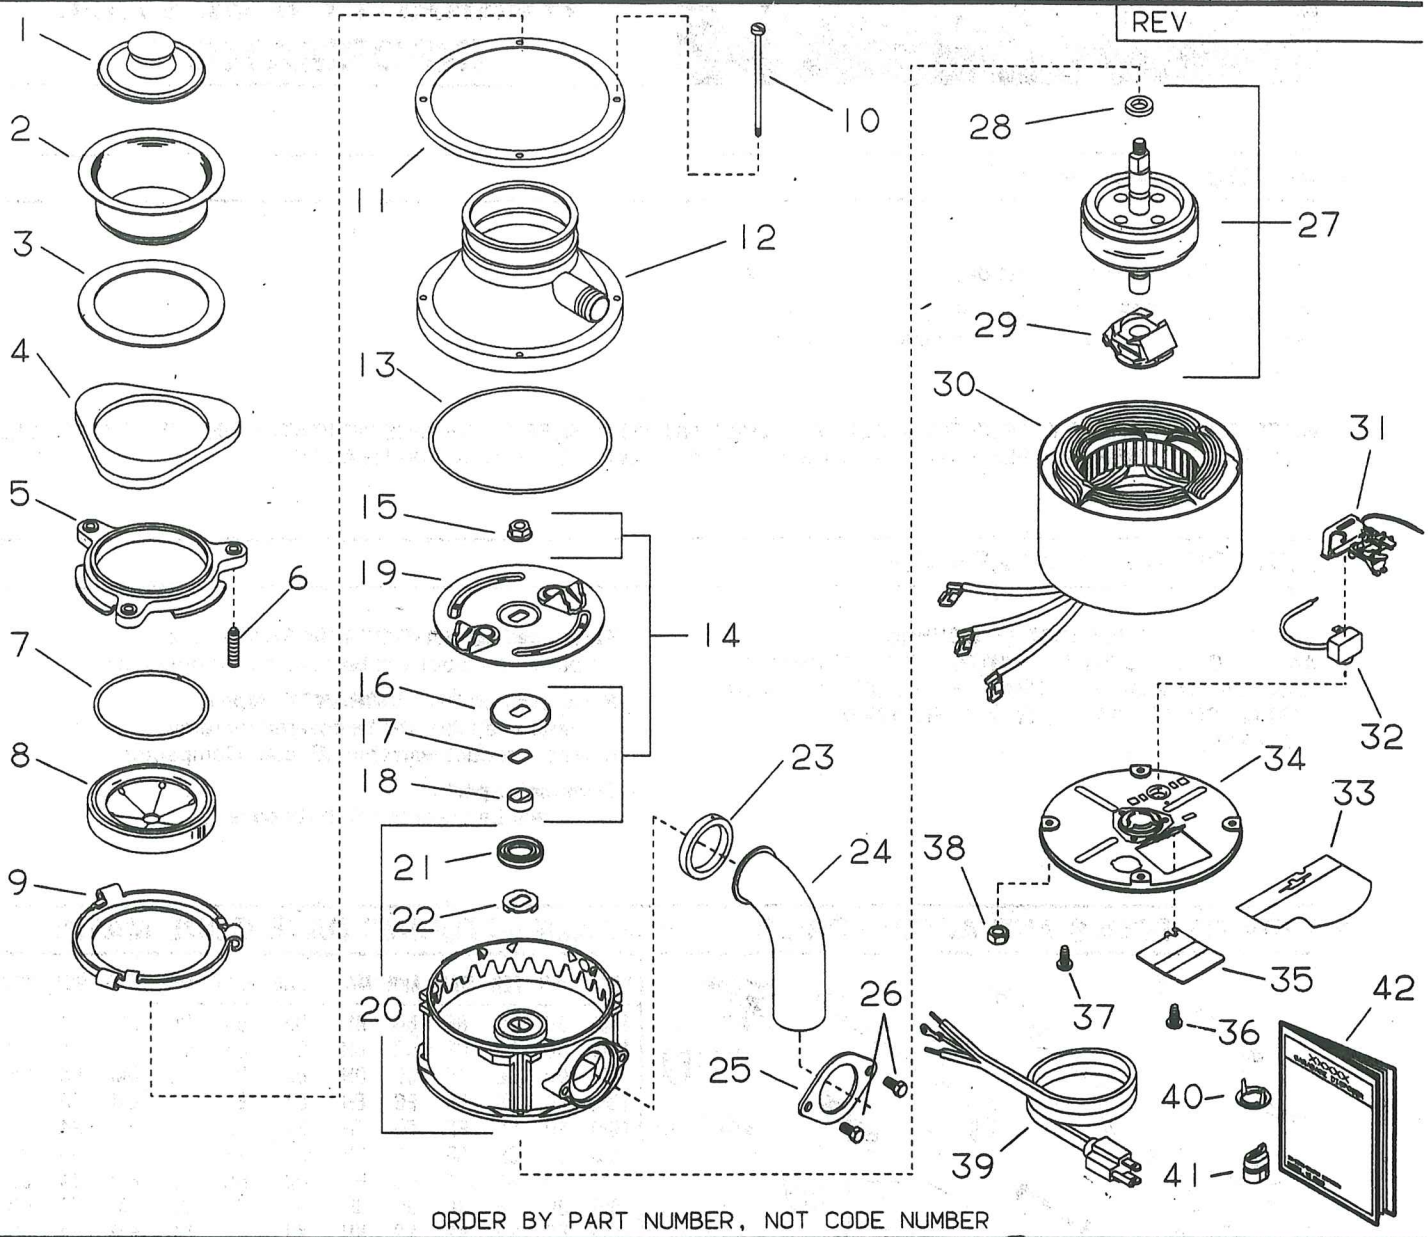

ORDER BY PART NUMBER, NOT CODE NUMBER

CODE NO.	PART NO.	NO. REQ.	DESCRIPTION
1	4310	1	STOPPER ASSEMBLY
2	5170-AC	1	FLANGE, STRAINER
3	1160	1	SEAL. SINK FLANGE
4	5150-E	1	FLANGE, BACKUP
5	5141	1	FLANGE, MOUNTING
6	5147	3	SCREW, BACKUP
7	5166	1	RING, RETAINING
8	1439	1	GASKET, MOUNTING
9	5298	1	FLANGE, BODY
10	2234-E	4	BOLT, THRU
11	9206	1	CLAMPING RING
12	9065	1	CONTAINER BODY
13	1473	1	O-RING
14	8583	1	SLEEVE & SEAL KIT (INCLUDES CODES 15 THRU 18)
15		1	NUT, FLANGE
16		1	SLINGER
17		1	SEAL
18		1	SLEEVE
19	3216-C	1	SHREDDER ASSEMBLY, ROTATING
20	8492	1	END BELL ASSEMBLY, UPPER (INCLUDES CODES 21 & 22)
21	4250	1	SEAL, WATER & OIL
22	2292	1	WASHER, THRUST
23	2592	1	GASKET, TAILPIPE

CODE NO.	PART NO.	NO. REQ.	DESCRIPTION
24	8219	1	TAILPIPE
25	2593-A	1	FLANGE, TAILPIPE
26	1468	2	SCREW, TAILPIPE
27	4071-B	1	ROTOR & SHAFT ASSEMBLY (INCLUDES CODES 28 & 29)
28	2642	1	WASHER
29	2467	1	CENTRIFUGAL ACTUATOR ASSEMBLY
30	3255-C	1	STATOR ASSEMBLY
31	3706-C	1	START SWITCH ASSEMBLY
32	2267-BY	1	OVERLOAD, PROTECTOR
33	4134	1	SHIELD, WIRE
34	9901	1	LOWER END FRAME ASSEMBLY (INCLUDES CODE 37)
35	3584	1	COVER, TERMINAL
36	11448	1	SCREW, TERMINAL COVER
37	2466-A	1	SCREW, GROUND
38	8032	4	NUT, HEX
42	9452	1	USE & CARE BOOKLET
--	2638-BE	1	INSTRUCTION ASSEMBLY (NOT SHOWN) (INCLUDES CODES 23 THRU 26)
			ACCESSORIES
39	2272	1	PLUG AND CORD ASSEMBLY
40	2134	1	RETAINER, BUSHING
41	2740	1	ADAPTOR, CORD