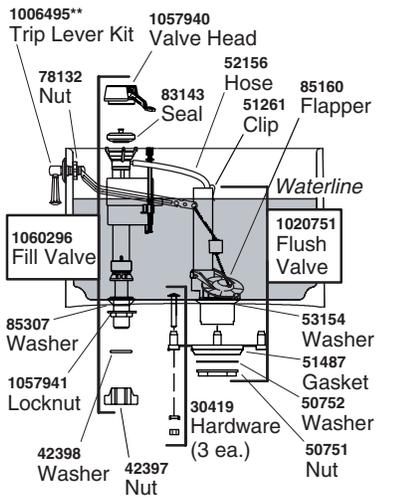


SYMPTOMS	CORRECTIVE ACTION	PARTIAL SERVICE PARTS
1. Poor flush.	A. Adjust tank water level to match the waterline. B. Fully open water supply shut-off valve. C. Clear obstruction in trapway, jet, or bowl rim holes. D. Clear obstruction in soil pipe or vent pipe.	 <p>1006495** Trip Lever Kit            1057940 Valve Head            78132 Nut            83143 Seal            52156 Hose            51261 Clip            85160 Flapper            Waterline            1060296 Fill Valve            1020751 Flush Valve            85307 Washer            1057941 Locknut            42398 Washer            42397 Nut            53154 Washer            51487 Gasket            50752 Washer            30419 Hardware (3 ea.)            50751 Nut</p> <p><b>**Finish/color code required.</b></p>
2. No flush.	A. Reconnect the flapper chain to the trip lever or flush valve. B. Adjust flapper chain assembly to remove excess slack.	
3. Fill valve turns on/off by itself without toilet being flushed, or runs allowing water to enter tank.	A. Adjust flapper chain for proper slack so flapper is not held off flush valve seat. B. Clean or replace flapper if flapper is worn, dirty, or misaligned with flush valve seat or flush valve seat is damaged. Replace flush valve seal or flush valve. C. Remove tank and tighten flush valve nut if flush valve gasket is leaking. Do not overtighten. If leakage continues, replace gasket. D. Clean fill valve seat/seat washer of debris, or replace piston/seat washer assembly. E. Replace fill valve if valve float sinks. F. Adjust tank water level if too high.	
4. Long tank fill cycle.	A. Fully open water supply shut-off valve. B. Clean fill valve inlet, valve head, or supply line. Flush lines.	
5. Noisy tank fill cycle.	A. Partially close the water supply shut-off valve if water pressure to the toilet is too high. Check toilet performance following any such adjustment. B. Remove dirt or obstruction in valve head, flush line.	
<b>IMPORTANT:</b> Use only genuine Kohler parts as shown to avoid property damage.		
<b>If unable to correct the problem, contact Customer Service: 1-800-4-KOHLER (USA), 1-800-964-5590 (Canada), or www.kohler.com.</b>		