

#### **CODE NUMBER**

3782686

#### DESCRIPTION

0.5 gpf, Polished Chrome Finish, Single Flush, Battery, Sloan® Exposed Sensor Urinal Flushometer.

#### DETAILS

Flush Volume: 0.5 gpf (1.9 Lpf)Finish: Polished Chrome (CP)

Power Type: BatteryBattery Life: 3 yearsValve: Diaphragm

• Valve Body Material: Semi-red Brass

• Fixture Type: Urinal

• Fixture Connection: Top spud

• Rough-In Dimension: 11 ½" (292mm)

Spud Coupling: <sup>3</sup>/<sub>4</sub>" (19mm)
Supply Pipe: <sup>3</sup>/<sub>4</sub>" (19mm)

#### **FEATURES**

- PERMEX high-efficiency synthetic rubber diaphragm with linear filtered bypass and Vortex Cleansing ActionTM
- Four (4) size C alkaline batteries included
- "Low Battery" Flashing LED
- "User in View" Flashing LED
- No External Volume Adjustment to Ensure Water Conservation
- True Mechanical Override Flush Button
- 72-Hour Sentinel Flush
- Sweat Solder Adapter w/Cover Tube and Cast Wall Flange with Set Screw
- Stop Seat and Vacuum Breaker Molded from PERMEX® Rubber Compound for Chloramine resistance
- 3/4" IPS screwdriver Bak-Chek® angle stop with vandal resistant stop cap



# **COMPLIANCES & CERTIFICATIONS**

















(ADA Compliant, BAA Compliant, BREEAM Water Credit, cUPC Certified, Green Globes Water Credit, LEED V4 Water Efficiency Credit, Satisfies LEED Credits, WaterSense Listed)

### RECOMMENDED SPECIFICATION

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME 112.19.2.

#### **ELECTRICAL SPECIFICATIONS**

• Battery Life: 3 years

# **VALVE OPERATING PRESSURE (FLOWING)**

15-80 PSI (103-552 kPa). Specific fixtures may require greater minimum flowing pressure - consult manufacturer requirements.

## **DOWNLOADS**

- Sloan Exposed Installation Instructions
- Sloan Exposed (Spanish) Installation Instructions
- EBV-500/550-A Installation Instructions
- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide
- Tail Piece Repair and Maintenance Guide
- Sloan Flushometer Repair and Maintenance Guide
- Additional Downloads

#### **NOTES**

All information contained within this document subject to change without notice.

Looking for other variations of the SLOAN 186 SFSM product? View the general spec sheet with all options.

Find a compatible urinal for this flushometer.

Sloan 10500 Seymour Ave, Franklin Park, IL 60131


Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com




Find a compatible water closet for this flushometer.

WaterSense compliant when used with a WaterSense compliant fixture

# **ROUGH-IN**

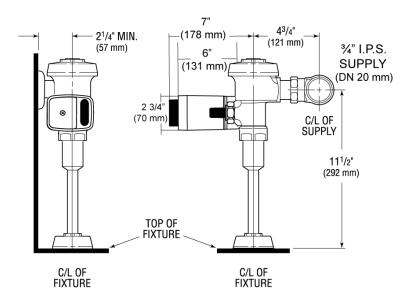

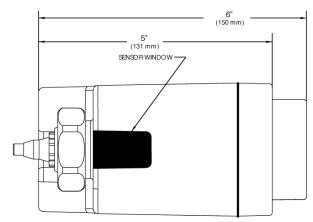

Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com